

MINIATURE COAX 20/220 SERIES, BNC BULKHEAD JACKS

BJT6-1 Shown

INSULATED BULKHEAD CABLE JACK
WRENCH CRIMP, REAR MOUNT
 Mounting Hole: D2.187
 GF-Ground filter version page 38

50Ω **BJT6-**
 75Ω **UBJT6-**

NON-INSULATED BULKHEAD JACK
FEED-THROUGH
 Mounting Hole: DD3.156

50Ω **BJ224**
 75Ω **UBJ224**

BJT7 Shown

INSULATED BULKHEAD JACK
FRONT MOUNT, SOLDER POT
 Mounting Hole: D3.147

50Ω **BJT7**
 75Ω **UBJT7**

INSULATED BULKHEAD JACK
RECESSED INSULATED ADAPTER (RIA)
FEED-THROUGH
 Mounting Hole: DD3.156

75Ω **UBJ224-RIA**

BJT9-1 Shown

BULKHEAD CABLE JACK
REAR MOUNT, WRENCH CRIMP
 Mounting Holes: D3.218 (D2.218-Cable Groups 6, 6E,51,52)

50Ω **BJT9-**
 75Ω **UBJT9-**

BULKHEAD JACK
FRONT MOUNT, SOLDER POT
 W/ SOLDER LUG
 Mounting Hole: D5.125

50Ω **BJ20**
 75Ω **UBJ20**

50Ω **BJ20SL**
 75Ω **UBJ20SL**

BJ23 Shown

BULKHEAD JACK NON-INSULATED
BJ23
 50Ω
 75Ω **UBJ23**
 Mounting Hole: D3.147

INSULATED BULKHEAD CABLE JACK
REAR MOUNT, SOLDER POT
 Mounting Hole: D3.147

50Ω **BJ21**
 75Ω **UBJ21**

INSULATED BULKHEAD JACK
FEED-THROUGH
 Mounting Hole: DD3.156

50Ω **BJ228**
 75Ω **UBJ228**

BULKHEAD JACK FEED-THROUGH NON-INSULATED
 Mounting Hole: DD3.100, (Hermetically sealed version available, call factory).

50Ω **BJ24**
 75Ω **UBJ24**

INSULATED BULKHEAD JACK FEED-THROUGH
 Mounting Hole: D3.156 (Hermetically sealed version available, call factory).
 GF-Ground Filter version available page 38

50Ω **BJ28**
 75Ω **UBJ28**

- Refers to Cable Group Table, see pages 91-133. "D" mounting holes are on page 54