

QUICK CONNECT SERIES



PLUG

**QC-50 OHM
SERIES**
032-0002-0001
032-0030-0001

**QC-70 OHM
SERIES**
032-0016-0001
032-0031-0001
032-0079-0001

**QC-93 OHM
SERIES**
032-0012-0001
032-0032-0001
032-0072-0001




JACK

**QC-50 OHM
SERIES**
031-0038-0001

**QC-70 OHM
SERIES**

**QC-93 OHM
SERIES**
031-0040-0001

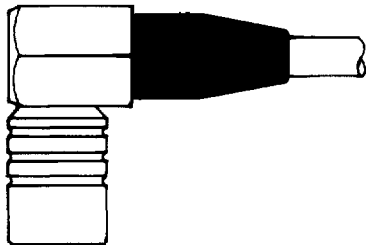


ANGLE PLUG

**QC-50 OHM
SERIES**
032-0026-0001

**QC-70 OHM
SERIES**
032-0027-0001

**QC-93 OHM
SERIES**
032-0020-0001
052-0228-0001

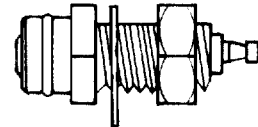

**FIG. 1
RECEPTACLE**

**QC-50 OHM
SERIES**
031-0057-0001

**QC-70 OHM
SERIES**
031-0057-0001

**QC-93 OHM
SERIES**
031-0058-0001
031-0085-0001




**FIG. 2
RECEPTACLE**

**QC-50 OHM
SERIES**
031-0004-0001
031-0005-0001
031-0006-0001
051-0586-0001

**QC-70 OHM
SERIES**
031-0004-0001
031-0005-0001
031-0006-0001
051-0586-0001

**QC-93 OHM
SERIES**
031-0020-0001
031-0021-0001


STRAIGHT PLUGS

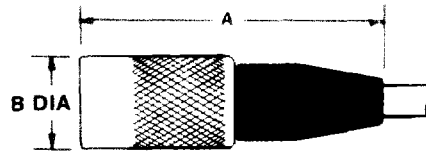

STRAIGHT PLUG

PART NO.	DIM. A	DIM. B	CABLE MAX JACKET	SPECIAL FEATURES	ASSEMBLY INSTRUCTIONS' BULLETIN NO.	ASSEMBLY TOOL
QC-50 SERIES (50 OHM)						
032-0002-0001	.820	.250	.093	Solderless Assembly	RF-ASMB-100	010-0007-0000
032-0030-0001	.820	.250	.093		RF-ASMB-97	010-0007-0000
QC-70 SERIES (70 OHM)						
032-0016-0001	.830	.250	.093	Solderless Assembly	RF-ASMB-100	010-0007-0000
032-0031-0001	.830	.250	.093		RF-ASMB-102	010-0007-0000
032-0079-0001	.840	.250	.108		RF-ASMB-97	010-0036-0000
QC-93 SERIES (93 OHM)						
032-0012-0001	.845	.312	.134	Solderless Assembly	RF-ASMB-100	010-0008-0000
032-0032-0001	.845	.312	.134		RF-ASMB-102	010-0008-0000
032-0072-0001	1.050	.312	.154	Mates with 031-0085-0001 Only	RF-ASMB-90	—

RIGHT ANGLE PLUGS

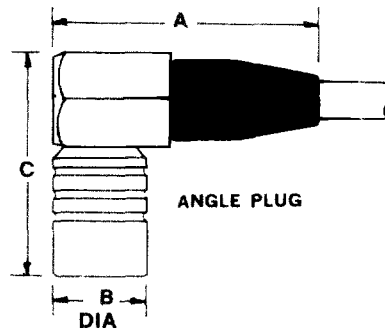


ANGLE PLUG

PART NO.	DIM. A	DIM. B	DIM. C	CABLE MAX JACKET	SPECIAL FEATURES	ASSEMBLY INSTRUCTIONS' BULLETIN NO.	ASSEMBLY TOOL
QC-50 SERIES (50 OHM)							
032-0026-0001	.735	.250	.605	.092		RF-ASMB-87	010-0016-0000
QC-70 SERIES (70 OHM)							
032-0027-0001	.745	.250	.605	.111		RF-ASMB-87	010-0016-0000
QC-93 SERIES (93 OHM)							
032-0020-0001	.745	.312	.635	.134		RF-ASMB-87	010-0017-0000
052-0228-0001	.745	.312	.720	.155	Mates with 031-0085-0001 Only	RF-ASMB-87	010-0017-0000


* Assembly instructions begin on page 44.

JACKS

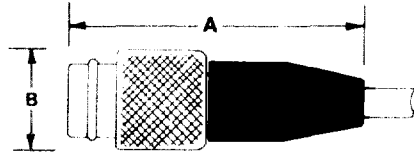

PART NO.	DIM. A	DIM. B	CABLE MAX JACKET	SPECIAL FEATURES	ASSEMBLY INSTRUCTIONS' BULLETIN NO.	ASSEMBLY TOOL
QC-50 SERIES (50 OHM)						
031-0038-0001	.750	.250	.093		RF-ASMB-104	010-0007-0000
QC-93 SERIES (93 OHM)						
031-0040-0001	.760	.320	.134		RF-ASMB-103	010-1009-0000

RECEPTACLES

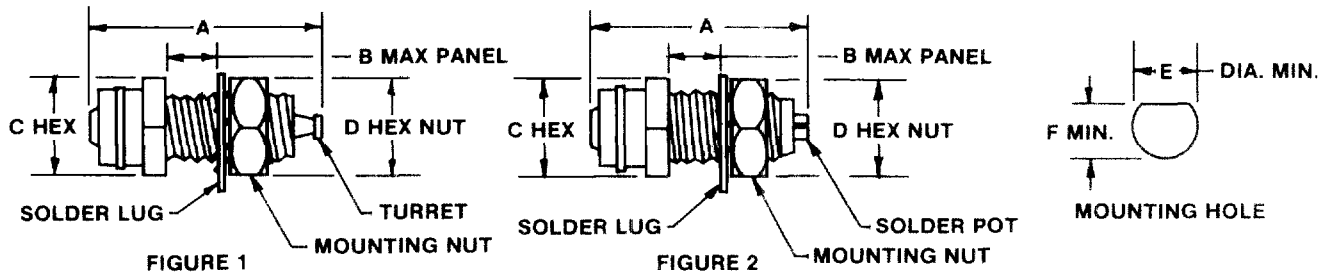

PART NO.	FIG.	DIM. A	DIM. B	DIM. C	DIM. D	DIM. E	DIM. F	SPECIAL FEATURES
QC-50 SERIES (50 OHM) & QC-70 SERIES (70 OHM)								
031-0004-0001	2	.555	.095	.250	.250	.191	—	No Mounting Flat
031-0005-0001	2	.555	.165	.250	.250	.191	—	No Mounting Flat
031-0006-0001	2	.250	—	.250	—	.190-32 Thd	—	No Nut or Solder Lug. Threads into Panel
031-0057-0001	1	.605	.165	.250	.250	.191	.173	
051-0586-0001	2	.555	.165	.250	.250	.191	—	No Mounting Flat, Split Solder Lug
QC-93 SERIES (93 OHM)								
031-0020-0001	2	.555	.095	.312	.312	.251	—	No Mounting Flat
031-0021-0001	2	.555	.165	.312	.312	.251	—	No Mounting Flat
031-0058-0001	1	.605	.160	.312	.312	.251	.232	
031-0085-0001	1	.715	.165	.312	.312	.251	—	No Mounting flat, Mates with 032-0072-0001 & 052-0228-0001 Only

Assembly instructions begin on page 44