

MINIATURE COAX 20/220 SERIES, BNC BULKHEAD JACKS

BJ26-1 Shown

INSULATED BULKHEAD CABLE JACK
WRENCH CRIMP, REAR MOUNT
 Mounting Hole: D2.187
 GF-Ground filter version page 31.

50Ω	BJ26-
75Ω	UBJ26-

BJ226-001 Shown

INSULATED BULKHEAD CABLE JACK
REAR MOUNT, TOOL CRIMP
 Mounting Hole: D2.187, GF-Ground filter version page 31.

50Ω	BJ226-
75Ω	UBJ226-

BJ27 Shown

INSULATED BULKHEAD JACK
FRONT MOUNT, SOLDER POT
 Mounting Hole: D3.147

50Ω	BJ27
75Ω	UBJ27

BJ20 Shown

BULKHEAD JACK
FRONT MOUNT, SOLDER POT
 W/ SOLDER LUG
 Mounting Hole: D5.125

50Ω	BJ20
75Ω	UBJ20
50Ω	BJ20SL
75Ω	UBJ20SL

BJ29-1 Shown

BULKHEAD CABLE JACK
REAR MOUNT, WRENCH CRIMP
 Mounting Holes: D3.218 (D2.218-Cable Groups 6, 6E, 51, 52)

50Ω	BJ29-
75Ω	UBJ29-

BJ229-001 Shown

BULKHEAD CABLE JACK
REAR MOUNT, TOOL CRIMP
 Mounting Hole: D3.218

50Ω	BJ229-
75Ω	UBJ229-

BJ23 Shown

BULKHEAD JACK NON-INSULATED
 50Ω **BJ23**
 75Ω **UBJ23**
 Mounting Hole: D3.147

INSULATED BULKHEAD CABLE JACK
REAR MOUNT, SOLDER POT
 Mounting Hole: D3.147

50Ω	BJ21
75Ω	UBJ21

BJ24F Shown

BNC DOUBLE JACK WITH MOUNTING FLANGE
 75Ω **UBJ24F**
 (Comes with Four 6mm Long Pan Head Screws)

BJ24 Shown

BULKHEAD JACK FEED-THROUGH NON-INSULATED
 50Ω **BJ24**
 75Ω **UBJ24**
 Mounting Hole: DD3.100, (Hermetically sealed version available, call factory).

BJ28 Shown

INSULATED BULKHEAD JACK FEED-THROUGH
 50Ω **BJ28**
 75Ω **UBJ28**
 Mounting Hole: D3.156 (Hermetically sealed version available, call factory).
 GF-Ground Filter version available page 31.

- Refers to Cable Group Table, see pages 68-88. "D" mounting holes are on page 45.