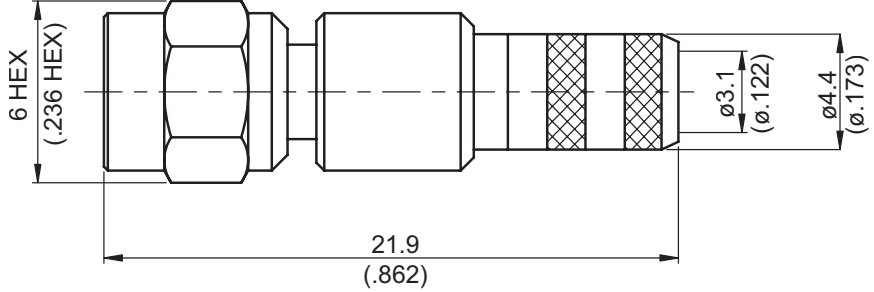


SMC3100-0223	SMC Plug Crimp	50Ω																					
																							
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 20%;">Parts</th> <th style="width: 20%;">Material</th> <th style="width: 60%;">Plating (Micro-inch)</th> </tr> </thead> <tbody> <tr> <td>Ferrule</td> <td>Brass</td> <td>Gold 5 Over Nickel 50 Over Copper 50</td> </tr> <tr> <td>Contact Pin</td> <td>Phosphor Bronze</td> <td>Gold 20 Over Nickel 50 Over Copper 50</td> </tr> <tr> <td>Barrel</td> <td>Brass</td> <td>Gold 5 Over Nickel 50 Over Copper 50</td> </tr> <tr> <td>Insulator</td> <td>Teflon</td> <td></td> </tr> <tr> <td>Body</td> <td>Brass</td> <td>Gold 5 Over Nickel 50 Over Copper 50</td> </tr> <tr> <td>Coupling Nut</td> <td>Brass</td> <td>Gold 5 Over Nickel 50 Over Copper 50</td> </tr> </tbody> </table>			Parts	Material	Plating (Micro-inch)	Ferrule	Brass	Gold 5 Over Nickel 50 Over Copper 50	Contact Pin	Phosphor Bronze	Gold 20 Over Nickel 50 Over Copper 50	Barrel	Brass	Gold 5 Over Nickel 50 Over Copper 50	Insulator	Teflon		Body	Brass	Gold 5 Over Nickel 50 Over Copper 50	Coupling Nut	Brass	Gold 5 Over Nickel 50 Over Copper 50
Parts	Material	Plating (Micro-inch)																					
Ferrule	Brass	Gold 5 Over Nickel 50 Over Copper 50																					
Contact Pin	Phosphor Bronze	Gold 20 Over Nickel 50 Over Copper 50																					
Barrel	Brass	Gold 5 Over Nickel 50 Over Copper 50																					
Insulator	Teflon																						
Body	Brass	Gold 5 Over Nickel 50 Over Copper 50																					
Coupling Nut	Brass	Gold 5 Over Nickel 50 Over Copper 50																					
Weight: Suitable Cables: RG223																							


This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

SMC3100-0223

JYE BAO CO., LTD.

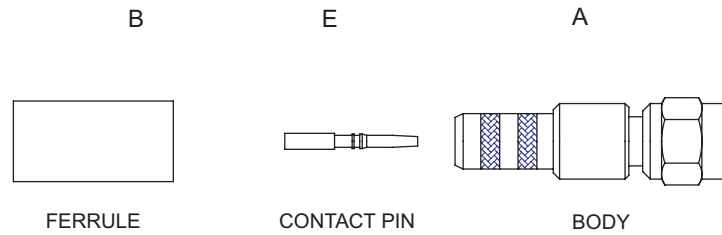

* TOOLS AND FIXTURES ARE REFERENCE ON
PAGE 306 OF JYEBAO'S 2005 CATALOG.

DIAGRAM	ASSEMBLY INSTRUCTION
	<p>Step 1: STRIP AS SHOWN .</p>
	<p>Step 2: SLIDE FERRULE 'B' OVER CABLE. Step 3: PUT PIN 'E' ON CENTER CONDUCTOR AND CRIMP IN "Y".</p>
	<p>Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR 'A' IN PLACE.</p>
	<p>Step 5: SLIDE FERRULE 'A' TOWARDS THE CONNECTOR AND CRIMP.</p>

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.