

This part number complies with RoHS.
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

7/16-8305-0250

JYE BAO CO., LTD.

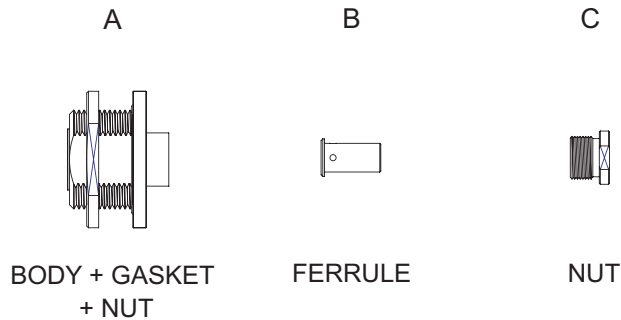


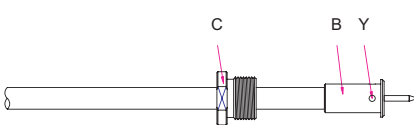
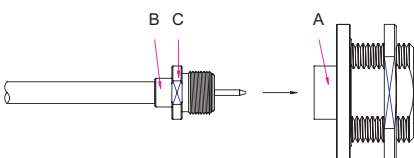


DIAGRAM	ASSEMBLY INSTRUCTION
	Step 1: STRIP AS SHOWN .
	Step 2: SHARPEN CENTER CONDUCTOR TIP.
	Step 3: SLIDE NUT " C " OVER CABLE . Step 4: PUT FERRULE " B " ON CENTER CONDUCTOR AND SOLDER IN " Y " . Step 5: STRIP EXCESS TEFLON AFTER SOLDERING .
	Step 6: FINALLY SCREW " C " ON THE CONNECTOR BODY " A ".

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.