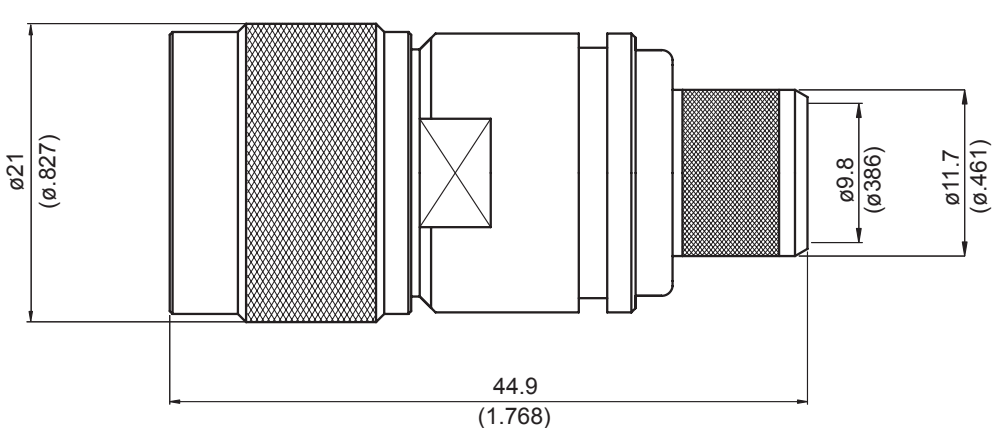


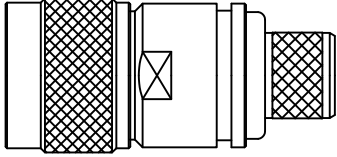



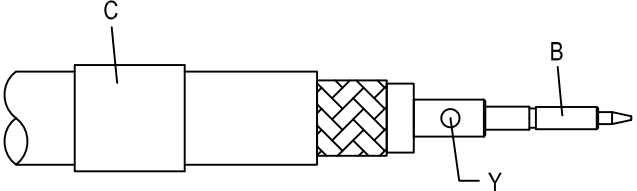
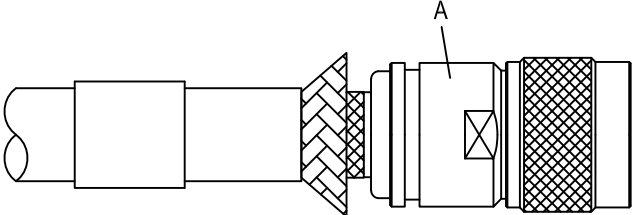
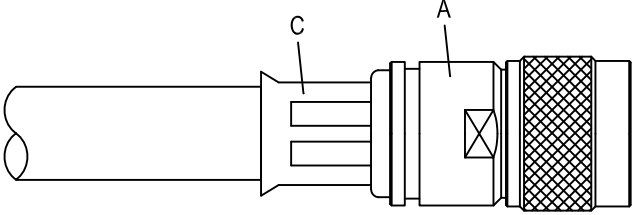
N3100-L500		N plug crimp for JBY500,LMR500 50Ω	
			
Parts	Material	Plating(Micro-inch)	
Barrel	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	
Insulator	Teflon		
Retainer Ring	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	
Gasket	Silicon		
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	
Contact Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	
Weight: 59.53 g			
Suitable Cables: LMR500, JBY500			

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N3100-L500	DATE	2014/04/29	REV	—
<p style="text-align: center;">A</p>  <p style="text-align: center;">BODY</p>	<p style="text-align: center;">B</p>  <p style="text-align: center;">CONTACT PIN</p>	<p style="text-align: center;">C</p>  <p style="text-align: center;">FERRULE</p>		
DIAGRAM	ASSEMBLY INSTRUCTION			
	<p>Step 1: STRIP AS SHOWN.</p>			
	<p>Step 2: SLIDE FERRULE " C " OVER CABLE. Step 3: PUT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y ".</p>			
	<p>Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR " A " IN PLACE.</p>			
	<p>Step 5: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP. (USE 13.5mm/0.531inch HEX SECTION OF INSERT-FB)</p>			
<p>This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.</p>				
APPROVED	CHECKED	DRAWING		<i>Albert</i>