




C8205B-0214

C Jack Clamp For Bulkhead 50Ω

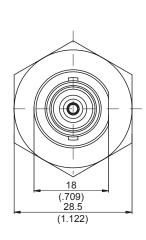

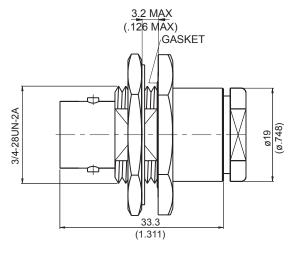

MOUNTING HOLE:

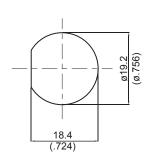

| Parts | Material | Plating(Micro-inch) |
|-------------|-----------------|--|
| Hex Nut | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Lock Washer | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Nut | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Gasket | Silicone | |
| Braid Clamp | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Washer | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Contact Pin | Phosphor Bronze | Gold 5 Over Nickel 50 Over Copper 50 |
| Insulator | Teflon | |
| Body | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |

Weight: 62.01 g

Suitable Cables: RG214

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.



CABLE ASSEMBLY INSTRUCTION C8205B-0214 JYE BAO CO., LTD. В С D E F Н Α BODY + GASKET + CONTACT INSULATOR WASHER CLAMP GASKET WASHER NUT PIN WASHER + HEX NUT DIAGRAM ASSEMBLY INSTRUCTION 8.6 [.339] Step 1: STRIP AS SHOWN. Step 2: SLIDE BRAID CLAMP " E " ,GASKET " F " , WASHER " G " AND NUT " H " OVER CABLE . Step 3: WRAP THE BRAIDING OVER " E ". Step 4: STRIP AS SHOWN. Step 5: SLIDE PREPARED CABLE INTO WASHER " D " AND INSULATOR " C ". Step 6: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN "Y". HGFEDCB Step 7: FINALLY SCREW " H " ON THE CONNECTOR BODY " A ".

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.