


Kabelschuhe zum Schweißen


Welding tabs

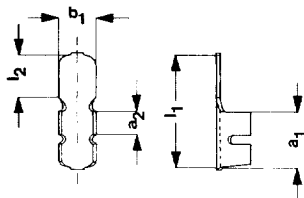


Typ 1




Typ 2

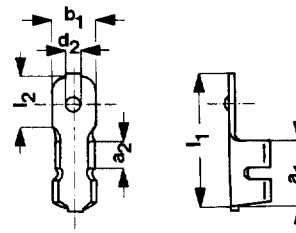

Typ 3

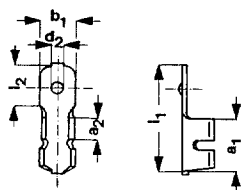

Typ 4

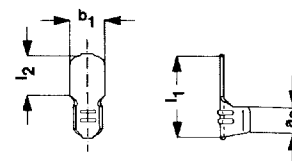


Typ	Nenn- quer- schnitt qmm	a1	a2	b1	d2	L1	L2	Mat- dicke	Form E=Einzel B=Band	Teile-Nr.	Werkstoff	Oberfläche	Verb- vor- schub	Fuß- note
1	0,37 - 0,5	6,00	2,50	4,00		12,00	4,50	0,50	B	26197.411.031	Stahl	Ni 3	L	*1
2	0,37 - 0,5	6,00	2,50	4,00	1,50	12,00	4,50	0,50	B	25496.411.031	Stahl	Ni 3	L	*1
3	0,37 - 0,5	6,00	2,50	4,00	1,50	12,00	4,50	0,50	B	25374.123.011	CuZn	Sn 3	L	*1
									B	25374.411.031	Stahl	Ni 3	L	*1
4	0,5 - 1		2,50	4,00		9,00	4,50	0,50	B	25127.123.009	CuZn		L	
									B	25127.411.031	Stahl	Ni 3		
									E	05127.123.003	CuZn			
									E	05127.411.031	Stahl	Ni 3		

*1 Bis 1 qmm


*1 Up to 1 qmm

37000,001


Typ 1

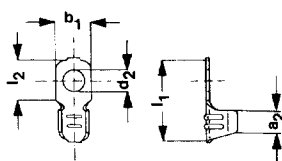

Typ 2

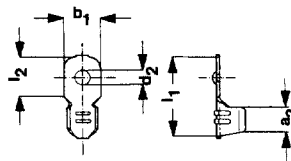

Typ 3

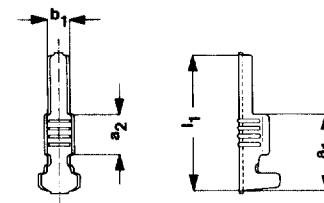

Typ	Nenn- quer- schnitt qmm	a1	a2	b1	d2	L1	L2	Mat- dicke	Form E=Einzel B=Band	Teile-Nr.	Werkstoff	Oberfläche	Verb- vor- schub
1	0,5 - 1		2,50	4,00	2,20	9,00	4,50	0,50	B	25180.123.009	CuZn		L
2	0,5 - 1		2,50	4,00	1,50	9,00	4,50	0,50	B	25171.411.031	Stahl	Ni 3	L
3	0,75 - 1,5	8,50	4,50	2,40		15,00		0,38	B	25749.411.031	Stahl	Ni 3	L

37000,002