



IC SOCKETS

Press Fit Tail

- Press fit tail for solderless mount into PCB.

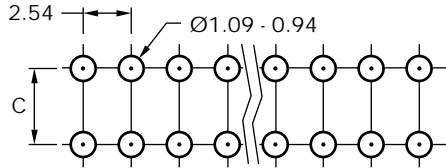

PRESS FIT TAIL

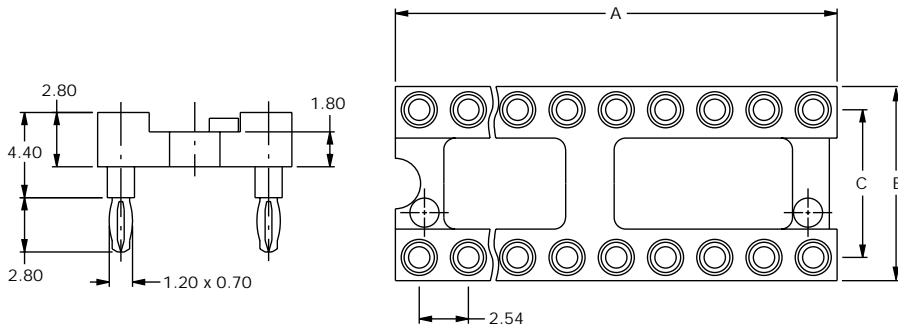

No. of Contacts	Outline	A	B	C	Order Code
8		10.1	10.02	7.62	D2608-01
8		10.1	10.02	7.62	D2608-T6
14		17.1	10.02	7.62	D2614-01
14		17.1	10.02	7.62	D2614-T6
16		20.3	10.02	7.62	D2616-01
16		20.3	10.02	7.62	D2616-T6
20		25.3	10.02	7.62	D2620-01
20		25.3	10.02	7.62	D2620-T6
24		30.4	17.64	15.24	D2624-01
24		30.4	17.64	15.24	D2624-T6
28		35.5	17.64	15.24	D2628-01
28		35.5	17.64	15.24	D2628-T6
32		40.6	17.64	15.24	D2632-01
32		40.6	17.64	15.24	D2632-T6
40		50.6	17.64	15.24	D2640-01
40		50.6	17.64	15.24	D2640-T6