


FME3105WD-0316

FME PLUG CRIMP FOR BULKHEAD 50Ω

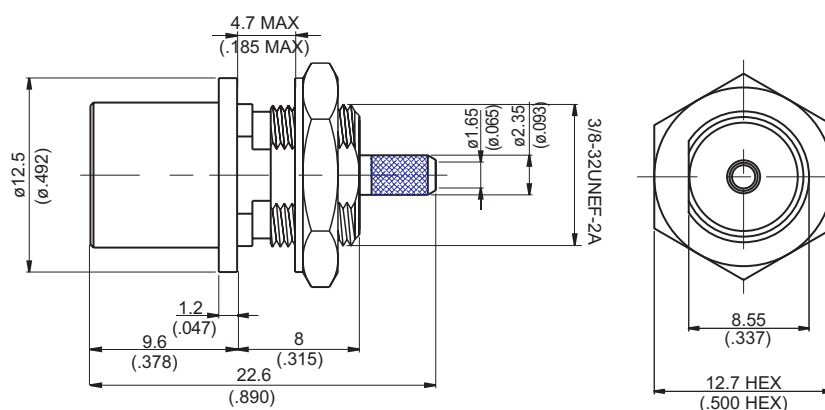

Parts	Material	Plating (Micro-inch)
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Lock Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Brass	Gold 3 Over Nickel 50 Over Copper 50
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

Suitable Cables: RD316,RG316D-E,RD316-FEP

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

FME3105WD-0316

JYE BAO CO., LTD.

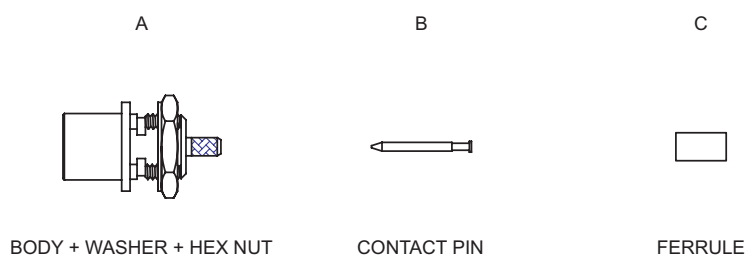


DIAGRAM	ASSEMBLY INSTRUCTION
	Step 1: STRIP AS SHOWN .
	Step 2: SLIDE FERRULE " C " OVER CABLE . Step 3: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND CRIMP IN " Y " .
	Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR " A " IN PLACE .
	Step 5: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP .

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.