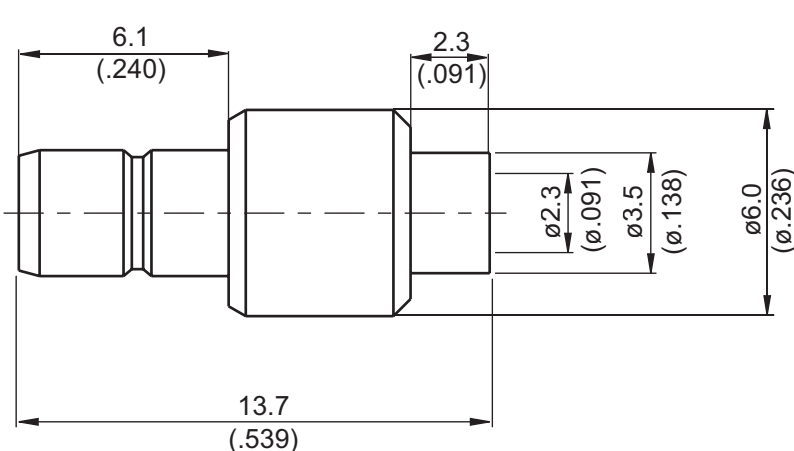


SMB8300-0085	SMB Jack Solder	50Ω															
																	
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 20%;">Parts</th> <th style="width: 20%;">Material</th> <th style="width: 60%;">Plating (Micro-inch)</th> </tr> </thead> <tbody> <tr> <td>Contact Pin</td> <td>Brass</td> <td>Gold 20 Over Nickel 50 Over Copper 50</td> </tr> <tr> <td>Insulator</td> <td>Teflon</td> <td></td> </tr> <tr> <td>Barrel</td> <td>Brass</td> <td>Gold 5 Over Nickel 50 Over Copper 50</td> </tr> <tr> <td>Body</td> <td>Brass</td> <td>Gold 5 Over Nickel 50 Over Copper 50</td> </tr> </tbody> </table>			Parts	Material	Plating (Micro-inch)	Contact Pin	Brass	Gold 20 Over Nickel 50 Over Copper 50	Insulator	Teflon		Barrel	Brass	Gold 5 Over Nickel 50 Over Copper 50	Body	Brass	Gold 5 Over Nickel 50 Over Copper 50
Parts	Material	Plating (Micro-inch)															
Contact Pin	Brass	Gold 20 Over Nickel 50 Over Copper 50															
Insulator	Teflon																
Barrel	Brass	Gold 5 Over Nickel 50 Over Copper 50															
Body	Brass	Gold 5 Over Nickel 50 Over Copper 50															
Weight: 1.36 g Suitable Cables: Semi-rigid.085																	


This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

SMB8300-0085

JYE BAO CO., LTD.

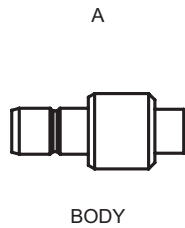


DIAGRAM


ASSEMBLY INSTRUCTION



Step 1: STRIP AS SHOWN .

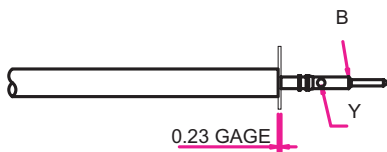

Step 2: PUT 0.23 MM GAGE IN PLACE, INSERT CABLE'S CENTER CONDUCTOR INTO CENTER PIN " B " AND SOLDER IN " Y " .

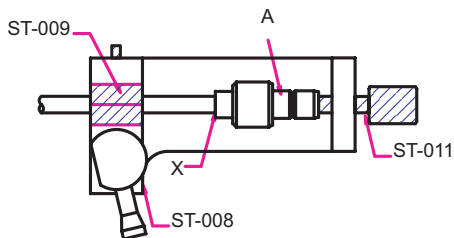

Step 3: INSERT PREPARED CABLE INTO CONNECTOR BODY " A " AND USE SOLDERING FIXTURE " ST-008 " , INSERT TOOL " ST-009 " AND LOCATOR TOOL " ST-011 " TO FIX THE CONNECTOR. SOLDER IN " X " .

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.