


MINIATURE COAX THREADED 40/240 SERIES, TNC BULKHEAD JACKS

BJ41 Shown

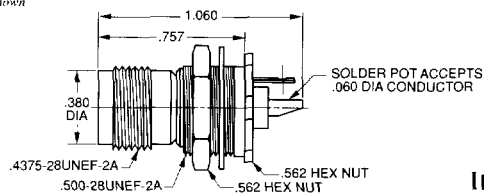


INSULATED BULKHEAD JACK

REAR MOUNT, SOLDER POT

50Ω **BJ41**
75Ω **UBJ41**

Mounting Hole: D3.147


BJ40 Shown

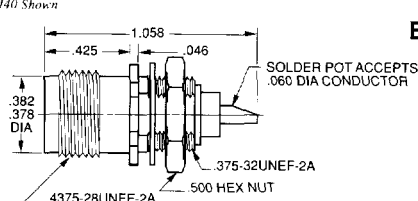

BULKHEAD JACK SOLDER POT

50Ω **BJ40**
75Ω **UBJ40**
W/ SOLDER LUG
50Ω **BJ40SL**
75Ω **UBJ40SL**
Mounting Hole: D5.125

BJ46-1 Shown

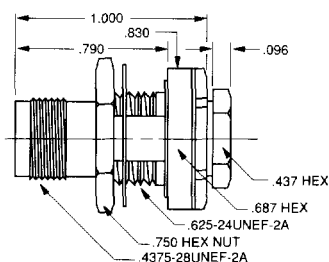

INSULATED BULKHEAD JACK


REAR MOUNT, WRENCH CRIMP

50Ω **BJ46-1**
75Ω **UBJ46-1**

Mounting Hole: D2.187

GF-Ground filter version page 31.

BJ47 Shown

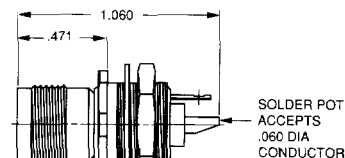


INSULATED BULKHEAD JACK FRONT MOUNT, SOLDER POT

50Ω **BJ47**
75Ω **UBJ47**

Mounting Hole: D3.147


BJ49-1 Shown

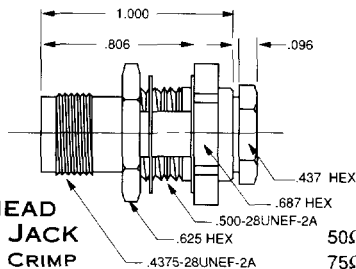

BULKHEAD CABLE JACK WRENCH CRIMP

50Ω **BJ49-1**
75Ω **UBJ49-1**

Mounting Hole: D3.218 / D2.218 (Cable Groups 6, 6E, 51, 52)

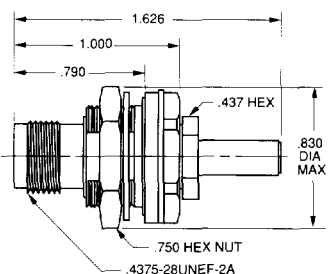


BJ246-001 Shown

INSULATED BULKHEAD JACK REAR MOUNT, TOOL CRIMP

50Ω **BJ246-001**
75Ω **UBJ246-001**

Mounting Hole: D2.187

GF-Ground filter version pg 31.

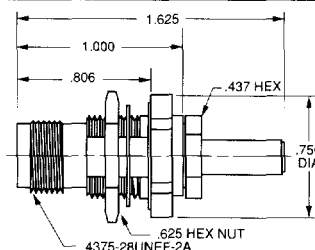

BULKHEAD CABLE JACK TOOL CRIMP


50Ω **BJ249-1**

Mounting Hole: D3.218

D2.218 (Cable Groups 6, 6E, 51, 52)

MODEL NO.	LTR CODE	OHM	A DIM	B DIM	C DIM	D DIM	E DIM
CBBJR46	-	50	.046	.24	.090	.050	.0625
UCBBJR46	-	75	.029	.24	.090	.050	.0625
CBBJR46A	A	50	.046	.34	.090	.058	.070
UCBBJR46A	A	75	.029	.34	.090	.058	.070

CBBJR46 Shown

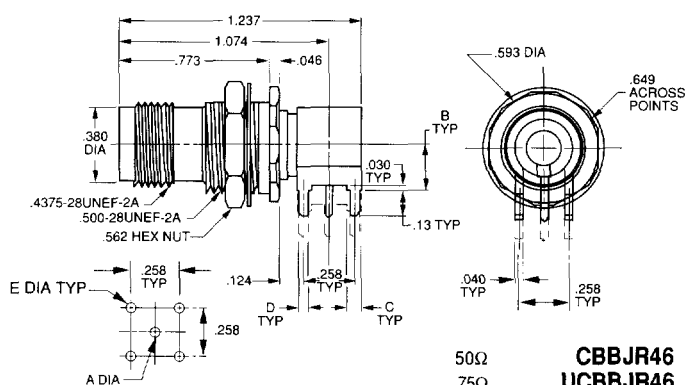


INSULATED CIRCUIT BOARD JACK RIGHT ANGLE

"A" refers to tall versions

50Ω **CBBJR46**
75Ω **UCBBJR46**
50Ω **CBBJR46A**
75Ω **UCBBJR46A**
Mounting Hole: D3.156

MODEL NO.	LTR CODE	OHM	A DIM	B DIM	C DIM	D DIM	E DIM
CBBJR49	-	50	.046	.24	.090	.050	.0625
UCBBJR49	-	75	.029	.24	.090	.050	.0625
CBBJR49A	A	50	.046	.34	.090	.058	.070
UCBBJR49A	A	75	.029	.34	.090	.058	.070

CBBJR49 SHOWN

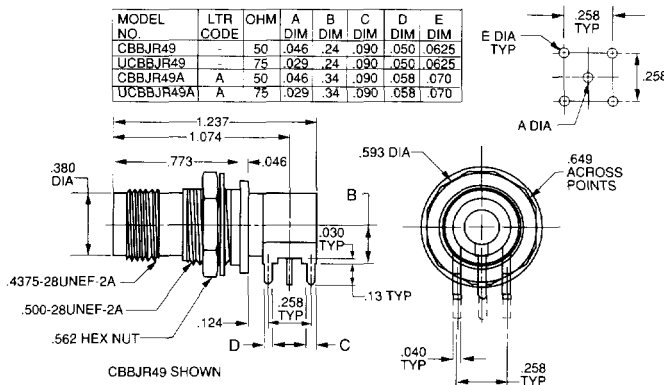

CIRCUIT BOARD JACK BULKHEAD MOUNT RIGHT ANGLE Add "A" for tall versions

50Ω **CBBJR49**
75Ω **UCBBJR49**
Mounting Hole: D3.230

⚠ - Refers to Cable Group Table, see pages 68-88. "D" mounting holes are on page 45.