

**Illuminated pushbuttons**

**AR22 E0L – 10 E3 R** □

① ② ③ ④ ⑤ ⑥

① **Product category**

AR22: 22mm-dia. illuminated pushbutton  
 22mm-dia. emergency stop illuminated pushbutton

② **Operator**

- Illuminated pushbutton
- F0L: Flush round head
- F5L: Flush round head (Alternate)
- E0L: Extended round head
- E5L: Extended round head (Alternate)
- M0L: Mushroom head (40mm dia.)
- M5L: Mushroom head (40mm dia. alternate)
- M4L: Mushroom head (29mm dia.)
- M9L: Mushroom head (29mm dia. alternate)
- G4L: Extended with transparent full guard (24mm dia.)
- G9L: Extended with transparent full guard (24mm dia. alternate)
- G2L: Extended with full guard (24mm dia. with openings)
- G7L: Extended with full guard (24mm dia. with openings, alternate)
- G1L: Extended with full guard (24mm dia.)
- G6L: Extended with full guard (24mm dia. alternate)
- V5L: Push-lock, turn-reset (40mm dia. with white arrow) \*1
- F0M: Flush square head
- F5M: Flush square head (Alternate)
- E0M: Extended square head
- E5M: Extended square head (Alternate)
- F0P: Flush round head with square bezel
- F5P: Flush round head with square bezel (Alternate)
- E0P: Extended round head with square bezel
- E5P: Extended round head with square bezel (Alternate)
- M4P: Mushroom head with square bezel (29mm dia.)
- Emergency stop illuminated pushbutton
- V0L: Push-lock, turn-reset (Soft-touch 40mm dia. with white arrow)
- V2L: Push-lock, turn-reset (40mm dia.)
- VDL: Push-lock, turn-reset (Soft-touch 40mm dia. transparent in all colors with white arrow)
- VAL: Push-lock, turn-reset (40mm dia. transparent in all colors)
- VSL: Push-lock, turn-reset (Soft-touch 29mm dia. with white arrow)
- VGF: Unibody push-lock, turn-reset (Soft-touch 40mm dia. with white arrow)

③ **Contact arrangement**

- |             |         |
|-------------|---------|
| 10: 1NO     | 30: 3NO |
| 01: 1NC     | 03: 3NC |
| 11: 1NO+1NC | 40: 4NO |
| 20: 2NO     | 04: 4NC |
| 02: 2NC     | 50: 5NO |
| 22: 2NO+2NC | 05: 5NC |

④ **Lamp voltage**

- Incandescent lamp
- 54: 5.5V AC/DC, without transformer
- C4: 15V AC/DC, without transformer
- D4: 20V AC/DC, without transformer
- E4: 24V AC/DC, without transformer
- H4: 100-110V AC, with transformer
- L4: 115-127V AC, with transformer
- M4: 200-220V AC, with transformer
- Q4: 230-254V AC, with transformer
- S4: 350-380V AC, with transformer
- T4: 400-440V AC, with transformer
- V4: 480V AC, with transformer
- W4: 500-550V AC, with transformer
- LED lamp
- A3: 6V AC, without transformer
- 63: 6V DC, without transformer
- B3: 12V AC/DC, without transformer
- C3: 15V AC/DC, without transformer
- E3: 24V AC/DC, without transformer
- H3: 100-110V AC, with transformer
- L3: 115-127V AC, with transformer
- M3: 200-220V AC, with transformer
- Q3: 230-254V AC, with transformer
- S3: 350-380V AC, with transformer
- T3: 400-440V AC, with transformer
- V3: 480V AC, with transformer
- W3: 500-550V AC, with transformer

- Neon lamp (For AR22VGF)
- H1: 110V AC, without transformer
- K1: 120V AC, without transformer
- M1: 220V AC, without transformer
- P1: 240V AC, without transformer

⑤ **Color of lens**

- |           |           |
|-----------|-----------|
| G: Green  | Y: Yellow |
| R: Red *2 | A: Orange |
| W: White  | S: Blue   |

⑥ **Special product**

- Z9: Resisting water-soluble cutting oils and heat
- Z8: With a contact protection cover
- Z4: Resisting sulfuration gas
- ZB: Meeting IP2X finger-protection standards

Notes: \*1 Products with no trigger action mechanism. These products cannot be used as emergency stop switches that comply with EN standards.



- \*2 Button color of emergency stop illuminated switches are Red only.
- The manufacturing range varies depending on the model. For details, refer to the contents of this catalog.

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22 and DR22

### Type number nomenclature

#### Pushbuttons

**AR22 E0R – 10 R**  

① ② ③ ④ ⑤ ⑥

#### ① Product category

AR22: 22mm-dia. pushbutton  
22mm-dia. emergency stop pushbutton

#### ② Operator

- Pushbutton switch
- F0R: Flush round head
- F5R: Flush round head (Alternate)
- E0R: Extended round head
- E5R: Extended round head (Alternate)
- FAR: Flush round head (Symbol mark type)
- FBR: Flush round head (Symbol mark type, alternate)
- EAR: Extended round head (Symbol mark type)
- EBR: Extended round head (Symbol mark type, alternate)
- M0R: Mushroom head (40mm dia.)
- M5R: Mushroom head (40mm dia. Alternate)
- M4R: Mushroom head (29mm dia.)
- M9R: Mushroom head (29mm dia. Alternate)
- G3R: Extended with full guard (24mm dia.)
- G8R: Extended with full guard (24mm dia. Alternate)
- G2R: Flush with full guard (24mm dia.)
- G7R: Flush with full guard (24mm dia. Alternate)
- G0R: Extended with half guard
- G5R: Extended with half guard (Alternate)
- M3R: Mushroom head with full guard (40mm dia.)
- M8R: Mushroom head with full guard (40mm dia. Alternate)
- S1R: Push-button with selector ring (2-position)
- S2R: Push-button with selector ring (2-position)
- S3R: Push-button with selector ring (2-position)
- S6R: Push-button with selector ring (2-position)
- V5R: Push-lock, turn-reset (40mm dia. with white arrow) \*1
- F0S: Flush square head
- F5S: Flush square head (Alternate)
- E0S: Extended square head
- E5S: Extended square head (Alternate)
- F0Y: Flush round head with square bezel
- F5Y: Flush round head with square bezel (Alternate)
- E0Y: Extended round head with square bezel
- E5Y: Extended round head with square bezel (Alternate)
- M4Y: Mushroom head with square bezel (29mm dia.)
  - Emergency stop pushbutton switch
- V0R: Push-lock, turn-reset (Soft-touch 40mm dia. with white arrow)
- V2R: Push-lock, turn-reset (40mm dia.)
- VSR: Push-lock, turn-reset (Soft-touch 29mm dia. with white arrow)
- V4R: Push-lock, turn-reset (29mm dia.)
- V7R: Key-release push-lock, turn-reset (40mm dia.)
- Q2R: Push-lock, pull-reset (35mm dia.)
- VGE: Unibody push-lock, turn-reset (Soft-touch 40mm dia. with white arrow)

#### ③ Contact arrangement

10: 1NO	30: 3NO
01: 1NC	03: 3NC
11: 1NO+1NC	33: 3NO+3NC
20: 2NO	40: 4NO
02: 2NC	04: 4NC
22: 2NO+2NC	50: 5NO
	05: 5NC

#### ④ Color of button

G: Green	Y: Yellow
R: Red <sup>2</sup>	A: Orange
B: Black	S: Blue
W: White	C: Clear
T: Green, Red, Black (For AR22F0R)	(For AR22FAR, FBR, EAR, EBR)

#### ⑤ Symbol mark (For AR22FAR, FBR, EAR, EBR)

Symbol mark	○	I	⊕	○	I	⊕	
Color of button	White	Black	White	Black	White	Black	Clear
Color of mark	Red		Green		Green		Black
Code	01	02	03	04	11	12	02B 04B 12B

#### ⑥ Special product

Z9: Resisting water-soluble cutting oils and heat  
Z8: With a contact protection cover  
Z4: Resisting sulfuration gas  
ZB: Meeting IP2X finger-protection standards

Notes: \*1 Products with no trigger action mechanism. These products cannot be used as emergency stop switches that comply with EN standards.

\*2 Button color of emergency stop switches are Red only.

• The manufacturing range varies depending on the model. For details, refer to the contents of this catalog.

**Selector and illuminated selector switches**

**AR22 PL – 2** □ **10 E3 G** □ □  
 ① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨

① **Product category**

AR22: 22mm dia. selector switch and illuminated selector switch

② **Operator**

- Selector switch
  - PR: Knob
  - PCR: Knob operated control type
  - WR: Lever
  - WCR: Lever operated control type
  - RR: Cylindrical knob
  - RCR: Cylindrical knob operated control type
  - JR: Key
  - JCR: Key operated control type
  - JAR: Key (Long durability)
  - PY: Knob with square bezel
  - PCY: Knob operated control type with square bezel
  - WY: Lever with square bezel
  - WCY: Lever operated control type with square bezel
  - RY: Cylindrical knob with square bezel
  - RCY: Cylindrical knob operated control type with square bezel
  - JY: Key with square bezel
  - JCY: Key operated control type with square bezel
- Illuminated selector switch
  - PL: Knob
  - PP: Knob with square bezel

③ **Operation**

- 2: 2-position, maintained
- 0: 2-position, spring return
- 3: 3-position, maintained
- 6: 3-position, spring/manual return (Left to center)
- 7: 3-position, spring/manual return (Right to center)
- 1: 3-position, spring return
- 4: 4-position, maintained (For AR22PCR, WCR, RCR)
- 5: 5-position, maintained (For AR22PCR, WCR, RCR)

④ **Key removable position**

- A: Left
- B: Left and right
- C: Left, right and center
- D: Right
- E: Center
- F: Right and center
- G: Left and center

⑤ **Contact arrangement**

- |             |             |
|-------------|-------------|
| 10: 1NO     | 30: 3NO     |
| 01: 1NC     | 03: 3NC     |
| 11: 1NO+1NC | 33: 3NO+3NC |
| 20: 2NO     | 40: 4NO     |
| 02: 2NC     | 04: 4NC     |
| 22: 2NO+2NC | 50: 5NO     |
|             | 05: 5NC     |

Note: Control type: See page 04/29 to 04/31

⑥ **Lamp voltage**

- Incandescent lamp
  - 54: 5.5V AC/DC, without transformer
  - C4: 15V AC/DC, without transformer
  - D4: 20V AC/DC, without transformer
  - E4: 24V AC/DC, without transformer
  - H4: 100-110V AC, with transformer
  - L4: 115-127V AC, with transformer
  - M4: 200-220V AC, with transformer
  - Q4: 230-254V AC, with transformer
  - S4: 350-380V AC, with transformer
  - T4: 400-440V AC, with transformer
  - V4: 480V AC, with transformer
  - W4: 500-550V AC, with transformer
- LED lamp
  - A3: 6V AC, without transformer
  - 63: 6V DC, without transformer
  - B3: 12V AC/DC, without transformer
  - C3: 15V AC/DC, without transformer
  - E3: 24V AC/DC, without transformer
  - H3: 100-110V AC, with transformer
  - L3: 115-127V AC, with transformer
  - M3: 200-220V AC, with transformer
  - Q3: 230-254V AC, with transformer
  - S3: 350-380V AC, with transformer
  - T3: 400-440V AC, with transformer
  - V3: 480V AC, with transformer
  - W3: 500-550V AC, with transformer

⑦ **Color of knob**

- B: Black (Not available for illuminated selector switch)
- G: Green
- R: Red
- W: White (Not available for selector switch)
- Y: Yellow (Not available for selector switch)
- A: Orange (Not available for selector switch)
- S: Blue (Not available for selector switch)

⑧ **Key type No.**

- A, B, C, D, E or F
- ("A" is standard)

⑨ **Special product**

- Z9: Resisting water-soluble cutting oils and heat
- Z8: With a contact protection cover
- Z4: Resisting sulfuration gas
- ZB: Meeting IP2X finger-protection standards

Note: • The manufacturing range varies depending on the model. For details, refer to the contents of this catalog.

## AR22 and DR22

### Type number nomenclature

#### Pilot lights

**DR22 D0L – E3 W □**

① ② ③ ④ ⑤

#### ① Product category

DR22: 22mm dia. pilot light

#### ② Lens

D0L: Dome

E3L: Extended round

K0L: Faceted

F3M: Flush square

F4M: Flush square (Transparent lens)

F5M: Flush square (12mm high frame)

E3M: Extended square

E3N: Flush rectangular

E3P: Extended round with square bezel

#### ③ Lamp voltage

##### • Incandescent lamp

54: 5.5V AC/DC, without transformer

C4: 15V AC/DC, without transformer

D4: 20V AC/DC, without transformer

E4: 24V AC/DC, without transformer

H4: 100-110V AC, with transformer

L4: 115-127V AC, with transformer

M4: 200-220V AC, with transformer

Q4: 230-254V AC, with transformer

S4: 350-380V AC, with transformer

T4: 400-440V AC, with transformer

V4: 480V AC, with transformer

W4: 500-550V AC, with transformer

##### • LED lamp

A3: 6V AC, without transformer

63: 6V DC, without transformer

B3: 12V AC/DC, without transformer

C3: 15V AC/DC, without transformer

E3: 24V AC/DC, without transformer

H3: 100-110V AC, with transformer

L3: 115-127V AC, with transformer

M3: 200-220V AC, with transformer

Q3: 230-254V AC, with transformer

S3: 350-380V AC, with transformer

T3: 400-440V AC, with transformer

V3: 480V AC, with transformer

W3: 500-550V AC, with transformer

H7: 110V DC, with resistor unit

58: 5.5V AC/DC, short-body without transformer

C8: 15V AC/DC, short-body without transformer

D8: 20V AC/DC, short-body without transformer

E8: 24V AC/DC, short-body without transformer

H8: 100-110V AC, short-body with transformer

L8: 115-127V AC, short-body with transformer

M8: 200-220V AC, short-body with transformer

A9: 6V AC, short-body without transformer

69: 6V DC, short-body without transformer

B9: 12V AC/DC, short-body without transformer

C9: 15V AC/DC, short-body without transformer

E9: 24V AC/DC, short-body without transformer

H9: 100-110V AC, short-body with transformer

L9: 115-127V AC, short-body with transformer

M9: 200-220V AC, short-body with transformer

#### ④ Color of lens

G: Green

Y: Yellow

R: Red

A: Orange

W: White

S: Blue

#### ⑤ Special product

Z9: Resisting water-soluble cutting oils and heat

Z4: Resisting sulfuration gas

ZB: Meeting IP2X finger-protection standards

Note: • The manufacturing range varies depending on the model. For details, refer to the contents of this catalog.

**Joy stick selector switches**

**AR22A 0 N – A0A0 B**

① ②③ ④ ⑤

① **Product category**

AR22A: 22mm-dia. Joy stick selector switch

② **Handle**

- 0: Ball type (without lock, manual return)
- 1: Ball type with lock (manual return)
- 2: Rubber cap type (without lock, manual return)
- 5: Ball type (without lock, spring return)
- 6: Ball type with lock (spring return)
- 7: Rubber cap type (without lock, spring return)


③ **Terminal**

- N: Screw
- H: Solder/tab

④ **Contact arrangement**

Contact arrangement	Blank	1NO	1NC	1NO+1NC	2NO	2NC	2NO+2NC
Code	Screw	0	A	B	1	D	E
	Solder/tab	0	-	-	1	-	2

Operating direction code of contacts



Ex. AR22A0N-A 0 A 0 B  
1 2 3 4

⑤ **Handle color**

- B: Black

■ **Ordering information**

Specify the following:

1. Type number

For the CCC approved product, add the suffix **(CCC)** to the type number

Example: Pushbutton switch **AR22F0R-11B(CCC)**

**Buzzers**

**DR22B 5 – E B**

① ② ③ ④

① **Product category**

DR22B: 22mm-dia. buzzer

② **Sound**

- 5: Electronic sound
- 3: Magnetic sound
- 8: Electronic sound (IP54)

③ **Operating voltage**

- A: 6V AC (Type “5”, “8”)
- 6: 6V DC (Type “5”, “8”)
- E: 12-24V AC/DC (Type “3” : 24V AC/DC)
- F: 35-48V AC/DC (Type “5”, “8”)
- H: 100-110V AC
- M: 200-220V AC
- 1: 100-110V DC (Type “5”, “8”)

④ **Color of head**

- B: Black

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22 and DR22

### Ratings and specifications

#### ■ Standards approved

UL508	File No. E44592
CSA C22.2 No.14	File No. LR20479 cUL File No. E44592 (For AR22VG)
TÜV: EN60947-5-1	Pushbutton, Illuminated pushbutton: R9551062, Selector, Illuminated selector: R9551060 Pilot lights: R9551061 Joy stick selector switch: R2050803 (Lever switch) Buzzer: J9950091
TÜV: EN60947-5-1 EN60947-5-5	Emergency stop pushbutton Emergency stop illuminated pushbutton : R50028146, R50028137 (For AR22VG)

#### ■ Specifications (Indoor use)

Description	Pushbutton switch Illuminated pushbutton switch Emergency stop pushbutton switch Emergency stop illuminated pushbutton switch Selector switch Illuminated selector switch	Joy stick selector (Lever switch)	Pilot light
Rated insulation voltage	600V AC/DC *1	250V AC/DC	250V AC/DC *2
Mechanical durability	See page 04/13	250,000 operations	–
Electrical durability	500,000 operations at 220V AC 6A 1 million operations at 220V AC 3A (AR22VG type: 100,000 operations)	100,000 operations at 220V AC 1A (Res. load)	–
Operating frequency	1200 operations/hour (On-load factor: 40%) AR22VG type: 1800 operations/hour (On-load factor: 40%)	–	–
Dielectric strength	2500V AC, 1 minute *3	2000V AC, 1 minute *4	–
Insulation resistance	100MΩ or more (500V DC megger)		
Rated impulse dielectric strength	6kV (AR22VG type: 4kV)	–	6kV
Conditional short-circuit current	1000A	1000A	–
Short-circuit protective device	Fuse 15A	Fuse 1A	–
Pollution degree	3		
Vibration	Resonance: 10 to 55Hz, double amplitude 0.1mm *5 Constant: 16.7Hz, double amplitude 3mm		
Shock	Malfunction durability: 100m/s <sup>2</sup> *6 Mechanical durability: 500m/s <sup>2</sup>	–	Mechanical durability : 500m/s <sup>2</sup>
Ambient temperature (No condensation or no icing)	-20 to +70°C *7	-5 to +70°C	-20 to +50°C
Storage temperature	-40 to +80°C		
Humidity	45 to 85% RH (within -5 to +40°C)		
Degree of protection	IP65		

Notes: \*1 Illuminated type without transformer and AR22VG type: 250V AC/DC

\*2 Pilot light with transformer: 600V AC

\*3 Illuminated type without transformer: 2000V AC, 1 minute (except AR22VGF type)

\*4 Pilot light with transformer: 2500V AC, 1 minute

\*5 Emergency stop type: 10 to 500Hz, double amplitude 0.7mm (acceleration 50m/s<sup>2</sup>), according to the test condition of EN60947-5-5 (1997)

\*6 Emergency stop type: 150m/s<sup>2</sup>

\*7 AR22VGE type: -20 to +60°C, illuminated type: -20 to +50°C

# Pushbuttons/Selectors/Pilot Lights/Buzzers AR22 and DR22 Ratings and specifications

### ● Mechanical durability

Description		Operations
Pushbutton switch	Momentary action	5 million
Illuminated pushbutton switch	Alternate action	1 million
Emergency stop pushbutton switch	With selector ring	100,000
Emergency stop illuminated pushbutton	Push-lock, turn-reset	100,000
	Push-lock, pull-reset	30,000
Selector switch	Maintained 1, 2, 3, 4-contact	1 million
	Maintained 5, 6-contact	500,000
	Control type, spring return, spring/manual return	200,000
Illuminated selector switch	Maintained	
	Without transformer 1, 2, 3-contact	1 million
	4-contact	500,000
	With transformer 1, 2-contact	1 million
	3-contact	500,000
	Spring return, spring/manual return	200,000

Note: Key insertion/removal durability for selector switch key types  
 • Key type 10,000  
 • Key (Long durability) type 20,000

### ● Buzzers

Item	DR22B5	DR22B3	DR22B8
Rated insulation voltage	Without transformer: 60V AC/DC With transformer: 250V AC		
Sound level	90dB (0.1m) 70dB (1m)	80 to 90dB (0.1m) 60 to 70dB (1m)	80dB (0.1m) 60dB (1.0m)
Durability	1000h	200h	1000h
Frequency	2.4 to 3.3kHz		
Intermittent cycle	Approx. 170-cycle/min		
Current consumption	See the table below		
Dielectric strength	Without transformer: 1000V AC 1 minute With transformer: 2000V AC 1 minute		
Insulation resistance	100MΩ or more (500V DC megger)		
Pollution degree	3		
Vibration	Resonance: 10 to 55Hz, double amplitude 0.1mm Constant: 16.7Hz, double amplitude 3.0mm		
Shock	Mechanical durability: 500m/s <sup>2</sup>		
Ambient temperature	-20 to +60°C (No condensation or no icing) (with resistor unit: -20 to +40°C)		
Storage temperature	-30 to +70°C		
Humidity	45 to 85%RH (within -5 to 40°C)		
Degree of protection	IP00		IP54

### ● Current consumption

Operational voltage	Current consumption	
	DR22B5, DR22B8	DR22B3
6V AC	70mA AC	—
6V DC	35mA DC	—
24V AC/DC	40mA AC, 25mA DC	30mA AC, 20mA DC
48V AC/DC	65mA AC, 20mA DC	—
110V AC	30mA AC	30mA AC
110V DC	30mA DC	—
220V AC	15mA AC	15mA AC

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22 and DR22

### Ratings and specifications

■ **Contact ratings**  
 ● **UL/CSA standards**  
**AC (COS  $\phi$ =0.35)**

Contact rated code	120V		240V		480V		600V	
	Making current	Breaking current	Making current	Breaking current	Making current	Breaking current	Making current	Breaking current
A600	60A	6.0A	30A	3.0A	15A	1.5A	12A	1.2A
B300 (AR22VG)	30A	3.0A	15A	1.5A	–	–	–	–

**DC**  $T_{0.95}$  = 6P (Max. 300ms)

Description	Contact rated code	Making current · Breaking current		
		125V	250V	301V–600V
Illuminated pushbutton switch Pushbutton (Ring type selector switch: AR22S2R only) Emergency stop pushbutton switch	P600	1.1A	0.55A	0.2A
Emergency stop illuminated pushbutton switch (Except the overlap contact types)	Q300 (AR22VG)	0.55A	0.27A	–
Overlap contact types of products shown above Pushbutton (Ring type selector switch: AR22S1R, S6R only) Selector switch (2-position only, except the overlap contact types) Illuminated selector switch (2-position only, except the overlap contact types)	Q600	0.55A	0.27A	0.1A
Pushbutton (Ring type selector switch: AR22S3R only) Selector switch (2-pos./overlap contact type, 3-, 4-, 5-pos. type) Illuminated selector switch (2-pos./overlap contact type, 3-pos. type)	R300	0.22A	0.11A	–

Note: Joy stick selector switches (Lever switches): 250V AC, 5A (Res. load) 125V DC, 0.2A 24V DC, 1A (Res. load)

● **EN standard/TÜV approved**

Description	Rated operational current			
	Rated thermal current	Rated operational voltage	AC15 (Ind. load)	DC13 (Ind. load)
			Rated operational current	Rated operational current
Illuminated pushbutton switch Pushbutton (Except the selector ring type) Emergency stop pushbutton switch Emergency stop illuminated pushbutton switch Selector switch (2-position) Illuminated selector switch (2-position)	10A	24V	6.0A	4.0A (AR22VG: 1.5A)
		120V	6.0A (AR22VG: 3A)	–
		125V	–	1.3A (AR22VG: 0.3A)
		240V	6.0A (AR22VG: 3A)	–
		250V	–	0.45A (AR22VG: 0.15A)
		480V	2.5A (AR22VG: –)	–
		600V	2.0A (AR22VG: –)	–
Selector switch (3, 4, 5-position) Illuminated selector switch (3-position) Pushbutton with selector ring	10A	24V	6.0A	2.0A
		120V	6.0A	–
		125V	–	0.65A
		240V	6.0A	–
		250V	–	0.23A
		480V	2.5A	–
		600V	2.0A	–
Joy stick selector switch (Lever switch)	5A	24V	–	0.7A
		120V	0.3A	–
		125V	–	0.15A
		240V	0.3A	–

Lamp rated voltage UL/CSA standards, TÜV approved

	LED lamp	Incandescent lamp	Neon lamp
Full-voltage (without transformer)	Max. 24V AC/DC	Max. 30V AC/DC	Max. 240V AC
With transformer	Max. 550V AC (Short-body type: Max. 220V AC)		–

# Pushbuttons/Selectors/Pilot Lights/Buzzers AR22 and DR22 Ratings and specifications

## ■ Operating characteristic (1NO+1NC)

Description	Pushbutton Illuminated pushbutton	Emergency stop pushbutton		Selector *2		
		Emergency stop illuminated pushbutton		Illuminated selector		
		Push-lock type	Push-pull type	Maintained	Spring/manual return	Spring return
Ave. required operating force	9N (Push-lock type: 20N)	30N (AR22VG: 22N)*1	45N	0.15N•m	0.13N•m	0.1N•m
Operating travel	Approx. 6mm  (Push-lock type: Approx. 9mm, operation angle: Approx. 45°)	Approx. 9mm  (AR22VG: Approx. 10mm, operation angle: Approx. 45°)	Approx. 9mm	2-position: Approx. 90° 3-position: Approx. 45° 4-position: Approx. 40° 5-position: Approx. 30°	3-position: Approx. 45°	2-position: Approx. 60° 3-position: Approx. 45°
Required return force	– (Push-lock type: 0.6N•m)	0.6N•m (AR22VG: 0.2N•m)	30N (pull)	0.15N•m	0.13N•m	–

Notes: \*1 AR22V2R, V4R, V7R, VAL types: 45N

\*2 4-position, 5-position: 2NO+2NC

## ■ Lamp ratings

### ● Illuminated pushbuttons, illuminated selectors, pilot lights

Transformer	Lamp voltage	LED			Incandescent		
		Type	Rated voltage	Consumption	Type	Rated voltage	Consumption
Without transformer	5.5V AC/DC	–	–	–	AHX135	6.3V AC/DC	0.9W
	6V AC	APX510-6□	6V AC	Green, red, orange, amber, blue: 7mA AC Yellow: 50mA AC	–	–	–
	6V DC	APX510-D6□	6V DC	Green, red, orange, amber, blue: 11mA DC Yellow: 33mA DC	–	–	–
	12V AC/DC	APX510-12□	12V AC/DC	Green, red, orange, amber, blue: 14mA AC, 11mA DC Yellow: 28mA AC, 22mA DC	–	–	–
	15V AC/DC	APX510-15□	15V AC/DC	Green, red, orange, amber, blue: 13mA AC, 11mA DC Yellow: 26mA AC, 22mA DC	AHX279	18V AC/DC	0.8W
	20V AC/DC 24V AC/DC	– APX510-24□	– 24V AC/DC	– 12mA AC, 11mA DC	AHX144 AHX129	24V AC/DC 30V AC/DC	0.9W 0.8W
With transformer (Standard type: AR9T511)	110V AC	APX510-6□	6V AC	1.5VA	AHX135	6.3V AC/DC	2VA
	127V AC						2VA
	220V AC						2VA
	254V AC	APX510-6□	6V AC	2.5VA	AHX135	6.3V AC/DC	2.5VA
	380V AC 440V AC 480V AC 550V AC						2.5VA 2.5VA 2.5VA 2.5VA
With resistor unit (AR9T519-H)	110V DC	APX510-24□	24V AC/DC	1.2W	–	–	–

Notes: • Short body pilot lights: 110V AC, 127V AC, 220V AC only

• Replace the □ mark by the lamp luminous color code, see page 04/16

• Except AR22VGF type

### ● Emergency stop illuminated pushbuttons (AR22VGF type)

Transformer	Lamp	Voltage	Type	Rated voltage	Consumption
Without transformer	LED	24V AC/DC	AR9L002-ER	24V AC/DC	12mA AC 11mA DC
	Neon	110V AC	AR9N001-HA	110V AC	0.19VA
		120V AC	AR9N001-KA	120V AC	0.21VA
		220V AC	AR9N001-MA	220V AC	0.30VA
		240V AC	AR9N001-PA	240V AC	0.30VA

Notes: Lamp base: BA9S/13


# Pushbuttons/Selectors/Pilot Lights/Buzzers AR22 and DR22 Ratings and specifications

## ■ Lamp durability

Lamp	Durability (reference)	Judgement criterion
LED	Approx. 30000h	When brightness is less than 50% of initial value
Incandescent	Approx. 5000h (AC)	When the bulb burns out
Neon	Approx. 5000h	When a remarkable blackening appears in the glass bulb and the using becomes improper


Notes: • The operating voltage for incandescent lamps is set at 80 to 90% of the lamp's rated voltage.  
• The durability of LED lamp is a mean value in all colors.

## Estimated durability for LED lamps

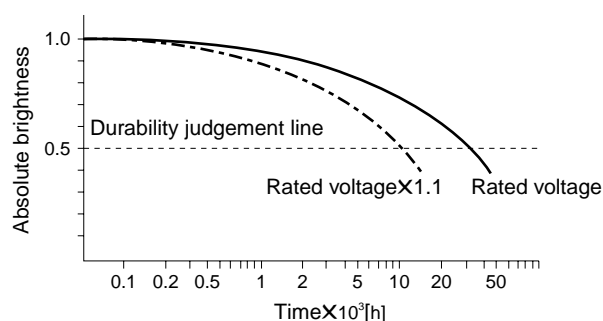

Notes: • Durability at  $T_a=25^{\circ}\text{C}$   
• Durability is affected by temperature, humidity, and voltage fluctuation.

## Incandescent lamp voltage characteristics

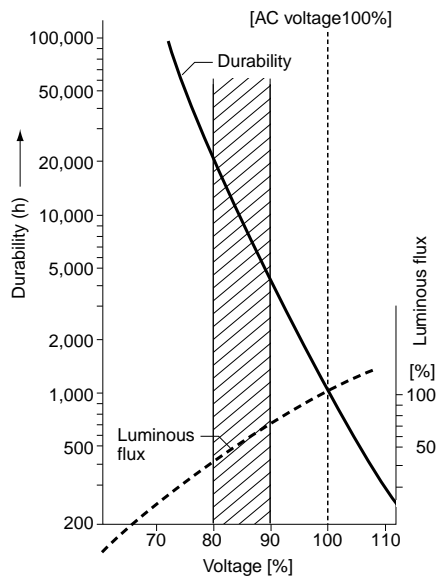







## ■ Combination of lens color and LED or neon lamp luminous color

Lens Color	Code	LED or neon lamp Luminous color	Type
Green	G	Green	APX510-■G
Red	R	Red	APX510-■R
White	W	Orange	APX510-■O
Yellow	Y	Yellow	APX510-■Y
Orange *	A	Amber	APX510-■A
Blue	S	Blue	APX510-■S
Red (AR22VGF)	R	Red	AR9L002-ER
		Orange (Neon lamp)	AR9N001-■A

Notes: \* DR22F4M: LED lamp color is orange. (APX510-■O)  
• Replace the ■ mark by the lamp voltage code

■ Illuminated pushbutton switches

Operator	Transformer	Contact	LED lamp Momentary action Type	Alternate action Type	Incandescent lamp Momentary action Type	Alternate action Type
Flush round head  AF94-318	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22F0L-10■3□ AR22F0L-01■3□ AR22F0L-11■3□ AR22F0L-22■3□	AR22F5L-10■3□ AR22F5L-01■3□ AR22F5L-11■3□ —	AR22F0L-10■4□ AR22F0L-01■4□ AR22F0L-11■4□ AR22F0L-22■4□	AR22F5L-10■4□ AR22F5L-01■4□ AR22F5L-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22F0L-10■3□ AR22F0L-01■3□ AR22F0L-11■3□	AR22F5L-10■3□ AR22F5L-01■3□ AR22F5L-11■3□	AR22F0L-10■4□ AR22F0L-01■4□ AR22F0L-11■4□	AR22F5L-10■4□ AR22F5L-01■4□ AR22F5L-11■4□
Extended round head  AF94-317	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22E0L-10■3□ AR22E0L-01■3□ AR22E0L-11■3□ AR22E0L-22■3□	AR22E5L-10■3□ AR22E5L-01■3□ AR22E5L-11■3□ —	AR22E0L-10■4□ AR22E0L-01■4□ AR22E0L-11■4□ AR22E0L-22■4□	AR22E5L-10■4□ AR22E5L-01■4□ AR22E5L-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22E0L-10■3□ AR22E0L-01■3□ AR22E0L-11■3□	AR22E5L-10■3□ AR22E5L-01■3□ AR22E5L-11■3□	AR22E0L-10■4□ AR22E0L-01■4□ AR22E0L-11■4□	AR22E5L-10■4□ AR22E5L-01■4□ AR22E5L-11■4□
Mushroom head (40mm dia.)  AF94-367	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22M0L-10■3□ AR22M0L-01■3□ AR22M0L-11■3□ AR22M0L-22■3□	AR22M5L-10■3□ AR22M5L-01■3□ AR22M5L-11■3□ —	AR22M0L-10■4□ AR22M0L-01■4□ AR22M0L-11■4□ AR22M0L-22■4□	AR22M5L-10■4□ AR22M5L-01■4□ AR22M5L-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22M0L-10■3□ AR22M0L-01■3□ AR22M0L-11■3□	AR22M5L-10■3□ AR22M5L-01■3□ AR22M5L-11■3□	AR22M0L-10■4□ AR22M0L-01■4□ AR22M0L-11■4□	AR22M5L-10■4□ AR22M5L-01■4□ AR22M5L-11■4□
Mushroom head (29mm dia.)  AF94-369	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22M4L-10■3□ AR22M4L-01■3□ AR22M4L-11■3□ AR22M4L-22■3□	AR22M9L-10■3□ AR22M9L-01■3□ AR22M9L-11■3□ —	AR22M4L-10■4□ AR22M4L-01■4□ AR22M4L-11■4□ AR22M4L-22■4□	AR22M9L-10■4□ AR22M9L-01■4□ AR22M9L-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22M4L-10■3□ AR22M4L-01■3□ AR22M4L-11■3□	AR22M9L-10■3□ AR22M9L-01■3□ AR22M9L-11■3□	AR22M4L-10■4□ AR22M4L-01■4□ AR22M4L-11■4□	AR22M9L-10■4□ AR22M9L-01■4□ AR22M9L-11■4□
Extended with transparent full guard (24mm dia.)  AF94-294	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22G4L-10■3□ AR22G4L-01■3□ AR22G4L-11■3□ AR22G4L-22■3□	AR22G9L-10■3□ AR22G9L-01■3□ AR22G9L-11■3□ —	AR22G4L-10■4□ AR22G4L-01■4□ AR22G4L-11■4□ AR22G4L-22■4□	AR22G9L-10■4□ AR22G9L-01■4□ AR22G9L-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22G4L-10■3□ AR22G4L-01■3□ AR22G4L-11■3□	AR22G9L-10■3□ AR22G9L-01■3□ AR22G9L-11■3□	AR22G4L-10■4□ AR22G4L-01■4□ AR22G4L-11■4□	AR22G9L-10■4□ AR22G9L-01■4□ AR22G9L-11■4□
Extended with full guard (24mm dia. with openings)  AF99-319	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22G2L-10■3□ AR22G2L-01■3□ AR22G2L-11■3□ AR22G2L-22■3□	AR22G7L-10■3□ AR22G7L-01■3□ AR22G7L-11■3□ —	AR22G2L-10■4□ AR22G2L-01■4□ AR22G2L-11■4□ AR22G2L-22■4□	AR22G7L-10■4□ AR22G7L-01■4□ AR22G7L-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22G2L-10■3□ AR22G2L-01■3□ AR22G2L-11■3□	AR22G7L-10■3□ AR22G7L-01■3□ AR22G7L-11■3□	AR22G2L-10■4□ AR22G2L-01■4□ AR22G2L-11■4□	AR22G7L-10■4□ AR22G7L-01■4□ AR22G7L-11■4□

Note: ■ □ See page 04/19

# Illuminated Pushbuttons

## AR22

Operator	Transformer	Contact	LED lamp Momentary action Type	Alternate action Type	Incandescent lamp Momentary action Type	Alternate action Type
Extended with full guard (24mm dia.)  <small>KK02-127A</small>	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22G1L-10■3□ AR22G1L-01■3□ AR22G1L-11■3□ AR22G1L-22■3□	AR22G6L-10■3□ AR22G6L-01■3□ AR22G6L-11■3□ —	AR22G1L-10■4□ AR22G1L-01■4□ AR22G1L-11■4□ AR22G1L-22■4□	AR22G6L-10■4□ AR22G6L-01■4□ AR22G6L-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22G1L-10■3□ AR22G1L-01■3□ AR22G1L-11■3□	AR22G6L-10■3□ AR22G6L-01■3□ AR22G6L-11■3□	AR22G1L-10■4□ AR22G1L-01■4□ AR22G1L-11■4□	AR22G6L-10■4□ AR22G6L-01■4□ AR22G6L-11■4□
Push-lock, turn-reset (40mm dia. with white arrow)  <small>KKD06-335</small>	Without	1NO 1NC 1NO+1NC 3NC	— — — —	AR22V5L-10■3□ AR22V5L-01■3□ AR22V5L-11■3□ AR22V5L-03■3□	— — — —	AR22V5L-10■4□ AR22V5L-01■4□ AR22V5L-11■4□ AR22V5L-03■4□
	With	1NO 1NC 1NO+1NC	— — —	AR22V5L-10■3□ AR22V5L-01■3□ AR22V5L-11■3□	— — —	AR22V5L-10■4□ AR22V5L-01■4□ AR22V5L-11■4□
Flush square head  <small>AF97-68</small>	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22F0M-10■3□ AR22F0M-01■3□ AR22F0M-11■3□ AR22F0M-22■3□	AR22F5M-10■3□ AR22F5M-01■3□ AR22F5M-11■3□ —	AR22F0M-10■4□ AR22F0M-01■4□ AR22F0M-11■4□ AR22F0M-22■4□	AR22F5M-10■4□ AR22F5M-01■4□ AR22F5M-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22F0M-10■3□ AR22F0M-01■3□ AR22F0M-11■3□	AR22F5M-10■3□ AR22F5M-01■3□ AR22F5M-11■3□	AR22F0M-10■4□ AR22F0M-01■4□ AR22F0M-11■4□	AR22F5M-10■4□ AR22F5M-01■4□ AR22F5M-11■4□
Extended square head  <small>AF94-357</small>	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22E0M-10■3□ AR22E0M-01■3□ AR22E0M-11■3□ AR22E0M-22■3□	AR22E5M-10■3□ AR22E5M-01■3□ AR22E5M-11■3□ —	AR22E0M-10■4□ AR22E0M-01■4□ AR22E0M-11■4□ AR22E0M-22■4□	AR22E5M-10■4□ AR22E5M-01■4□ AR22E5M-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22E0M-10■3□ AR22E0M-01■3□ AR22E0M-11■3□	AR22E5M-10■3□ AR22E5M-01■3□ AR22E5M-11■3□	AR22E0M-10■4□ AR22E0M-01■4□ AR22E0M-11■4□	AR22E5M-10■4□ AR22E5M-01■4□ AR22E5M-11■4□
Flush round head with square bezel  <small>AF94-315</small>	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22F0P-10■3□ AR22F0P-01■3□ AR22F0P-11■3□ AR22F0P-22■3□	AR22F5P-10■3□ AR22F5P-01■3□ AR22F5P-11■3□ —	AR22F0P-10■4□ AR22F0P-01■4□ AR22F0P-11■4□ AR22F0P-22■4□	AR22F5P-10■4□ AR22F5P-01■4□ AR22F5P-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22F0P-10■3□ AR22F0P-01■3□ AR22F0P-11■3□	AR22F5P-10■3□ AR22F5P-01■3□ AR22F5P-11■3□	AR22F0P-10■4□ AR22F0P-01■4□ AR22F0P-11■4□	AR22F5P-10■4□ AR22F5P-01■4□ AR22F5P-11■4□
Extended round head with square bezel  <small>AF94-314</small>	Without	1NO 1NC 1NO+1NC 2NO+2NC	AR22E0P-10■3□ AR22E0P-01■3□ AR22E0P-11■3□ AR22E0P-22■3□	AR22E5P-10■3□ AR22E5P-01■3□ AR22E5P-11■3□ —	AR22E0P-10■4□ AR22E0P-01■4□ AR22E0P-11■4□ AR22E0P-22■4□	AR22E5P-10■4□ AR22E5P-01■4□ AR22E5P-11■4□ —
	With	1NO 1NC 1NO+1NC	AR22E0P-10■3□ AR22E0P-01■3□ AR22E0P-11■3□	AR22E5P-10■3□ AR22E5P-01■3□ AR22E5P-11■3□	AR22E0P-10■4□ AR22E0P-01■4□ AR22E0P-11■4□	AR22E5P-10■4□ AR22E5P-01■4□ AR22E5P-11■4□

Note: ■ □ See page 04/19

Operator	Trans- former	Contact	LED lamp		Incandescent lamp	
			Momentary action Type	Alternate action Type	Momentary action Type	Alternate action Type
Mushroom head with square bezel (29mm dia.)  AF94-440	Without	1NO	AR22M4P-10■3□	—	AR22M4P-10■4□	—
		1NC	AR22M4P-01■3□	—	AR22M4P-01■4□	—
		1NO+1NC	AR22M4P-11■3□	—	AR22M4P-11■4□	—
		2NO+2NC	AR22M4P-22■3□	—	AR22M4P-22■4□	—
	With	1NO	AR22M4P-10■3□	—	AR22M4P-10■4□	—
		1NC	AR22M4P-01■3□	—	AR22M4P-01■4□	—
		1NO+1NC	AR22M4P-11■3□	—	AR22M4P-11■4□	—

• **Lens color**

Replace the □ mark by the lens color code

Color	Green	Red	White	Blue	Yellow	Orange
Code	G	R	W	S	Y	A

Note: AR22V5L type: Red, yellow only

• **Contact arrangements**

Contact arrangements other than above are available

Contact arrangement	1NO	1NC	1NO+1NC	2NO	2NC	3NO
Code	10	01	11	20	02	30

Contact arrangement	3NC	2NO+2NC	4NO	4NC	5NO	5NC
Code	03	22	40	04	50	05

Available numbers of contact blocks

Operation	Without transformer	With transformer
Momentary action	5-contact block	3-contact block
Alternate action Push-lock, turn-reset	3-contact block	2-contact block

• **Voltage**

Replace the ■ mark by the lamp voltage code

Transformer		Code	
		LED	Incandescent
Without transformer	6V DC	6	—
	6V AC	A	—
	5.5V AC/DC	—	5
	12V AC/DC	B	—
	15V AC/DC	C	C
	20V AC/DC 24V AC/DC	— E	D E
With transformer	100-110V AC	H	H
	115-127V AC	L	L
	200-220V AC	M	M
	230-254V AC	Q	Q
	350-380V AC	S	S
	400-440V AC	T	T
	480V AC	V	V
	500-550V AC	W	W




# Pushbuttons


## AR22


### ■ Pushbutton switches

Operator	Contact	Momentary action Type	Alternate action Type
Flush round head  AF94-320	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22F0R-10</b> □ <b>AR22F5R-10</b> □ <b>AR22F0R-01</b> □ <b>AR22F5R-01</b> □ <b>AR22F0R-11</b> □ <b>AR22F5R-11</b> □ <b>AR22F0R-20</b> □ <b>AR22F5R-20</b> □ <b>AR22F0R-02</b> □ <b>AR22F5R-02</b> □ <b>AR22F0R-22</b> □ <b>AR22F5R-22</b> □	
Extended round head  AF94-319	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22E0R-10</b> □ <b>AR22E5R-10</b> □ <b>AR22E0R-01</b> □ <b>AR22E5R-01</b> □ <b>AR22E0R-11</b> □ <b>AR22E5R-11</b> □ <b>AR22E0R-20</b> □ <b>AR22E5R-20</b> □ <b>AR22E0R-02</b> □ <b>AR22E5R-02</b> □ <b>AR22E0R-22</b> □ <b>AR22E5R-22</b> □	
Flush round head symbol mark type  AF98-193	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22FAR-10C</b> ■ <b>AR22FBR-10C</b> ■ <b>AR22FAR-01C</b> ■ <b>AR22FBR-01C</b> ■ <b>AR22FAR-11C</b> ■ <b>AR22FBR-11C</b> ■ <b>AR22FAR-20C</b> ■ <b>AR22FBR-20C</b> ■ <b>AR22FAR-02C</b> ■ <b>AR22FBR-02C</b> ■ <b>AR22FAR-22C</b> ■ <b>AR22FBR-22C</b> ■	
Extended round head symbol mark type  AF98-192	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22EAR-10C</b> ■ <b>AR22EBR-10C</b> ■ <b>AR22EAR-01C</b> ■ <b>AR22EBR-01C</b> ■ <b>AR22EAR-11C</b> ■ <b>AR22EBR-11C</b> ■ <b>AR22EAR-20C</b> ■ <b>AR22EBR-20C</b> ■ <b>AR22EAR-02C</b> ■ <b>AR22EBR-02C</b> ■ <b>AR22EAR-22C</b> ■ <b>AR22EBR-22C</b> ■	
Mushroom head (40mm dia.)  AF94-293	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22M0R-10</b> □ <b>AR22M5R-10</b> □ <b>AR22M0R-01</b> □ <b>AR22M5R-01</b> □ <b>AR22M0R-11</b> □ <b>AR22M5R-11</b> □ <b>AR22M0R-20</b> □ <b>AR22M5R-20</b> □ <b>AR22M0R-02</b> □ <b>AR22M5R-02</b> □ <b>AR22M0R-22</b> □ <b>AR22M5R-22</b> □	
Mushroom head (29mm dia.)  AF94-321	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22M4R-10</b> □ <b>AR22M9R-10</b> □ <b>AR22M4R-01</b> □ <b>AR22M9R-01</b> □ <b>AR22M4R-11</b> □ <b>AR22M9R-11</b> □ <b>AR22M4R-20</b> □ <b>AR22M9R-20</b> □ <b>AR22M4R-02</b> □ <b>AR22M9R-02</b> □ <b>AR22M4R-22</b> □ <b>AR22M9R-22</b> □	
Extended with full guard (24mm dia.)  AF94-292	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22G3R-10</b> □ <b>AR22G8R-10</b> □ <b>AR22G3R-01</b> □ <b>AR22G8R-01</b> □ <b>AR22G3R-11</b> □ <b>AR22G8R-11</b> □ <b>AR22G3R-20</b> □ <b>AR22G8R-20</b> □ <b>AR22G3R-02</b> □ <b>AR22G8R-02</b> □ <b>AR22G3R-22</b> □ <b>AR22G8R-22</b> □	

Note: ■ □ See page 04/21

Operator	Contact	Momentary action Type	Alternate action Type
Flush with full guard (24mm dia.)  AF02-68	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22G2R-10</b> □ <b>AR22G7R-10</b> □ <b>AR22G2R-01</b> □ <b>AR22G7R-01</b> □ <b>AR22G2R-11</b> □ <b>AR22G7R-11</b> □ <b>AR22G2R-20</b> □ <b>AR22G7R-20</b> □ <b>AR22G2R-02</b> □ <b>AR22G7R-02</b> □ <b>AR22G2R-22</b> □ <b>AR22G7R-22</b> □	
Mushroom head with full guard (40mm dia.)  AF94-372	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22M3R-10</b> □ <b>AR22M8R-10</b> □ <b>AR22M3R-01</b> □ <b>AR22M8R-01</b> □ <b>AR22M3R-11</b> □ <b>AR22M8R-11</b> □ <b>AR22M3R-20</b> □ <b>AR22M8R-20</b> □ <b>AR22M3R-02</b> □ <b>AR22M8R-02</b> □ <b>AR22M3R-22</b> □ <b>AR22M8R-22</b> □	
Extended with half guard  AF96-236	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22G0R-10</b> □ <b>AR22G5R-10</b> □ <b>AR22G0R-01</b> □ <b>AR22G5R-01</b> □ <b>AR22G0R-11</b> □ <b>AR22G5R-11</b> □ <b>AR22G0R-20</b> □ <b>AR22G5R-20</b> □ <b>AR22G0R-02</b> □ <b>AR22G5R-02</b> □ <b>AR22G0R-22</b> □ <b>AR22G5R-22</b> □	
Push-lock, turn-reset (40mm dia. with white arrow)  KKD08-042	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	— — — — — —	<b>AR22V5R-10</b> □ <b>AR22V5R-01</b> □ <b>AR22V5R-11</b> □ <b>AR22V5R-20</b> □ <b>AR22V5R-02</b> □ <b>AR22V5R-22</b> □
Flush square head  AF94-316	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22F0S-10</b> □ <b>AR22F5S-10</b> □ <b>AR22F0S-01</b> □ <b>AR22F5S-01</b> □ <b>AR22F0S-11</b> □ <b>AR22F5S-11</b> □ <b>AR22F0S-20</b> □ <b>AR22F5S-20</b> □ <b>AR22F0S-02</b> □ <b>AR22F5S-02</b> □ <b>AR22F0S-22</b> □ <b>AR22F5S-22</b> □	
Extended square head  AF94-296	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22E0S-10</b> □ <b>AR22E5S-10</b> □ <b>AR22E0S-01</b> □ <b>AR22E5S-01</b> □ <b>AR22E0S-11</b> □ <b>AR22E5S-11</b> □ <b>AR22E0S-20</b> □ <b>AR22E5S-20</b> □ <b>AR22E0S-02</b> □ <b>AR22E5S-02</b> □ <b>AR22E0S-22</b> □ <b>AR22E5S-22</b> □	
Flush round head with square bezel  AF94-295	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22F0Y-10</b> □ <b>AR22F5Y-10</b> □ <b>AR22F0Y-01</b> □ <b>AR22F5Y-01</b> □ <b>AR22F0Y-11</b> □ <b>AR22F5Y-11</b> □ <b>AR22F0Y-20</b> □ <b>AR22F5Y-20</b> □ <b>AR22F0Y-02</b> □ <b>AR22F5Y-02</b> □ <b>AR22F0Y-22</b> □ <b>AR22F5Y-22</b> □	

Operator	Contact	Momentary action Type	Alternate action Type
Extended round head with square bezel  AF94-297	1NO	AR22E0Y-10□	AR22E5Y-10□
	1NC	AR22E0Y-01□	AR22E5Y-01□
	1NO+1NC	AR22E0Y-11□	AR22E5Y-11□
	2NO	AR22E0Y-20□	AR22E5Y-20□
	2NC	AR22E0Y-02□	AR22E5Y-02□
	2NO+2NC	AR22E0Y-22□	AR22E5Y-22□

Operator	Contact	Momentary action Type	Alternate action Type
Mushroom head with square bezel (29mm dia.)  AF94-298	1NO	AR22M4Y-10□	—
	1NC	AR22M4Y-01□	—
	1NO+1NC	AR22M4Y-11□	—
	2NO	AR22M4Y-20□	—
	2NC	AR22M4Y-02□	—
	2NO+2NC	AR22M4Y-22□	—

• **Button color**

Replace the □ mark by the button color code

Color	Green	Red	White	Blue	Yellow	Orange	Black
Code	G	R	W	S	Y	A	B

Note: AR22V5R type: Red, yellow, black only

• **Available numbers of contact blocks**

Momentary action	Alternate action Push-lock, turn-reset
6-contact block	4-contact block

• **Contact arrangements**

Contact arrangements other than above are available

Contact arrangement	1NO	1NC	1NO+1NC	2NO	2NC	3NO	3NC
Code	10	01	11	20	02	30	03




Contact arrangement	2NO+2NC	4NO	4NC	5NO	5NC	3NO+3NC
Code	22	40	04	50	05	33

• **Symbol mark** (For AR22FAR, FBR, EAR, EBR)

Replace the ■ mark by the symbol mark code

Symbol mark	○	I	Ⓢ	Ⓢ	Ⓢ	Ⓢ	Ⓢ	Ⓢ
Color of button	White	Black	White	Black	White	Black	Clear	
Color of mark	Red		Green		Green		Black	
Code	01	02	03	04	11	12	02B	04B 12B


# Pushbuttons AR22

Operator	Contact (The following contact is only available.)	Button color	Type	Contact operation					
				Contact block		Left 		Right 	
				Mounting position	Type	Free	Depressed	Free	Depressed
Pushbutton with selector ring (2-position)  AF94-355	2NO+2NC	Green Red Black White Yellow Orange Blue	<b>AR22S1R-22G</b> <b>AR22S1R-22R</b> <b>AR22S1R-22B</b> <b>AR22S1R-22W</b> <b>AR22S1R-22Y</b> <b>AR22S1R-22A</b> <b>AR22S1R-22S</b>	(1)	NC	—	—	●	—
				(2)	NC	—	—	●	—
				(3)	NO	—	●	—	●
				(4)	NO	—	●	—	●
	2NO	Green Red Black White Yellow Orange Blue	<b>AR22S2R-20G</b> <b>AR22S2R-20R</b> <b>AR22S2R-20B</b> <b>AR22S2R-20W</b> <b>AR22S2R-20Y</b> <b>AR22S2R-20A</b> <b>AR22S2R-20S</b>	(1)	NO	—	●	—	—
				(2)	NO	—	—	—	●
				(3)					
				(4)					
	2NO+2NC	Green Red Black White Yellow Orange Blue	<b>AR22S2R-22G</b> <b>AR22S2R-22R</b> <b>AR22S2R-22B</b> <b>AR22S2R-22W</b> <b>AR22S2R-22Y</b> <b>AR22S2R-22A</b> <b>AR22S2R-22S</b>	(1)	NC	●	—	■	
				(2)	NC	■		●	—
				(3)	NO	—	●	—	—
				(4)	NO	—	—	—	●
	2NO+2NC	Green Red Black White Yellow Orange Blue	<b>AR22S3R-22G</b> <b>AR22S3R-22R</b> <b>AR22S3R-22B</b> <b>AR22S3R-22W</b> <b>AR22S3R-22Y</b> <b>AR22S3R-22A</b> <b>AR22S3R-22S</b>	(1)	NC	—	—	■	
				(2)	NC	■		—	—
				(3)	NO	—	●	—	—
				(4)	NO	—	—	—	●
	2NO+2NC	Green Red Black White Yellow Orange Blue	<b>AR22S6R-22G</b> <b>AR22S6R-22R</b> <b>AR22S6R-22B</b> <b>AR22S6R-22W</b> <b>AR22S6R-22Y</b> <b>AR22S6R-22A</b> <b>AR22S6R-22S</b>	(1)	NC	●	—	—	Locked
				(2)	NC	●	—	—	
				(3)	NO	—	●	●	
				(4)	NO	—	●	●	

Note: (1) to (4): Contact block mounting position



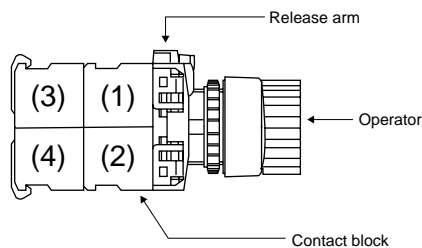

● Contact closed  
— Contact open

## ● Position of contact block






## ■ Emergency stop pushbutton switches

☞ (Direct opening action), conform to EN418

Operator	Contact	Type
Push-lock, turn-reset (Soft-touch 40mm dia. With white arrow)  <small>KKD08-042</small>	1NC 1NO+1NC 2NC 3NC 2NO+2NC 4NC	<b>AR22V0R-01R</b> <b>AR22V0R-11R</b> <b>AR22V0R-02R</b> <b>AR22V0R-03R</b> <b>AR22V0R-22R</b> <b>AR22V0R-04R</b>
Push-lock, turn-reset (40mm dia.)  <small>KKD05-020b</small>	1NC 1NO+1NC 2NC 3NC 2NO+2NC 4NC	<b>AR22V2R-01R</b> <b>AR22V2R-11R</b> <b>AR22V2R-02R</b> <b>AR22V2R-03R</b> <b>AR22V2R-22R</b> <b>AR22V2R-04R</b>
Push-lock, turn-reset (Soft-touch 29mm dia. with white arrow)  <small>KKD06-346</small>	1NC 1NO+1NC 2NC 3NC 2NO+2NC 4NC	<b>AR22VSR-01R</b> <b>AR22VSR-11R</b> <b>AR22VSR-02R</b> <b>AR22VSR-03R</b> <b>AR22VSR-22R</b> <b>AR22VSR-04R</b>
Push-lock, turn-reset (29mm dia.)  <small>KKD06-339</small>	1NC 1NO+1NC 2NC 3NC 2NO+2NC 4NC	<b>AR22V4R-01R</b> <b>AR22V4R-11R</b> <b>AR22V4R-02R</b> <b>AR22V4R-03R</b> <b>AR22V4R-22R</b> <b>AR22V4R-04R</b>







Notes: • Button color : Red only  
 • Contact arrangements indicated in the table can be supplied.

Operator	Contact	Type
Key release push-lock, turn-reset (40mm dia.)  <small>KKD09-020</small>	1NC 1NO+1NC 2NC 3NC 2NO+2NC 4NC	<b>AR22V7R-01R</b> <b>AR22V7R-11R</b> <b>AR22V7R-02R</b> <b>AR22V7R-03R</b> <b>AR22V7R-22R</b> <b>AR22V7R-04R</b>
Push-lock, pull-reset (35mm dia.)  <small>KKD06-334</small>	1NC 1NO+1NC 2NC	<b>AR22Q2R-01R</b> <b>AR22Q2R-11R</b> <b>AR22Q2R-02R</b>
Unibody push-lock, turn-reset (Soft-touch 40mm dia. with white arrow)  <small>KKD05-023b</small>	1NC 1NO+1NC 2NC	<b>AR22VGE-01R</b> <b>AR22VGE-11R</b> <b>AR22VGE-02R</b>

# Emergency Stop Illuminated Pushbuttons AR22

## Emergency stop illuminated pushbutton switches

☺ (Direct opening action), conform to EN418

Operator	Transformer	Contact	LED lamp Type	Incandescent lamp Type	Neon lamp Type
Push-lock, turn-reset (Soft-touch 40mm dia. with white arrow)  KKD06-335	Without	1NC 1NO+1NC 2NC 3NC	AR22V0L-01■3R AR22V0L-11■3R AR22V0L-02■3R AR22V0L-03■3R	AR22V0L-01■4R AR22V0L-11■4R AR22V0L-02■4R AR22V0L-03■4R	— — — —
	With	1NC 1NO+1NC 2NC	AR22V0L-01■3R AR22V0L-11■3R AR22V0L-02■3R	AR22V0L-01■4R AR22V0L-11■4R AR22V0L-02■4R	— — —
Push-lock, turn-reset (40mm dia.)  KKD06-337	Without	1NC 1NO+1NC 2NC 3NC	AR22V2L-01■3R AR22V2L-11■3R AR22V2L-02■3R AR22V2L-03■3R	AR22V2L-01■4R AR22V2L-11■4R AR22V2L-02■4R AR22V2L-03■4R	— — — —
	With	1NC 1NO+1NC 2NC	AR22V2L-01■3R AR22V2L-11■3R AR22V2L-02■3R	AR22V2L-01■4R AR22V2L-11■4R AR22V2L-02■4R	— — —
Push-lock, turn-reset (Soft-touch 40mm dia. transparent in all colors with white arrow)  KKD06-342	Without	1NC 1NO+1NC 2NC 3NC	AR22VDL-01■3R AR22VDL-11■3R AR22VDL-02■3R AR22VDL-03■3R	AR22VDL-01■4R AR22VDL-11■4R AR22VDL-02■4R AR22VDL-03■4R	— — — —
	With	1NC 1NO+1NC 2NC	AR22VDL-01■3R AR22VDL-11■3R AR22VDL-02■3R	AR22VDL-01■4R AR22VDL-11■4R AR22VDL-02■4R	— — —
Push-lock, turn-reset (40mm dia. transparent in all colors)  KKD06-340	Without	1NC 1NO+1NC 2NC 3NC	AR22VAL-01■3R AR22VAL-11■3R AR22VAL-02■3R AR22VAL-03■3R	AR22VAL-01■4R AR22VAL-11■4R AR22VAL-02■4R AR22VAL-03■4R	— — — —
	With	1NC 1NO+1NC 2NC	AR22VAL-01■3R AR22VAL-11■3R AR22VAL-02■3R	AR22VAL-01■4R AR22VAL-11■4R AR22VAL-02■4R	— — —
Push-lock, turn-reset (Soft-touch 29mm dia. with white arrow)  KKD06-344	Without	1NC 1NO+1NC 2NC 3NC	AR22VSL-01■3R AR22VSL-11■3R AR22VSL-02■3R AR22VSL-03■3R	AR22VSL-01■4R AR22VSL-11■4R AR22VSL-02■4R AR22VSL-03■4R	— — — —
	With	1NC 1NO+1NC 2NC	AR22VSL-01■3R AR22VSL-11■3R AR22VSL-02■3R	AR22VSL-01■4R AR22VSL-11■4R AR22VSL-02■4R	— — —
Unibody push-lock, turn-reset (Soft-touch 40mm dia. with white arrow)  KKD05-150	Without	1NC	AR22VGF-01E3R	—	AR22VGF-01■1R
		1NO+1NC	AR22VGF-11E3R	—	AR22VGF-11■1R
		2NC	AR22VGF-02E3R	—	AR22VGF-02■1R

Notes: • Button color: Red only • AR22VGF type: Lamp circuit contacts are provided, see page 04/43. • Contact arrangements indicated in the table can be supplied.

### Voltage

Replace the ■ mark by the lamp voltage code

Transformer	Code	Code		
		LED	Incandescent	Neon
Without	6V DC	6	—	—
	6V AC	A	—	—
	5V AC/DC	—	5	—
	12V AC/DC	B	—	—
	15V AC/DC	C	—	—
	20V AC/DC	—	D	—
	24V AC/DC	E	—	—
	110V AC	—	—	H
	120V AC	—	—	K
	220V AC	—	—	M
	240V AC	—	—	P

Notes: AR22VGF: LED 24V AC/DC and neon only

Transformer	Code	Code	
		LED	Incandescent
With	100-110V AC	H	H
	115-127V AC	L	L
	200-220V AC	M	M
	230-254V AC	Q	Q
	350-380V AC	S	S
	400-440V AC	T	T
	480V AC	V	V
	500-550V AC	W	W

## ■ Selector switches 2-position

Operator	Operation	Knob color or key removable position	Contact	Type		Contact operation (Example)	
				Switch with round bezel	Switch with square bezel	Contact arrangement	Operator position
							<div style="display: flex; justify-content: space-around;"> <span>Left</span> <span>Right</span> </div> <div style="display: flex; justify-content: space-around;"> </div>
<b>Knob</b>   <small>AF94-310</small>	Maintained	Color code: B: Black (Standard) Color other than above are available (G: Green) (R: Red)	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22PR-210B</b> <b>AR22PR-201B</b> <b>AR22PR-211B</b> <b>AR22PR-220B</b> <b>AR22PR-202B</b> <b>AR22PR-222B</b>	<b>AR22PY-210B</b> <b>AR22PY-201B</b> <b>AR22PY-211B</b> <b>AR22PY-220B</b> <b>AR22PY-202B</b> <b>AR22PY-222B</b>	1NO (1)	Upper contact 
	Spring return		 60°	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22PR-010B</b> <b>AR22PR-001B</b> <b>AR22PR-011B</b> <b>AR22PR-020B</b> <b>AR22PR-002B</b> <b>AR22PR-022B</b>	<b>AR22PY-010B</b> <b>AR22PY-001B</b> <b>AR22PY-011B</b> <b>AR22PY-020B</b> <b>AR22PY-002B</b> <b>AR22PY-022B</b>	1NC (1)
<b>Lever</b>   <small>AF94-324</small>	Maintained		1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22WR-210B</b> <b>AR22WR-201B</b> <b>AR22WR-211B</b> <b>AR22WR-220B</b> <b>AR22WR-202B</b> <b>AR22WR-222B</b>	<b>AR22WY-210B</b> <b>AR22WY-201B</b> <b>AR22WY-211B</b> <b>AR22WY-220B</b> <b>AR22WY-202B</b> <b>AR22WY-222B</b>	1NO+1NC (1)	Upper contact 
	Spring return		 60°	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22WR-010B</b> <b>AR22WR-001B</b> <b>AR22WR-011B</b> <b>AR22WR-020B</b> <b>AR22WR-002B</b> <b>AR22WR-022B</b>	<b>AR22WY-010B</b> <b>AR22WY-001B</b> <b>AR22WY-011B</b> <b>AR22WY-020B</b> <b>AR22WY-002B</b> <b>AR22WY-022B</b>	2NO+2NC (1)
<b>Cylindrical knob</b>   <small>AF94-308</small>	Maintained		1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22RR-210B</b> <b>AR22RR-201B</b> <b>AR22RR-211B</b> <b>AR22RR-220B</b> <b>AR22RR-202B</b> <b>AR22RR-222B</b>	<b>AR22RY-210B</b> <b>AR22RY-201B</b> <b>AR22RY-211B</b> <b>AR22RY-220B</b> <b>AR22RY-202B</b> <b>AR22RY-222B</b>	(3)	Upper contact 
	Spring return		 60°	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22RR-010B</b> <b>AR22RR-001B</b> <b>AR22RR-011B</b> <b>AR22RR-020B</b> <b>AR22RR-002B</b> <b>AR22RR-022B</b>	<b>AR22RY-010B</b> <b>AR22RY-001B</b> <b>AR22RY-011B</b> <b>AR22RY-020B</b> <b>AR22RY-002B</b> <b>AR22RY-022B</b>	(4)
<b>Key</b>   <small>KKD09-018</small>	Maintained	■: Key removable position ( ): Key type  See page 04/27	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22J□R-2■10( )</b> <b>AR22J□R-2■01( )</b> <b>AR22J□R-2■11( )</b> <b>AR22J□R-2■20( )</b> <b>AR22J□R-2■02( )</b> <b>AR22J□R-2■22( )</b>	<b>AR22JY-2■10( )</b> <b>AR22JY-2■01( )</b> <b>AR22JY-2■11( )</b> <b>AR22JY-2■20( )</b> <b>AR22JY-2■02( )</b> <b>AR22JY-2■22( )</b>	(1)	
	Spring return		 60°	1NO 1NC 1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22J□R-0A10( )</b> <b>AR22J□R-0A01( )</b> <b>AR22J□R-0A11( )</b> <b>AR22J□R-0A20( )</b> <b>AR22J□R-0A02( )</b> <b>AR22J□R-0A22( )</b>	<b>AR22JY-0A10( )</b> <b>AR22JY-0A01( )</b> <b>AR22JY-0A11( )</b> <b>AR22JY-0A20( )</b> <b>AR22JY-0A02( )</b> <b>AR22JY-0A22( )</b>	




Notes: • (1) to (4): Contact block mounting position  
 • ① - ②, ③ - ④: Contact block terminal No.  
 • Contact arrangements: See page 04/27


● Contact closed

● **Operator**  
 Replace the □ mark by the cylinder key type code  
 Standard type: Blank  
 Long durability type: A

# Selector Switches AR22

## 3-position

Operator	Operation	Knob color	Contact	Type Switch with round bezel	Switch with square bezel	Contact operation (Example)			
						Contact arrange- ment	Operation position		
							L	C	R
 AF94-310	Maintained each 45°	Color code: B: Black (Standard) Color other than above are available (G: Green) (R: Red)	1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22PR-311B</b> <b>AR22PR-320B</b> <b>AR22PR-302B</b> <b>AR22PR-322B</b>	<b>AR22PY-311B</b> <b>AR22PY-320B</b> <b>AR22PY-302B</b> <b>AR22PY-322B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring/manual return ⤴ each 45°		1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22PR-611B</b> <b>AR22PR-620B</b> <b>AR22PR-602B</b> <b>AR22PR-622B</b>	<b>AR22PY-611B</b> <b>AR22PY-620B</b> <b>AR22PY-602B</b> <b>AR22PY-622B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring/manual return ⤵ each 45°		1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22PR-711B</b> <b>AR22PR-720B</b> <b>AR22PR-702B</b> <b>AR22PR-722B</b>	<b>AR22PY-711B</b> <b>AR22PY-720B</b> <b>AR22PY-702B</b> <b>AR22PY-722B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring return ⤴ each 45°		2NO+2NC	<b>AR22PR-122B</b> <b>AR22PY-122B</b>	2NO+2NC (1) (2)	Upper contact ①       ②	Lower contact ①       ②	③       ④	③       ④
 AF94-324	Maintained each 45°		1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22WR-311B</b> <b>AR22WR-320B</b> <b>AR22WR-302B</b> <b>AR22WR-322B</b>	<b>AR22WY-311B</b> <b>AR22WY-320B</b> <b>AR22WY-302B</b> <b>AR22WY-322B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring/manual return ⤴ each 45°		1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22WR-611B</b> <b>AR22WR-620B</b> <b>AR22WR-602B</b> <b>AR22WR-622B</b>	<b>AR22WY-611B</b> <b>AR22WY-620B</b> <b>AR22WY-602B</b> <b>AR22WY-622B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring/manual return ⤵ each 45°		1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22WR-711B</b> <b>AR22WR-720B</b> <b>AR22WR-702B</b> <b>AR22WR-722B</b>	<b>AR22WY-711B</b> <b>AR22WY-720B</b> <b>AR22WY-702B</b> <b>AR22WY-722B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring return ⤴ each 45°		2NO+2NC	<b>AR22WR-122B</b> <b>AR22WY-122B</b>	2NO+2NC (1) (2)	Upper contact ①       ②	Lower contact ①       ②	③       ④	③       ④
 AF94-308	Maintained each 45°		1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22RR-311B</b> <b>AR22RR-320B</b> <b>AR22RR-302B</b> <b>AR22RR-322B</b>	<b>AR22RY-311B</b> <b>AR22RY-320B</b> <b>AR22RY-302B</b> <b>AR22RY-322B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring/manual return ⤴ each 45°		1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22RR-611B</b> <b>AR22RR-620B</b> <b>AR22RR-602B</b> <b>AR22RR-622B</b>	<b>AR22RY-611B</b> <b>AR22RY-620B</b> <b>AR22RY-602B</b> <b>AR22RY-622B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring/manual return ⤵ each 45°		1NO+1NC 2NO 2NC 2NO+2NC	<b>AR22RR-711B</b> <b>AR22RR-720B</b> <b>AR22RR-702B</b> <b>AR22RR-722B</b>	<b>AR22RY-711B</b> <b>AR22RY-720B</b> <b>AR22RY-702B</b> <b>AR22RY-722B</b>	1NO+1NC (1) (2)	Upper contact ③       ④	Lower contact ①       ②	
	Spring return ⤴ each 45°		2NO+2NC	<b>AR22RR-122B</b> <b>AR22RY-122B</b>	2NO+2NC (1) (2)	Upper contact ①       ②	Lower contact ①       ②	③       ④	③       ④

Operator	Operation	Key removable position	Contact	Type Switch with round bezel	Switch with square bezel	Contact operation (Example)			
						Contact arrangement	Operator position		
							L	C	R
 <small>KKD09-018</small>	Maintained each 45°	■: Key removable position (:): Key type	1NO+1NC 2NO 2NC 2NO+2NC	AR22J□R-3■11() AR22J□R-3■20() AR22J□R-3■02() AR22J□R-3■22()	AR22JY-3■11() AR22JY-3■20() AR22JY-3■02() AR22JY-3■22()	1NO+1NC (1) (2)	Upper contact ③	Lower contact ①	
	Spring/manual return ① each 45°		1NO+1NC 2NO 2NC 2NO+2NC	AR22J□R-6■11() AR22J□R-6■20() AR22J□R-6■02() AR22J□R-6■22()	AR22JY-6■11() AR22JY-6■20() AR22JY-6■02() AR22JY-6■22()	(1) (2)	Upper contact ③	Lower contact ①	
	Spring/manual return ① each 45°		1NO+1NC 2NO 2NC 2NO+2NC	AR22J□R-7■11() AR22J□R-7■20() AR22J□R-7■02() AR22J□R-7■22()	AR22JY-7■11() AR22JY-7■20() AR22JY-7■02() AR22JY-7■22()	(1) (2)	Upper contact ③	Lower contact ①	
	Spring return ① each 45°		2NO+2NC	AR22J□R-1E22() AR22JY-1E22()	AR22JY-1E22()	(1) (2) (3) (4)	Upper contact ①	Lower contact ①	

Notes: • Operator position L:Left, C:Center, R:Right  
 • (1) to (4): Contact block mounting position  
 • ① - ②, ③ - ④: Contact block terminal No.

● Contact closed

### • Contact arrangements

Contact arrangements other than above are available

Contact arrangement	1NO	1NC	1NO+1NC	2NO	2NC	3NO	3NC
Code	10	01	11	20	02	30	03








  

Contact arrangement	2NO+2NC	4NO	4NC	5NO	5NC	3NO+3NC
Code	22	40	04	50	05	33

### • Available numbers of contact blocks


Mainted	Spring return Spring/manual return
6-contact block	4-contact block

### • Key removable positions

Code	A	B	C	D	E	F	G
Removable position							
AR22J□R-2	●	●	-	●	-	-	-
AR22J□R-0	●	-	-	-	-	-	-
AR22J□R-3	●	●	●	●	●	●	●
AR22J□R-6	-	-	-	●	●	●	-
AR22J□R-7	●	-	-	-	●	-	●
AR22J□R-1	-	-	-	-	●	-	-

●: Available    -: Not available

### • Position of contact block

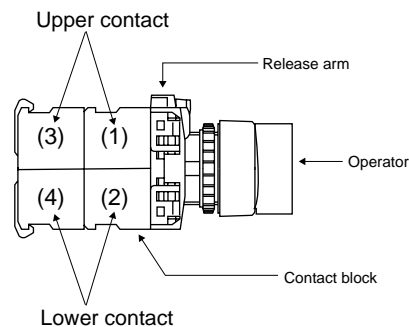

### • Key code No.

Replace the ( ) mark with one of the following key code.  
 A, B, C, D, E and F  
 Standard key code is A.

















### • Operator

Replace the □ mark by the cylinder key type code  
 Standard type: Blank  
 Long durability type: A








# Selector Switches AR22

## ■ Selector switches (control type)

### 3-position

Operator	Operation	Knob color or key removable position	Contact arrangement	Type	
				Switch with round bezel	Switch with square bezel
Knob  <small>AF94-435</small>	Maintained each 45°	Color code: B: Black (Standard) Color other than above are available (G: Green) (R: Red)	Replace the ■ mark by the contact arrangement code (shown on next page).	<b>AR22PCR-3■B</b>	<b>AR22PCY-3■B</b>
	Spring/manual return  each 45°			<b>AR22PCR-6■B</b>	<b>AR22PCY-6■B</b>
	Spring/manual return  each 45°			<b>AR22PCR-7■B</b>	<b>AR22PCY-7■B</b>
	Spring return  each 45°			<b>AR22PCR-1■B</b>	<b>AR22PCY-1■B</b>
Lever  <small>AF94-436</small>	Maintained each 45°		Replace the ■ mark by the contact arrangement code (shown on next page).	<b>AR22WCR-3■B</b>	<b>AR22WCY-3■B</b>
	Spring/manual return  each 45°			<b>AR22WCR-6■B</b>	<b>AR22WCY-6■B</b>
	Spring/manual return  each 45°			<b>AR22WCR-7■B</b>	<b>AR22WCY-7■B</b>
	Spring return  each 45°			<b>AR22WCR-1■B</b>	<b>AR22WCY-1■B</b>
Cylindrical knob  <small>AF94-433</small>	Maintained each 45°		Replace the ■ mark by the contact arrangement code (shown on next page).	<b>AR22RCR-3■B</b>	<b>AR22RCY-3■B</b>
	Spring/manual return  each 45°			<b>AR22RCR-6■B</b>	<b>AR22RCY-6■B</b>
	Spring/manual return  each 45°			<b>AR22RCR-7■B</b>	<b>AR22RCY-7■B</b>
	Spring return  each 45°			<b>AR22RCR-1■B</b>	<b>AR22RCY-1■B</b>
Key  <small>KKD09-016</small>	Maintained each 45°	Replace the □ mark by the key removable position code: A, B, C, D, E, F or G	Replace the ■ mark by the contact arrangement code (shown on next page).	<b>AR22JCR-3□( )</b>	<b>AR22JCY-3□( )</b>
	Spring/manual return  each 45°			<b>AR22JCR-6□( )</b>	<b>AR22JCY-6□( )</b>
	Spring/manual return  each 45°			<b>AR22JCR-7□( )</b>	<b>AR22JCY-7□( )</b>
	Spring return  each 45°			<b>AR22JCR-1E■( )</b>	<b>AR22JCY-1E■( )</b>

### ● Key removable positions

Code	A	B	C	D	E	F	G
Removable position							
AR22JCR-3	●	●	●	●	●	●	●
AR22JCR-6	-	-	-	●	●	●	-
AR22JCR-7	●	-	-	-	●	-	●
AR22JCR-1	-	-	-	-	●	-	-

●: Available    -: Not available

### ● Key code No.

Replace the ( ) mark with one of the following key code.  
 A, B, C, D, E and F  
 Standard key code is A.


• Contact arrangement code (Typical example)

Contact arrangement	Contact arrangement code	Contact operation				
		Contact block		Operator position		
		Mounting position	Type	Left	Center	Right
2NC	01F	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC	[Diagram: Solid bar in Right position]		
		-	-	-	-	-
		-	-	-	-	-
2NO+2NC	014	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC	[Diagram: Solid bar in Right position]		
		(3)	NO			●
		(4)	NO	●		
4NC	01J	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC	[Diagram: Solid bar in Right position]		
		(3)	NC	[Diagram: Solid bar in Left position]		
		(4)	NC	[Diagram: Solid bar in Right position]		
2NO+2NC	024	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC		●	
		(3)	NO			●
		(4)	NO	●		●
2NO+2NC	03C* (Maintained only)	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC			●
		(3)	NO			●
		(4)	NO	●		
2NO+2NC	044*	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC		●	
		(3)	NO			●
		(4)	NO	●		
2NO+2NC	054	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC		●	
		(3)	NO			●
		(4)	NO			●

Notes: ●: Contact closed Blank: Contact open

\* There may be some overlap in the contact when switching between notches.

• Position of contact block

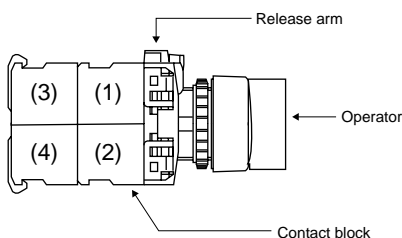

Contact arrangement	Contact arrangement code	Contact operation				
		Contact block		Operator position		
		Mounting position	Type	Left	Center	Right
2NO+2NC	064	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC		●	
		(3)	NO	●		
		(4)	NO	●		●
1NO+1NC	07F	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NO			●
		-	-	-	-	-
		-	-	-	-	-
2NO+2NC	07C* (Maintained only)	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC			●
		(3)	NO	●		
		(4)	NO	●		
2NO+2NC	084	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC		●	
		(3)	NO	●		
		(4)	NO	●		
2NO+2NC	094*	(1)	NC	[Diagram: Solid bar in Center position]		
		(2)	NC		●	
		(3)	NO	●		
		(4)	NO			●
2NO+2NC	104	(1)	NC		●	
		(2)	NC		●	
		(3)	NO	●		●
		(4)	NO	●		●
2NO+2NC	11C* (Maintained only)	(1)	NC		●	
		(2)	NC			●
		(3)	NO	●		●
		(4)	NO	●		

# Selector Switches AR22


## • Contact arrangement code (Typical example)

Contact arrangement	Contact arrangement code	Contact operation				
		Contact block		Operator position		
		Mounting position	Type	Left	Center	Right
2NO+2NC	124*	(1)	NC		●	
		(2)	NC		●	
		(3)	NO	●		●
		(4)	NO	●		
2NO+2NC	134*	(1)	NC		●	
		(2)	NC		●	
		(3)	NO	●		●
		(4)	NO			●
3NO+1NC	14D* (Maintained only)	(1)	NO	●		
		(2)	NC		●	
		(3)	NO	●		
		(4)	NO			●
3NO+1NC	15A*	(1)	NO			●
		(2)	NC		●	
		(3)	NO			●
		(4)	NO	●		
2NO+2NC	164	(1)	NC		●	
		(2)	NC		●	
		(3)	NO	●		
		(4)	NO	●		
2NO+2NC	174*	(1)	NC		●	
		(2)	NC		●	
		(3)	NO	●		
		(4)	NO			●
2NO+2NC	184	(1)	NC		●	
		(2)	NC		●	
		(3)	NO			●
		(4)	NO			●

Notes: ●: Contact closed Blank: Contact open




\* There may be some overlap in the contact when switching between notches.
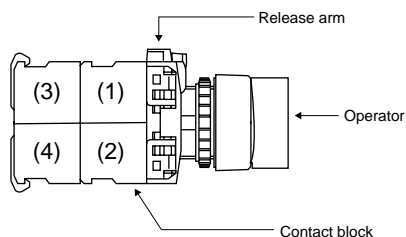
## • Position of contact block



Contact arrangement	Contact arrangement code	Contact operation				
		Contact block		Operator position		
		Mounting position	Type	Left	Center	Right
2NO+2NC	194	(1)	NC		●	
		(2)	NC	●		
		(3)	NO	●		
		(4)	NO			●
4NO	20B	(1)	NO			●
		(2)	NO	●		
		(3)	NO			●
		(4)	NO	●		

4, 5-position


Operator	Contact (The following contact is only available.)	Operation	Knob color	Contact arrangement	Type	
					Switch with round bezel	Switch with square bezel
Knob  AF94-435	2NO+2NC	4-position maintained	Color code: B: Black (Standard) Color other than above are available (G: Green) (R: Red)	Replace the ■ mark by the contact arrangement code (shown below)	AR22PCR-4■B	AR22PCY-4■B
		5-position maintained			AR22PCR-5■B	AR22PCY-5■B
Lever  AF94-436	2NO+2NC	4-position maintained			AR22WCR-4■B	AR22WCY-4■B
		5-position maintained			AR22WCR-5■B	AR22WCY-5■B
Cylindrical knob  AF94-433	2NO+2NC	4-position maintained			AR22RCR-4■B	AR22RCY-4■B
		5-position maintained			AR22RCR-5■B	AR22RCY-5■B

04


● Contact arrangement code

Position	Contact arrangement	Contact arrangement code	Contact operation		Operator position				
			Contact block		1	2	3	4	5
			Mounting position	Type					
4-position	2NO+2NC	41C* (Maintained only)	(1)	NC			●		
			(2)	NC	●				
			(3)	NO		●			
			(4)	NO				●	
5-position	2NO+2NC	51C* (Maintained only)	(1)	NC				●	
			(2)	NC		●			
			(3)	NO	●				
			(4)	NO					●

● Position of contact block

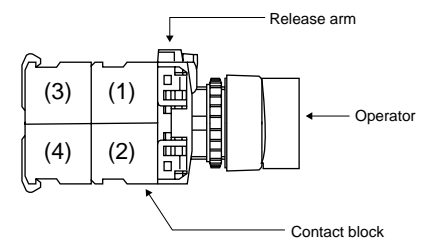

Operator position  
4-position      5-position







Notes: ●: Contact closed  
\* There may be some overlap in the contact when switching between notches.

# Illuminated Selector Switches





## AR22

### ■ Illuminated selector switches

#### 2-position

Operator	Operation	Contact	LED lamp		Incandescent lamp		
			Transformer	Type	Transformer	Type	
Knob  <small>AF94-306</small>	Maintained	1NO 1NC 1NO+1NC 2NO+2NC	Without	AR22PL-210■□ AR22PL-201■□ AR22PL-211■□ AR22PL-222■□	Without	AR22PL-210■□ AR22PL-201■□ AR22PL-211■□ AR22PL-222■□	
			With	AR22PL-210■□ AR22PL-201■□ AR22PL-211■□ AR22PL-220■□	With	AR22PL-210■□ AR22PL-201■□ AR22PL-211■□ AR22PL-220■□	
	Spring return  60°	1NO 1NC 1NO+1NC 2NO	Without	AR22PL-010■□ AR22PL-001■□ AR22PL-011■□ AR22PL-020■□	Without	AR22PL-010■□ AR22PL-001■□ AR22PL-011■□ AR22PL-020■□	
			With	AR22PL-010■□ AR22PL-001■□ AR22PL-011■□ AR22PL-020■□	With	AR22PL-010■□ AR22PL-001■□ AR22PL-011■□ AR22PL-020■□	
	Knob with square bezel  <small>AF94-360</small>	Maintained	1NO 1NC 1NO+1NC 2NO+2NC	Without	AR22PP-210■□ AR22PP-201■□ AR22PP-211■□ AR22PP-222■□	Without	AR22PP-210■□ AR22PP-201■□ AR22PP-211■□ AR22PP-222■□
				With	AR22PP-210■□ AR22PP-201■□ AR22PP-211■□ AR22PP-220■□	With	AR22PP-210■□ AR22PP-201■□ AR22PP-211■□ AR22PP-220■□
Spring return  60°		1NO 1NC 1NO+1NC 2NO	Without	AR22PP-010■□ AR22PP-001■□ AR22PP-011■□ AR22PP-020■□	Without	AR22PP-010■□ AR22PP-001■□ AR22PP-011■□ AR22PP-020■□	
			With	AR22PP-010■□ AR22PP-001■□ AR22PP-011■□ AR22PP-020■□	With	AR22PP-010■□ AR22PP-001■□ AR22PP-011■□ AR22PP-020■□	

### 3-position

Operator	Operation	Contact	LED lamp		Incandescent lamp	
			Transformer	Type	Transformer	Type
Knob  <small>AF94-306</small>	Maintained	1NO+1NC 2NO+2NC	Without	AR22PL-311■□ AR22PL-322■□	Without	AR22PL-311■□ AR22PL-322■□
			With	AR22PL-311■□		AR22PL-311■□
	Spring/manual return  each 45°	1NO+1NC 1NO+1NC	Without	AR22PL-611■□ AR22PL-611■□	Without	AR22PL-611■□ AR22PL-611■□
			With	AR22PL-711■□ AR22PL-711■□	Without	AR22PL-711■□ AR22PL-711■□
Knob with square bezel  <small>AF94-360</small>	Maintained	1NO+1NC 2NO+2NC	Without	AR22PP-311■□ AR22PP-322■□	Without	AR22PP-311■□ AR22PP-322■□
			With	AR22PP-311■□		AR22PP-311■□
	Spring/manual return  each 45°	1NO+1NC 1NO+1NC	Without	AR22PP-611■□ AR22PP-611■□	Without	AR22PP-611■□ AR22PP-611■□
			With	AR22PP-711■□ AR22PP-711■□	Without	AR22PP-711■□ AR22PP-711■□

Note: □, ■ See page 04/33

- Replace the ■ mark by the following lamp voltage code

Transformer	Voltage	Code	
		LED	Incandescent
Without	5V AC/DC	—	5
	6V DC	6	—
	6V AC	A	—
	12V AC/DC	B	—
	15V AC/DC	C	C
	20V AC/DC	—	D
	24V AC/DC	E	E
With	100-110V AC	H	H
	115-127V AC	L	L
	200-220V AC	M	M
	230-254V AC	Q	Q
	350-380V AC	S	S
	400-440V AC	T	T
	480V AC	V	V
	500-550V AC	W	W

- Replace the □ mark by the following knob color code

Color	Green	Red	White	Blue	Yellow	Orange
Code	G	R	W	S	Y	A

- Up to 4-contact of contact arrangement can be made.  
Available numbers of contacts are as follow.

No. of position	Operation	Without transformer	With transformer
2-position	Maintained	4-contact	3-contact
	Spring return	3-contact	2-contact
3-position	Maintained	4-contact	3-contact
	Spring/manual return	3-contact	2-contact

- Contact arrangement and operator position

### 2-position

Transformer	Contact arrangement	Contact block		Operator position	
		Mounting position	Type	Left	Right
With/without	1NO	(1)	NO	—	●
With/without	1NC	(1)	NC	●	—
Without	1NO+1NC	(1)	NO	—	●
		(2)	NC	●	—
With	1NO+1NC	(1)	NC	●	—
		(2)	NO	—	●
With/without	2NO	(1)	NO	—	●
		(2)	NO	—	●
Without	2NO+2NC *1	(1)	NO	—	●
		(2)	NC	●	—
		(3)	NO	—	●
		(4)	NC	●	—

Notes: \*1: AR22PL-2, AR22PP-2

●: Contact closed, —: Contact open

### 3-position

Transformer	Contact arrangement	Contact block		Operator position		
		Mounting position	Type	Left	Center	Right
Without	1NO+1NC *1	(1)	NO	●	—	—
		(2)	NC	—	—	●
	1NO+1NC *2	(1)	NO	—	—	●
		(2)	NC	●	—	—
	2NO+2NC *3	(1)	NO	●	—	—
		(2)	NC	—	—	●
(3)	NO	●	—	—	—	
(4)	NC	—	—	—	●	
With	1NO+1NC *1	(1)	NC	—	—	●
		(2)	NO	●	—	—
	1NO+1NC *2	(1)	NC	●	—	—
		(2)	NO	—	—	●

Notes: \*1: AR22PL-3, 6 AR22PP-3, 6


\*3: AR22PL-3 AR22PP-3

\*2: AR22PL-7, AR22PP-7


●: Contact closed, —: Contact open

- Position of contact block

#### Without transformer

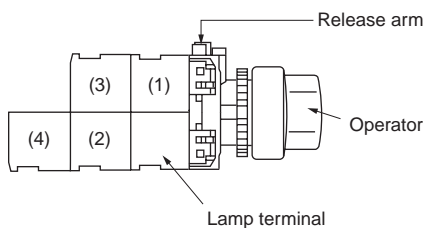

#### With transformer

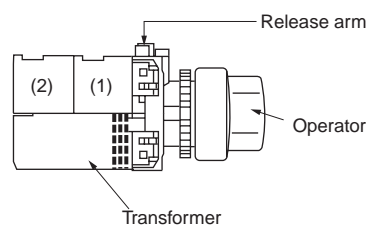

# Pilot Lights DR22

## ■ Pilot lights/standard

Lens	Transformer	LED lamp Lamp voltage	Type	Incandescent lamp Lamp voltage	Type
Dome  AF94-333	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22D0L-A3□ DR22D0L-63□ DR22D0L-B3□ DR22D0L-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22D0L-54□ — DR22D0L-C4□ DR22D0L-E4□
	With	100–110V AC 200–220V AC	DR22D0L-H3□ DR22D0L-M3□	100–110V AC 200–220V AC	DR22D0L-H4□ DR22D0L-M4□
Extended round  AF94-332	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22E3L-A3□ DR22E3L-63□ DR22E3L-B3□ DR22E3L-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22E3L-54□ — DR22E3L-C4□ DR22E3L-E4□
	With	100–110V AC 200–220V AC	DR22E3L-H3□ DR22E3L-M3□	100–110V AC 200–220V AC	DR22E3L-H4□ DR22E3L-M4□
Faceted  AF96-189	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22K0L-A3□ DR22K0L-63□ DR22K0L-B3□ DR22K0L-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22K0L-54□ — DR22K0L-C4□ DR22K0L-E4□
	With	100–110V AC 200–220V AC	DR22K0L-H3□ DR22K0L-M3□	100–110V AC 200–220V AC	DR22K0L-H4□ DR22K0L-M4□
Flush square  AF94-330	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22F3M-A3□ DR22F3M-63□ DR22F3M-B3□ DR22F3M-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22F3M-54□ — DR22F3M-C4□ DR22F3M-E4□
	With	100–110V AC 200–220V AC	DR22F3M-H3□ DR22F3M-M3□	100–110V AC 200–220V AC	DR22F3M-H4□ DR22F3M-M4□
Flush square (Transparent lens)  AF94-443	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22F4M-A3□ DR22F4M-63□ DR22F4M-B3□ DR22F4M-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22F4M-54□ — DR22F4M-C4□ DR22F4M-E4□
	With	100–110V AC 200–220V AC	DR22F4M-H3□ DR22F4M-M3□	100–110V AC 200–220V AC	DR22F4M-H4□ DR22F4M-M4□
Flush square (12mm high frame)  AF94-380	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22F5M-A3□ DR22F5M-63□ DR22F5M-B3□ DR22F5M-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22F5M-54□ — DR22F5M-C4□ DR22F5M-E4□
	With	100–110V AC 200–220V AC	DR22F5M-H3□ DR22F5M-E3□	100–110V AC 200–220V AC	DR22F5M-H4□ DR22F5M-M4□
Extended square  AF95-685 AF94-380	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22E3M-A3□ DR22E3M-63□ DR22E3M-B3□ DR22E3M-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22E3M-54□ — DR22E3M-C4□ DR22E3M-E4□
	With	100–110V AC 200–220V AC	DR22E3M-H3□ DR22E3M-M3□	100–110V AC 200–220V AC	DR22E3M-H4□ DR22E3M-M4□
Flush rectangular  AF96-237	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22E3N-A3□ DR22E3N-63□ DR22E3N-B3□ DR22E3N-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22E3N-54□ — DR22E3N-C4□ DR22E3N-E4□
	With	100–110V AC 200–220V AC	DR22E3N-H3□ DR22E3N-M3□	100–110V AC 200–220V AC	DR22E3N-H4□ DR22E3N-M4□
Extended round with square bezel  AF94-331	Without	6V AC 6V DC 12V AC/DC 24V AC/DC	DR22E3P-A3□ DR22E3P-63□ DR22E3P-B3□ DR22E3P-E3□	5.5V AC/DC — 15V AC/DC 24V AC/DC	DR22E3P-54□ — DR22E3P-C4□ DR22E3P-E4□
	With	100–110V AC 200–220V AC	DR22E3P-H3□ DR22E3P-M3□	100–110V AC 200–220V AC	DR22E3P-H4□ DR22E3P-M4□

Note: □ See page 04/37

■ Pilot lights/short-body without transformer

Lens	LED lamp		Incandescent lamp	
	Lamp voltage	Type	Lamp voltage	Type
 AF98-88	5.5V AC/DC	—	5.5V AC/DC	DR22D0L-58□
	6V AC	DR22D0L-A9□	6V AC	—
	6V DC	DR22D0L-69□	6V DC	—
	12V AC/DC	DR22D0L-B9□	15V AC/DC	DR22D0L-C8□
	24V AC/DC	DR22D0L-E9□	24V AC/DC	DR22D0L-E8□
 AF98-90	5.5V AC/DC	—	5.5V AC/DC	DR22E3L-58□
	6V AC	DR22E3L-A9□	6V AC	—
	6V DC	DR22E3L-69□	6V DC	—
	12V AC/DC	DR22E3L-B9□	15V AC/DC	DR22E3L-C8□
	24V AC/DC	DR22E3L-E9□	24V AC/DC	DR22E3L-E8□
 AF98-89	5.5V AC/DC	—	5.5V AC/DC	DR22K0L-58□
	6V AC	DR22K0L-A9□	6V AC	—
	6V DC	DR22K0L-69□	6V DC	—
	12V AC/DC	DR22K0L-B9□	15V AC/DC	DR22K0L-C8□
	24V AC/DC	DR22K0L-E9□	24V AC/DC	DR22K0L-E8□
 AF98-92	5.5V AC/DC	—	5.5V AC/DC	DR22F3M-58□
	6V AC	DR22F3M-A9□	6V AC	—
	6V DC	DR22F3M-69□	6V DC	—
	12V AC/DC	DR22F3M-B9□	15V AC/DC	DR22F3M-C8□
	24V AC/DC	DR22F3M-E9□	24V AC/DC	DR22F3M-E8□
 AF98-92	5.5V AC/DC	—	5.5V AC/DC	DR22F4M-58□
	6V AC	DR22F4M-A9□	6V AC	—
	6V DC	DR22F4M-69□	6V DC	—
	12V AC/DC	DR22F4M-B9□	15V AC/DC	DR22F4M-C8□
	24V AC/DC	DR22F4M-E9□	24V AC/DC	DR22F4M-E8□
 AF98-94	5.5V AC/DC	—	5.5V AC/DC	DR22F5M-58□
	6V AC	DR22F5M-A9□	6V AC	—
	6V DC	DR22F5M-69□	6V DC	—
	12V AC/DC	DR22F5M-B9□	15V AC/DC	DR22F5M-C8□
	24V AC/DC	DR22F5M-E9□	24V AC/DC	DR22F5M-E8□
 AF98-93	5.5V AC/DC	—	5.5V AC/DC	DR22E3M-58□
	6V AC	DR22E3M-A9□	6V AC	—
	6V DC	DR22E3M-69□	6V DC	—
	12V AC/DC	DR22E3M-B9□	15V AC/DC	DR22E3M-C8□
	24V AC/DC	DR22E3M-E9□	24V AC/DC	DR22E3M-E8□
 KK02-234B	5.5V AC/DC	—	5.5V AC/DC	DR22E3N-58□
	6V AC	DR22E3N-A9□	6V AC	—
	6V DC	DR22E3N-69□	6V DC	—
	12V AC/DC	DR22E3N-B9□	15V AC/DC	DR22E3N-C8□
	24V AC/DC	DR22E3N-E9□	24V AC/DC	DR22E3N-E8□
 AF98-91	5.5V AC/DC	—	5.5V AC/DC	DR22E3P-58□
	6V AC	DR22E3P-A9□	6V AC	—
	6V DC	DR22E3P-69□	6V DC	—
	12V AC/DC	DR22E3P-B9□	15V AC/DC	DR22E3P-C8□
	24V AC/DC	DR22E3P-E9□	24V AC/DC	DR22E3P-E8□

Note: □ See page 04/37

# Pilot Lights DR22

## ■ Pilot lights/short-body with transformer

Lens	LED lamp		Incandescent lamp	
	Lamp voltage	Type	Lamp voltage	Type
Dome  <small>AF97-137</small>	100–110V AC	<b>DR22D0L-H9</b> □	100–110V AC	<b>DR22D0L-H8</b> □
	200–220V AC	<b>DR22D0L-M9</b> □	200–220V AC	<b>DR22D0L-M8</b> □
Extended round  <small>AF97-138</small>	100–110V AC	<b>DR22E3L-H9</b> □	100–110V AC	<b>DR22E3L-H8</b> □
	200–220V AC	<b>DR22E3L-M9</b> □	200–220V AC	<b>DR22E3L-M8</b> □
Faceted  <small>KK02-130A</small>	100–110V AC	<b>DR22K0L-H9</b> □	100–110V AC	<b>DR22K0L-H8</b> □
	200–220V AC	<b>DR22K0L-M9</b> □	200–220V AC	<b>DR22K0L-M8</b> □
Flush square  <small>AF97-134</small>	100–110V AC	<b>DR22F3M-H9</b> □	100–110V AC	<b>DR22F3M-H8</b> □
	200–220V AC	<b>DR22F3M-M9</b> □	200–220V AC	<b>DR22F3M-M8</b> □
Flush square (Transparent lens)  <small>AF97-133</small>	100–110V AC	<b>DR22F4M-H9</b> □	100–110V AC	<b>DR22F4M-H8</b> □
	200–220V AC	<b>DR22F4M-M9</b> □	200–220V AC	<b>DR22F4M-M8</b> □
Flush square (12mm high frame)  <small>AF97-136</small>	100–110V AC	<b>DR22F5M-H9</b> □	100–110V AC	<b>DR22F5M-H8</b> □
	200–220V AC	<b>DR22F5M-M9</b> □	200–220V AC	<b>DR22F5M-M8</b> □
Extended square  <small>KK02-134A</small>	100–110V AC	<b>DR22E3M-H9</b> □	100–110V AC	<b>DR22E3M-H8</b> □
	200–220V AC	<b>DR22E3M-M9</b> □	200–220V AC	<b>DR22E3M-M8</b> □
Flush rectangular  <small>KK02-235B</small>	100–110V AC	<b>DR22E3N-H9</b> □	100–110V AC	<b>DR22E3N-H8</b> □
	200–220V AC	<b>DR22E3N-M9</b> □	200–220V AC	<b>DR22E3N-M8</b> □
Extended round with square bezel  <small>AF97-135</small>	100–110V AC	<b>DR22E3P-H9</b> □	100–110V AC	<b>DR22E3P-H8</b> □
	200–220V AC	<b>DR22E3P-M9</b> □	200–220V AC	<b>DR22E3P-M8</b> □

Note: □ See page 04/37

• **Lens color**

Replace the □ mark by the following lens color code

Color	Green	Red	White	Blue	Yellow	Orange
Code	G	R	W	S	Y	A

• **Lamp voltage**




Available lamp voltage are as follow.

Description	Voltage	Code		Short-body type	
		Standard type LED	Incandescent	LED	Incandescent
Without transformer	5.5V AC/DC	–	54	–	58
	6V AC	A3	–	A9	–
	6V DC	63	–	69	–
	12V AC/DC	B3	–	B9	–
	15V AC/DC	C3	C4	C9	C8
	20V AC/DC	–	D4	–	D8
	24V AC/DC	E3	E4	E9	E8
With transformer	100-110V AC	H3	H4	H9	H8
	115-127V AC	L3	L4	L9	L8
	200-220V AC	M3	M4	M9	M8
	230-254V AC	Q3	Q4	–	–
	350-380V AC	S3	S4	–	–
	400-440V AC	T3	T4	–	–
	480V AC	V3	V4	–	–
	500-550V AC	W3	W4	–	–
With resistor unit	110V DC	H7	–	–	–

# Joy Stick Selector Switches


## AR22

### ■ Joy stick selector switches

Handle	Terminal	Operating directions	Contact arrangement	Type	
				Manual return	Spring return
 <small>AF97-49</small>	Screw	↑ ↓	1NO × 2	<b>AR22A0N-A0A0B</b>	<b>AR22A5N-A0A0B</b>
			1NO + 1NC × 2	<b>AR22A0N-1010B</b>	<b>AR22A5N-1010B</b>
		↔	1NO × 4	<b>AR22A0N-AAAAB</b>	<b>AR22A5N-AAAAB</b>
			1NO + 1NC × 4	<b>AR22A0N-1111B</b>	<b>AR22A5N-1111B</b>
	Solder/tab	↑ ↓	1NO + 1NC × 2	<b>AR22A0H-1010B</b>	<b>AR22A5H-1010B</b>
			2NO + 2NC × 2	<b>AR22A0H-2020B</b>	<b>AR22A5H-2020B</b>
↔	↑ ↓	1NO + 1NC × 4	<b>AR22A0H-1111B</b>	<b>AR22A5H-1111B</b>	
		2NO + 2NC × 4	<b>AR22A0H-2222B</b>	<b>AR22A5H-2222B</b>	
 <small>AF97-45</small>	Screw	↑ ↓	1NO × 2	<b>AR22A1N-A0A0B</b>	<b>AR22A6N-A0A0B</b>
			1NO + 1NC × 2	<b>AR22A1N-1010B</b>	<b>AR22A6N-1010B</b>
		↔	1NO × 4	<b>AR22A1N-AAAAB</b>	<b>AR22A6N-AAAAB</b>
			1NO + 1NC × 4	<b>AR22A1N-1111B</b>	<b>AR22A6N-1111B</b>
	Solder/tab	↑ ↓	1NO + 1NC × 2	<b>AR22A1H-1010B</b>	<b>AR22A6H-1010B</b>
			2NO + 2NC × 2	<b>AR22A1H-2020B</b>	<b>AR22A6H-2020B</b>
↔	↑ ↓	1NO + 1NC × 4	<b>AR22A1H-1111B</b>	<b>AR22A6H-1111B</b>	
		2NO + 2NC × 4	<b>AR22A1H-2222B</b>	<b>AR22A6H-2222B</b>	
 <small>AF97-56</small>	Screw	↑ ↓	1NO × 2	<b>AR22A2N-A0A0B</b>	<b>AR22A7N-A0A0B</b>
			1NO + 1NC × 2	<b>AR22A2N-1010B</b>	<b>AR22A7N-1010B</b>
		↔	1NO × 4	<b>AR22A2N-AAAAB</b>	<b>AR22A7N-AAAAB</b>
			1NO + 1NC × 4	<b>AR22A2N-1111B</b>	<b>AR22A7N-1111B</b>
	Solder/tab	↑ ↓	1NO + 1NC × 2	<b>AR22A2H-1010B</b>	<b>AR22A7H-1010B</b>
			2NO + 2NC × 2	<b>AR22A2H-2020B</b>	<b>AR22A7H-2020B</b>
↔	↑ ↓	1NO + 1NC × 4	<b>AR22A2H-1111B</b>	<b>AR22A7H-1111B</b>	
		2NO + 2NC × 4	<b>AR22A2H-2222B</b>	<b>AR22A7H-2222B</b>	

#### ● Operating direction

- Directions other than those shown in the table above can be provided.
- For types AR22A□N-**1** **2** **3** **4** B, designate the contact arrangement codes for the necessary operating directions (**1**: Upper, **2**: Right, **3**: Lower, **4**: Left). Designate "0" for unnecessary directions.

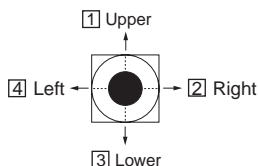




#### ● Contact arrangement

Contact arrangement		–	1NO	1NC	1NO+1NC	2NO	2NC	2NO+2NC
Manual return Spring return	Screw	0	A	B	1	D	E	–
	Solder/Tab	0	–	–	1	–	–	2

- Spring/manual return are also available, contact FUJI.

■ Buzzers

Sound	Description	Transformer	Operating voltage	Type
 KKD08-053	<ul style="list-style-type: none"> <li>• LED operation indicator (Red)</li> <li>• Intermittent/continuous sound selection</li> <li>• Sound level: 90dB (0.1m) 70dB (1m)</li> </ul>	Without	6V AC 6V DC 12 to 24V AC/DC 35 to 48V AC/DC	<b>DR22B5-AB</b> <b>DR22B5-6B</b> <b>DR22B5-EB</b> <b>DR22B5-FB</b>
		With	100 to 110V AC 200 to 220V AC	<b>DR22B5-HB</b> <b>DR22B5-MB</b>
		With resistor unit	100 to 110V DC	<b>DR22B5-1B</b>
 AF96-376	<ul style="list-style-type: none"> <li>• Sound volume adjustment</li> <li>• Sound level: 80 to 90dB (0.1m) 60 to 70dB (1m)</li> </ul>	Without	24V AC/DC	<b>DR22B3-EB</b>
		With	100 to 110V AC 200 to 220V AC	<b>DR22B3-HB</b> <b>DR22B3-MB</b>
 AF96-244	<ul style="list-style-type: none"> <li>• Intermittent/continuous sound selection</li> <li>• Sound level: 80dB (0.1m) 60dB (1m)</li> </ul>	Without	6V AC 6V DC 12 to 24V AC/DC 35 to 48V AC/DC	<b>DR22B8-AB</b> <b>DR22B8-6B</b> <b>DR22B8-EB</b> <b>DR22B8-FB</b>
		With	100 to 110V AC 200 to 220V AC	<b>DR22B8-HB</b> <b>DR22B8-MB</b>
		With resistor unit	100 to 110V DC	<b>DR22B8-1B</b>

- Notes:
- Intermittent/continuous sound selection (DR22B5, B8)  
See the "Short-circuit terminal" in the dimensions diagram on the 04/49 page, and select as follows:
    - Short-circuit terminal mounted → Intermittent sound
    - Short-circuit terminal not mounted → Continuous sound

- Sound volume adjustment (DR22B3)  
Use a flat-bladed screwdriver with a narrow tip to gently turn "Control knob" shown in the dimensions diagram on the 04/49 page, as follows.
  - Clockwise → Increase sound pressure
  - Counterclockwise → Decrease sound pressure

04

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22 and DR22


### Dimensions

#### ■ Dimensions, mm


#### ● Illuminated pushbutton switches

#### Flush/Extended


With transformer

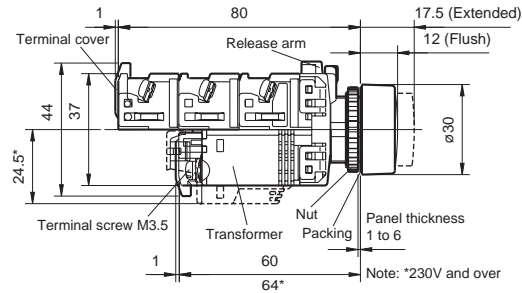


AR22F0L, F5L  
AR22E0L, E5L

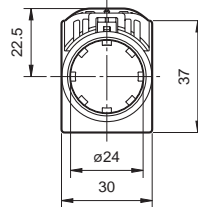


AR22F0M, F5M  
AR22E0M, E5M

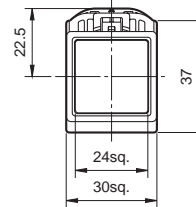


AR22F0P, F5P  
AR22E0P, E5P

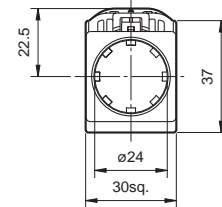


Without transformer

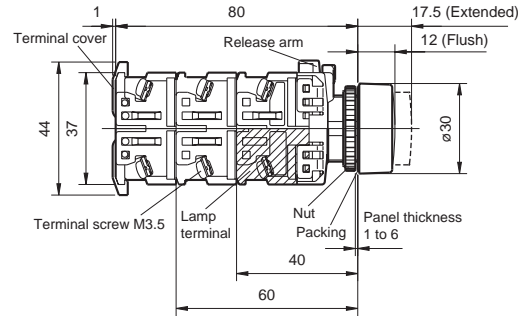


#### Mushroom (40mm dia.)

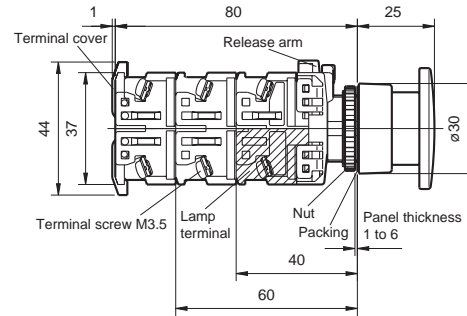


AR22M0L, M5L

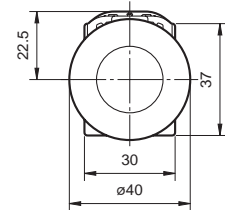


#### Mushroom (29mm dia.)

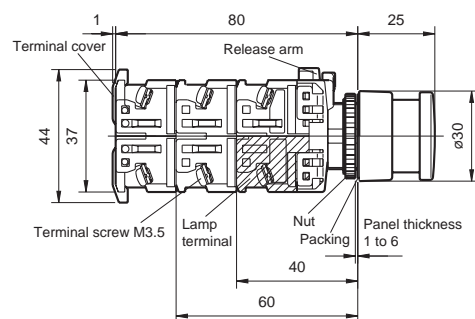


AR22M4L, M9L

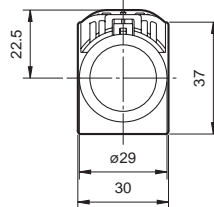


AR22M4P

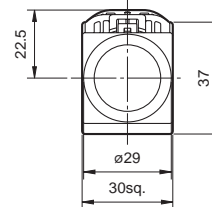


#### Extended with full guard

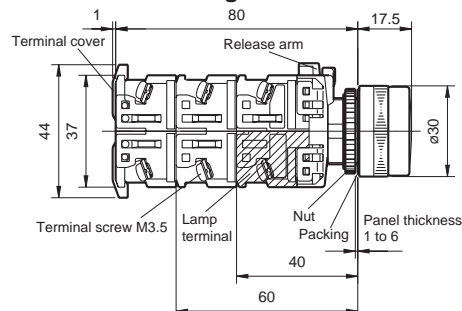


AR22G4L, G9L  
AR22G1L, G6L

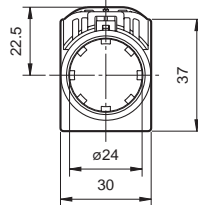


#### Extended with full guard (with openings)

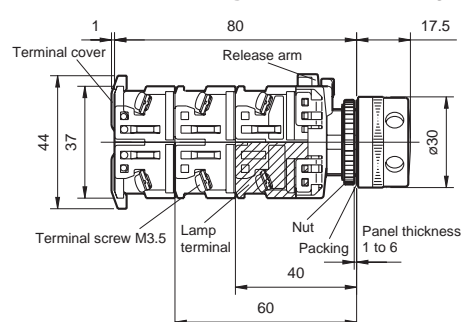


AR22G2L, G7L

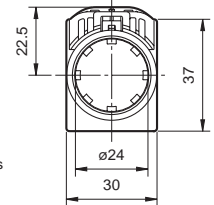

#### Push-lock, turn-reset

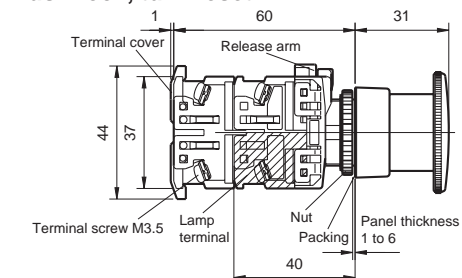


AR22V5L

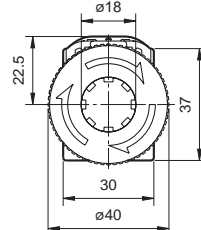


# Pushbuttons/Selectors/Pilot Lights/Buzzers AR22 and DR22 Dimensions

■ Dimensions, mm  
● Pushbutton switches


**Flush/Extended**

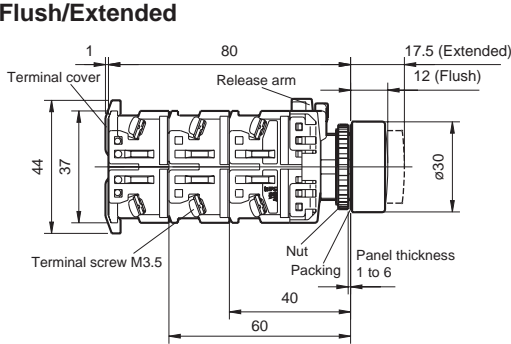


AR22F0R, F5R  
AR22E0R, E5R  
AR22FAR, FBR  
AR22EAR, EBR

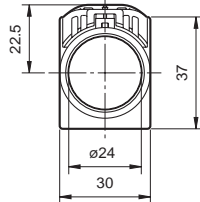


AR22F0S, F5S  
AR22E0S, E5S

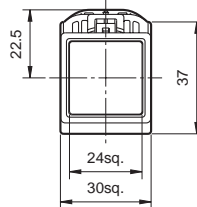


AR22F0Y, F5Y  
AR22E0Y, E5Y

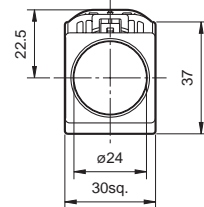


**Mushroom (40mm dia.)**

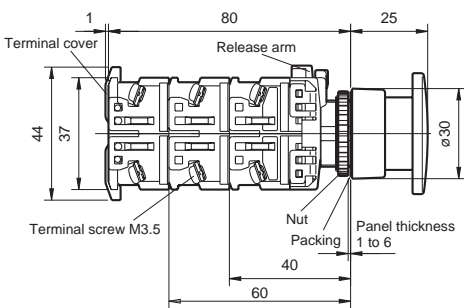


AR22M0R, M5R

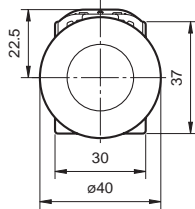


**Flush/Extended with full guard**

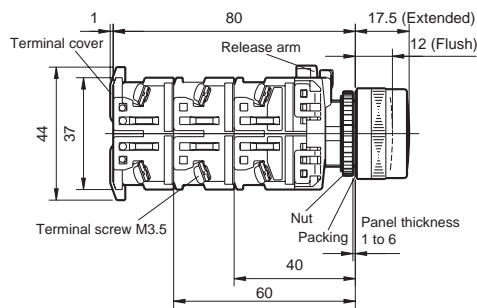


AR22G3R, G8R  
AR22G2R, G7R

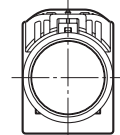


**Mushroom (29mm dia.)**

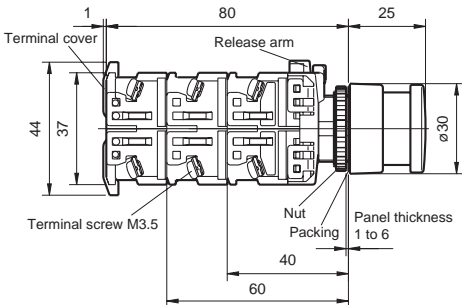


AR22M4R, M9R

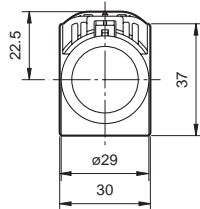


AR22M4Y

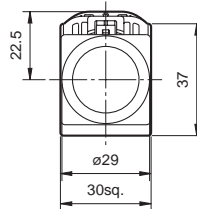


**Extended with half guard**

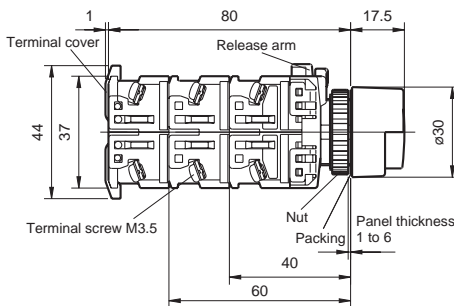


AR22G0R, G5R

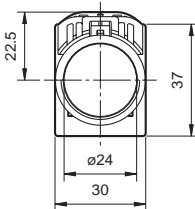


**Mushroom with full guard (40mm dia.)**

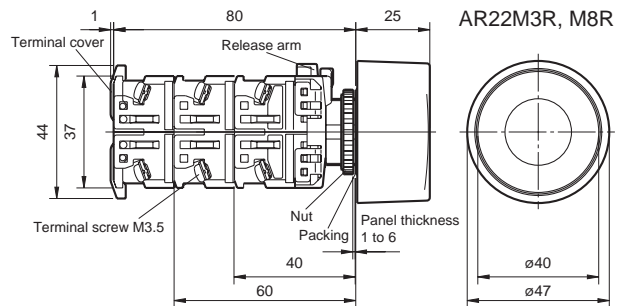


AR22M3R, M8R

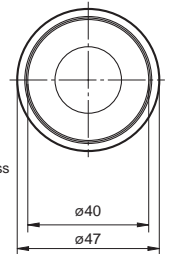


**Pushbutton with selector ring**

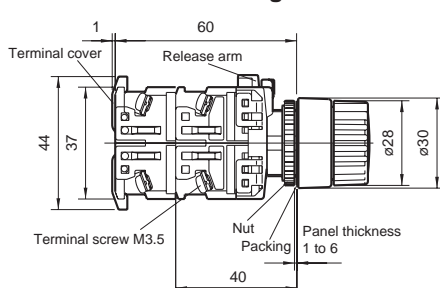


AR22S1R, S2R  
AR22S3R, S6R

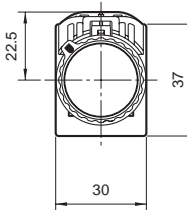

**Push-lock, turn-reset**

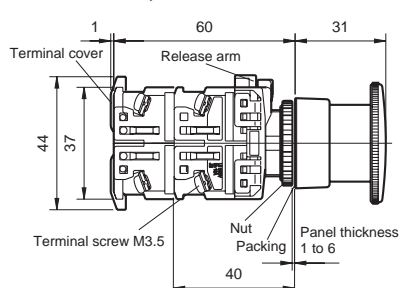

AR22V5R

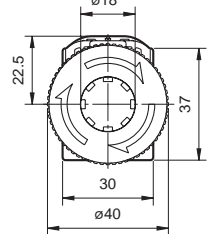


# Pushbuttons/Selectors/Pilot Lights/Buzzers AR22 and DR22 Dimensions


## ■ Dimensions, mm

### ● Emergency stop pushbutton switches


#### Push-lock, turn-reset (40mm dia.)

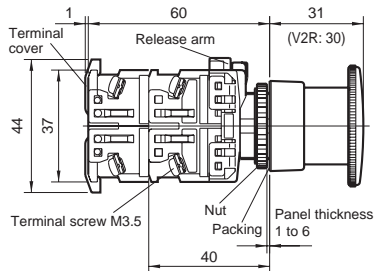


AR22V0R, V2R

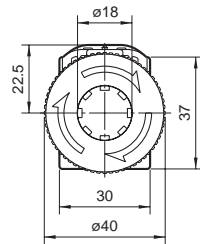


#### Push-lock, turn-reset (29mm dia.)

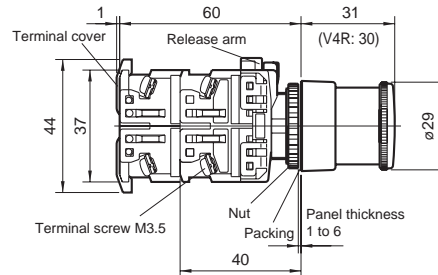


AR22VSR, V4R

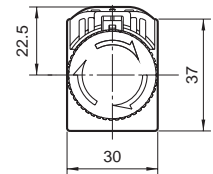


#### Key release push-lock, turn-reset (40mm dia.)

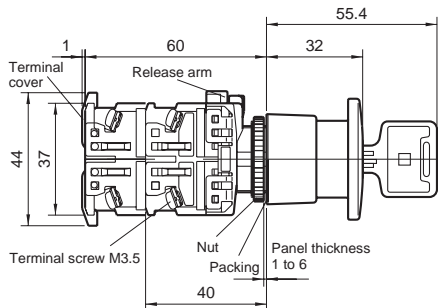


AR22V7R

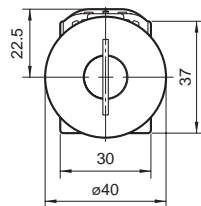


#### Push-lock, pull-reset (35mm dia.)

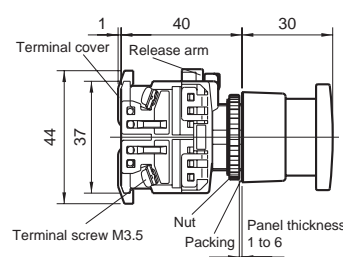

AR22Q2R

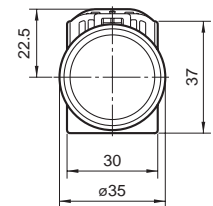


#### Unibody push-lock, turn-reset (40mm dia.)

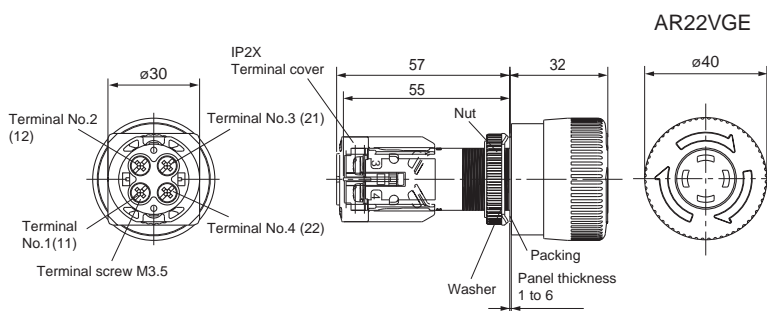


AR22VGE

#### Wiring diagrams


1NC



2NC

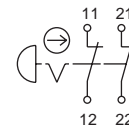

1NO+1NC

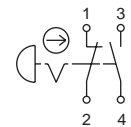


Note: Terminal No. shown in ( ) are for contact arrangement 2NC.


■ Dimensions, mm  
 ● Emergency stop illuminated pushbutton switches

**Push-lock, turn-reset (40mm dia.)**


With transformer

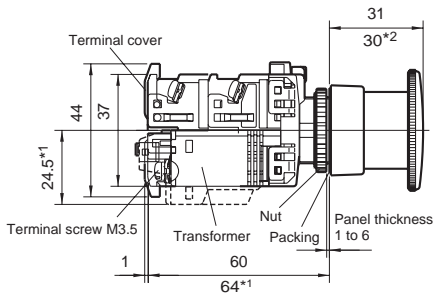

AR22V0L, V2L  
 AR22VDL, VAL

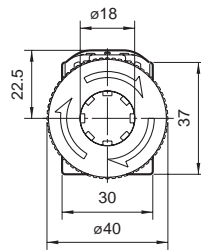


Without transformer

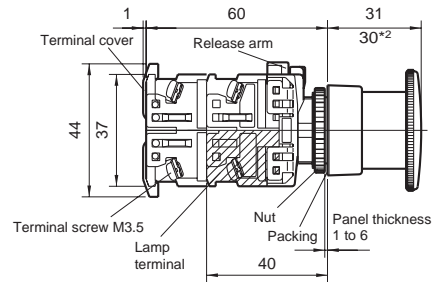


Note: \*1 230V and over  
 \*2 AR22V2L and VAL types only

**Push-lock, turn-reset (29mm dia.)**

Without transformer

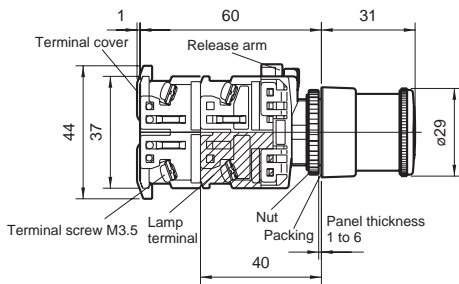


AR22VSL

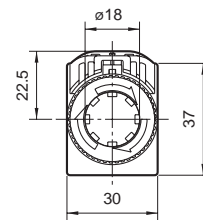


**Unibody push-lock, turn-reset (40mm dia.)**


Without transformer

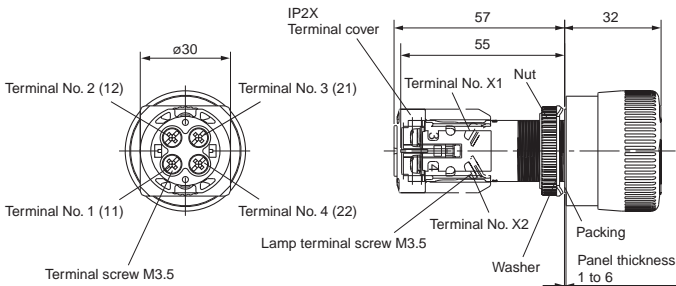

AR22VGF

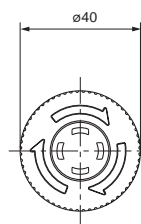

Wiring diagrams

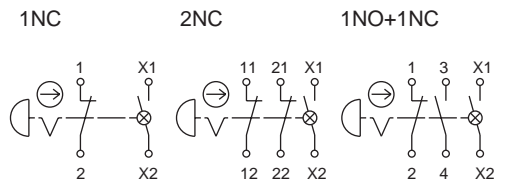

Note: Terminal No. shown in ( ) are for contact arrangement 2NC.


# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22 and DR22


### Dimensions

■ Dimensions, mm  
● Selector switches


#### Knob

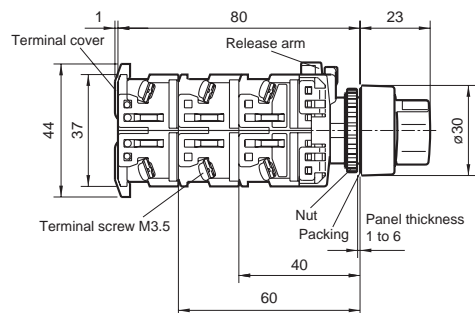


AR22PR, PCR

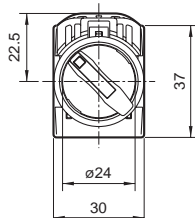


AR22PY, PCY

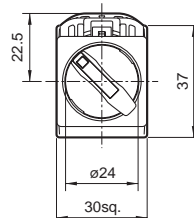


#### Lever

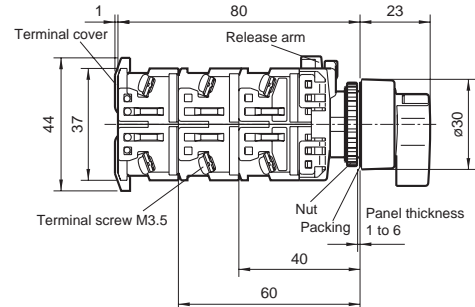


AR22WR, WCR

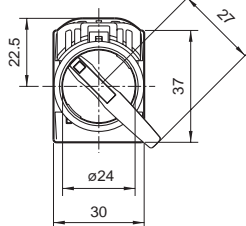


AR22WY, WCY

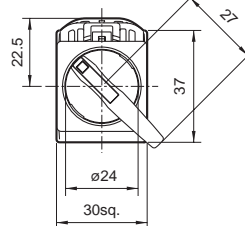


#### Cylindrical knob

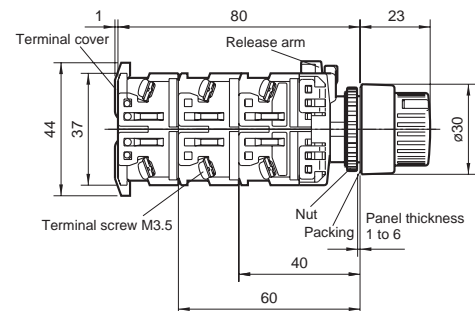


AR22RR, RCR

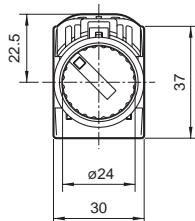


AR22RY, RCY

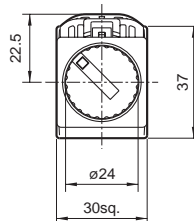


#### Key

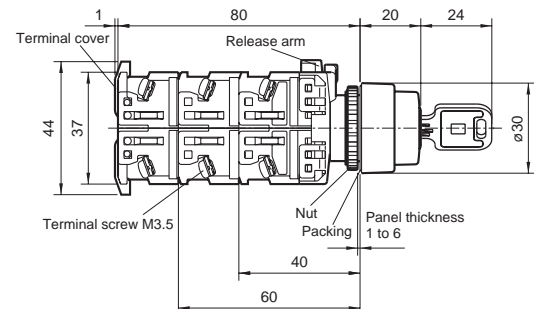

AR22JR, JCR  
AR22JAR

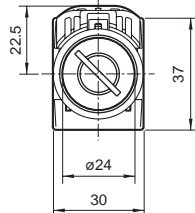




AR22JY, JCY

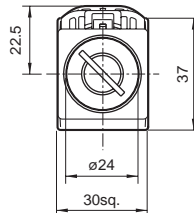

■ **Dimensions, mm**


● **Illuminated selector switches**

With transformer

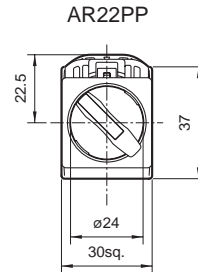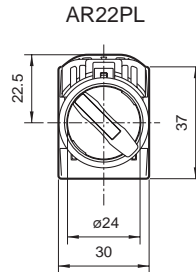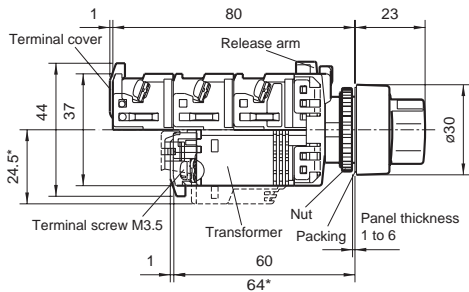

Note: \* 230V and over


Without transformer

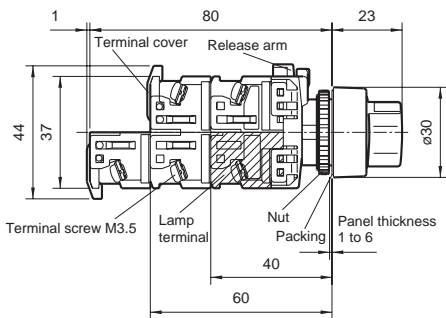

● **Pilot lights**

**Dome**


With transformer, with resistor unit

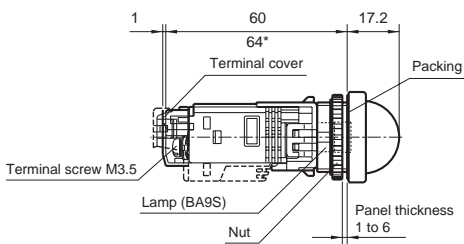


DR22D0L




Without transformer

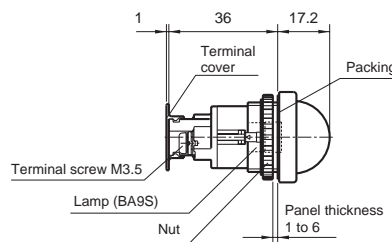


DR22D0L




Short body/with transformer

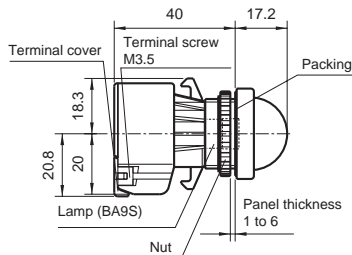


DR22D0L



Short body/without transformer

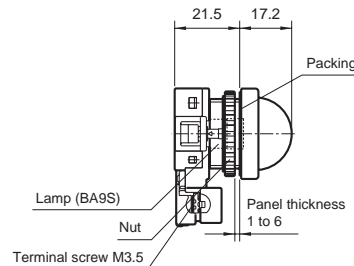

DR22D0L

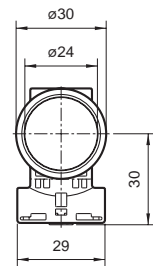

Note: \* Except for the types 110V AC, 127V AC and 220V AC.

# Pushbuttons/Selectors/Pilot Lights/Buzzers


## AR22 and DR22

### Dimensions


■ Dimensions, mm  
● Pilot lights

#### Extended


With transformer, with resistor unit

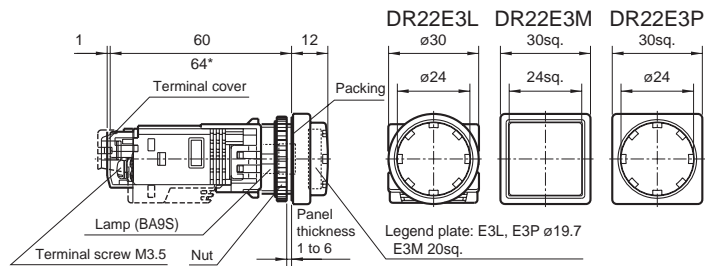


Without transformer

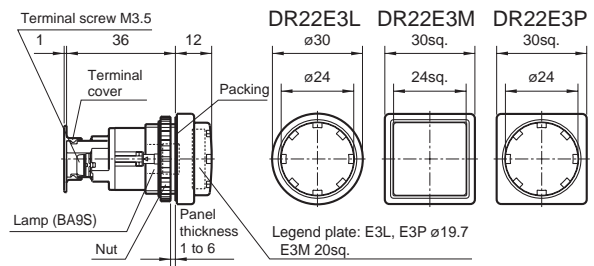

Short body/with transformer

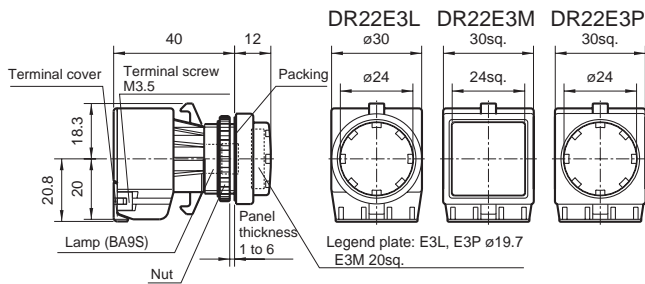


Short body/without transformer

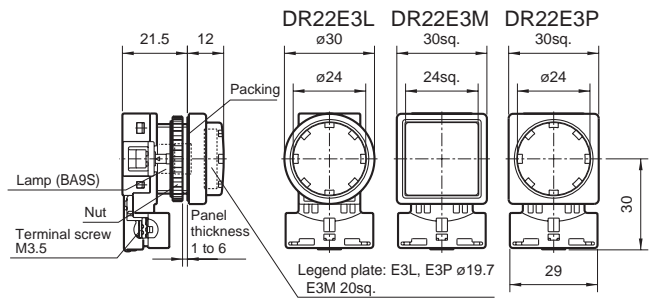


Note: \* Except for the types 110V AC, 127V AC and 220V AC.

#### Faceted


With transformer, with resistor unit

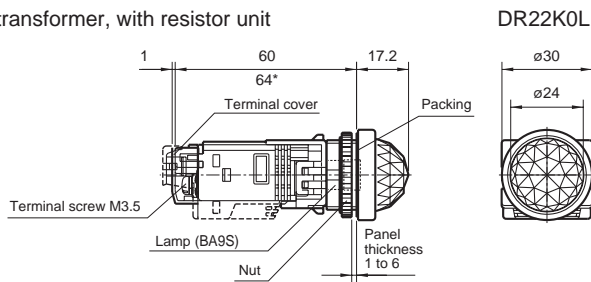


Without transformer

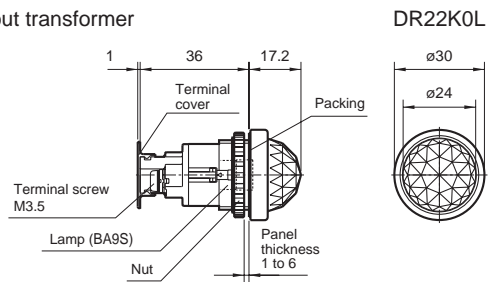

Short body/with transformer

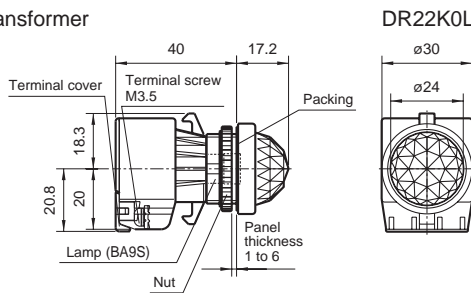

Short body/without transformer

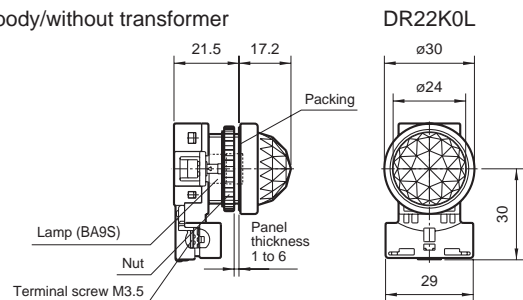

Note: \* Except for the types 110V AC, 127V AC and 220V AC.


# Pushbuttons/Selectors/Pilot Lights/Buzzers AR22 and DR22 Dimensions

## ■ Dimensions, mm ● Pilot lights

### Flush


With transformer, with resistor unit

DR22F3M, F4M

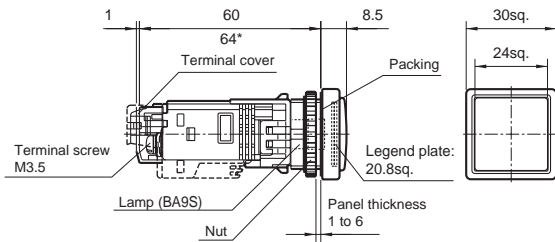


Without transformer

DR22F3M, F4M

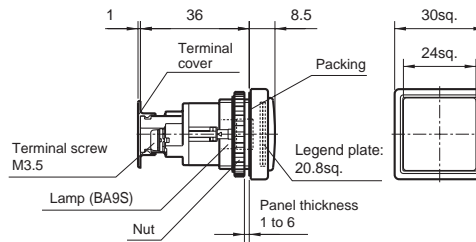


Short body/with transformer

DR22F3M, F4M

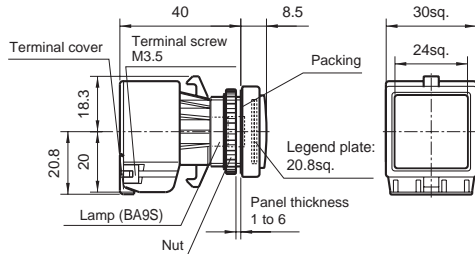

Short body/without transformer

DR22F3M, F4M

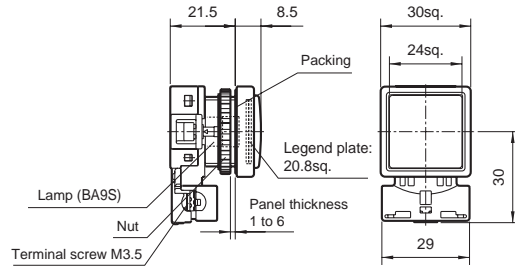


Note: \* Except for the types 110V AC, 127V AC and 220V AC.

### Flush (12mm high frame)


With transformer, with resistor unit

DR22F5M

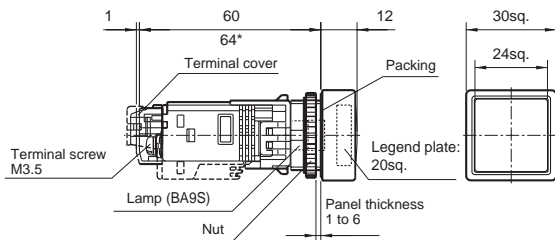


Without transformer

DR22F5M

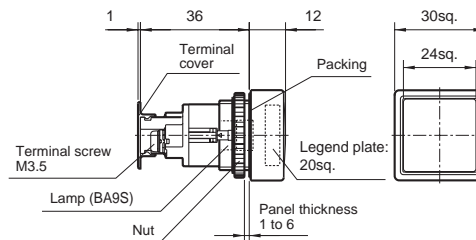


Short body/with transformer

DR22F5M

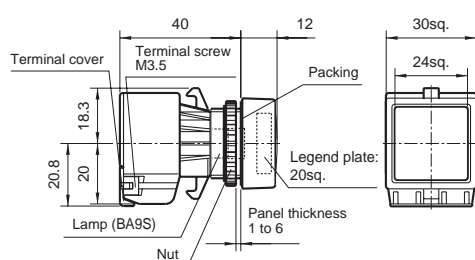

Short body/without transformer

DR22F5M

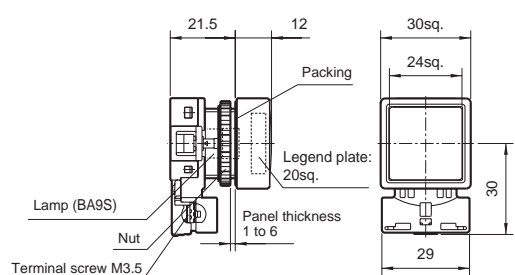

Note: \* Except for the types 110V AC, 127V AC and 220V AC.

# Pushbuttons/Selectors/Pilot Lights/Buzzers


## AR22 and DR22

### Dimensions


■ Dimensions, mm  
● Pilot lights

#### Flush rectangular


With transformer, with resistor unit

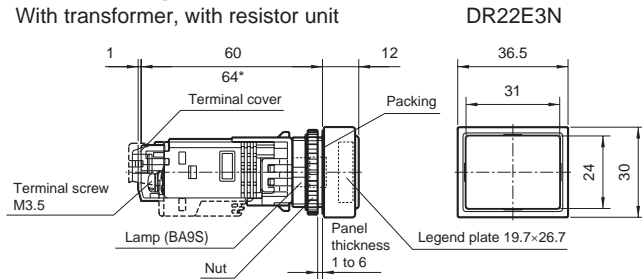


Without transformer

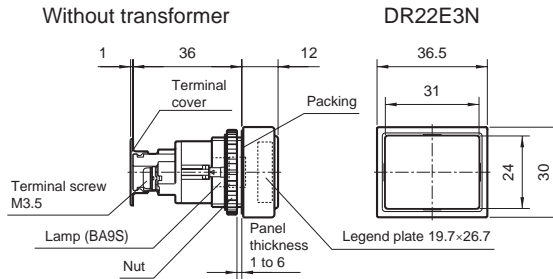

Short body/with transformer

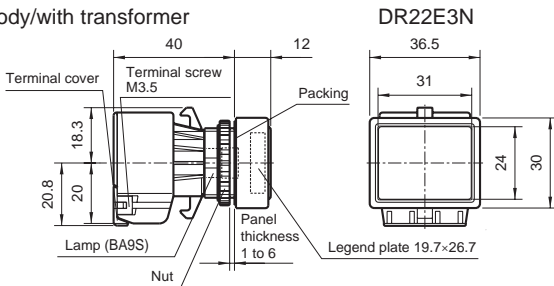

Short body/without transformer


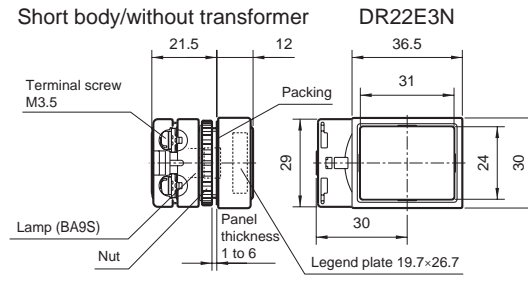


Note: \* Except for the types 110V AC, 127V AC and 220V AC.


#### ● Joy stick selector switches

##### Ball type without lock

Screw terminal AR22A0N, A5N

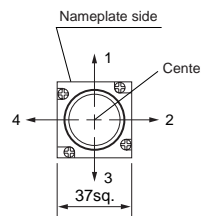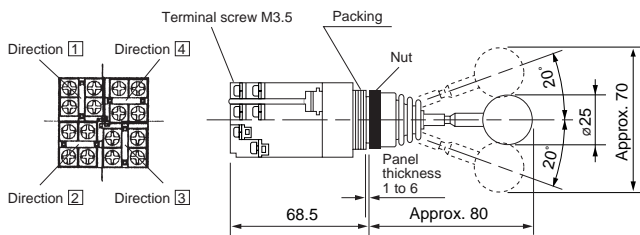


Solder/tab terminal AR22A0H, A5H

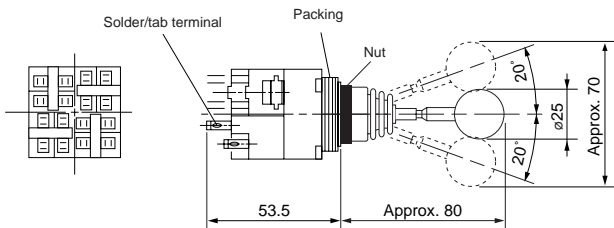


Notes \* The contact arrangement is operable in the designated direction by pulling the lock piece in the central position with the fingers. The lock piece will return automatically and locks when the lock piece is released in the central position. The lock piece locks in the central position only.

##### Ball type with lock

Screw terminal AR22A1N, A6N

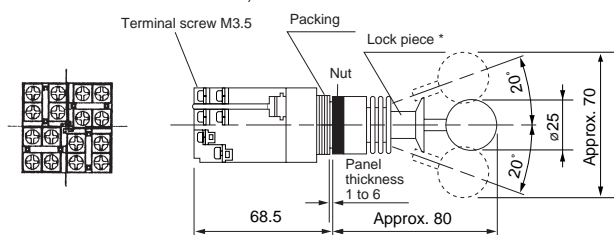

Solder/tab terminal AR22A1H, A6H

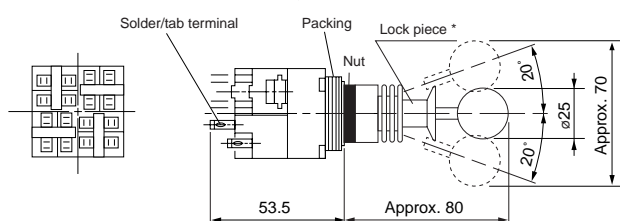


■ **Dimensions, mm**


● **Joy stick selector switches**

**Rubber cap type without lock**

Screw terminal AR22A2N, A7N

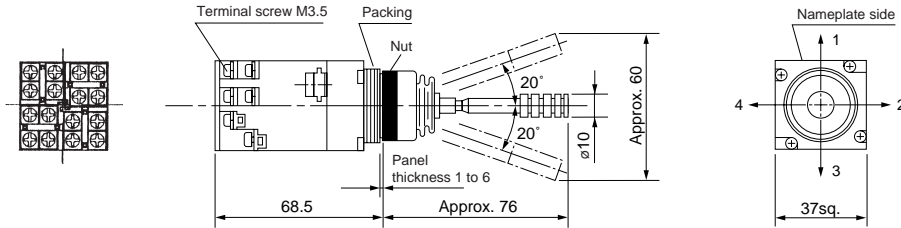


Solder/tab terminal AR22A2H, A7H

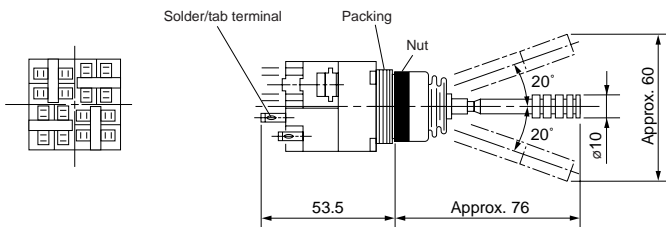


● **Buzzers**

**Electronic sound**


With transformer

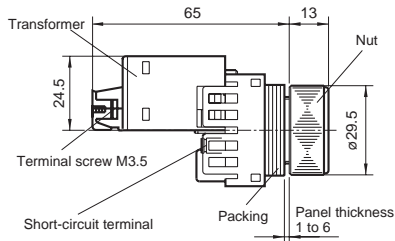


DR22B5

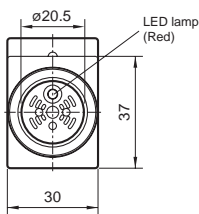

Without transformer

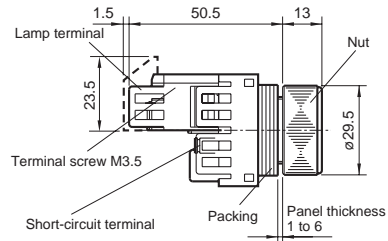


DR22B5

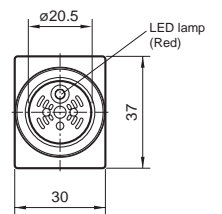


**Magnetic sound**


With transformer

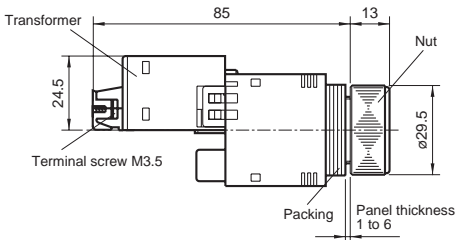


DR22B3

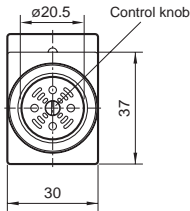

Without transformer

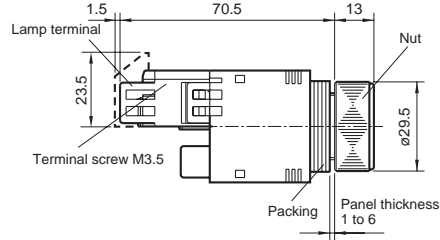


DR22B3

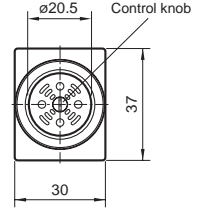


**Electronic sound (IP54)**


With transformer

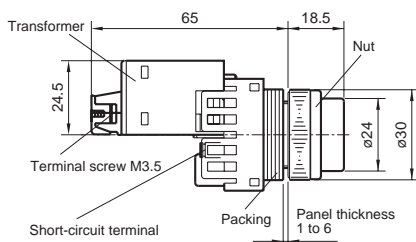


DR22B8

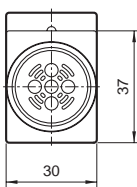

Without transformer

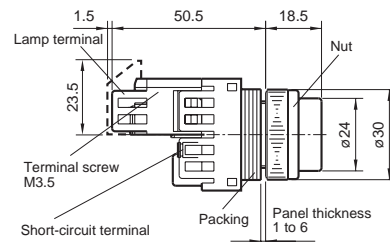

DR22B8

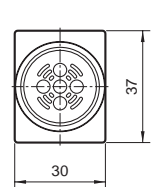

# Pushbuttons/Selectors/Pilot Lights/Buzzers AR22 and DR22 Notes on use

## Notes on use


### ■ Fit two sizes of panel cutout holes

\* The unique nut with a step allows switch to be mounted in either 22.3mm- or 25.5mm-dia. holes as shown in Fig. 1 without any extra adapter.

**Fig. 1 Panel cutout**

The switch mounted as a  $\phi 22$ mm diameter unit.

The switch mounted as a  $\phi 25$ mm diameter unit.

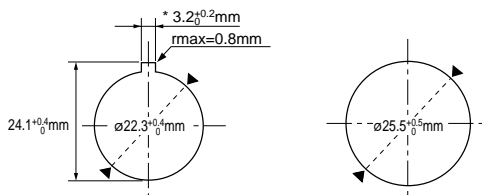


Note: \* If key-washer or legend plate are not used, 3.2mm-wide location holes need not be cutout.

### ■ Detaching contact block from the operator

While keeping the white release arm pressed with one finger, pull-out the contact block in the direction by the arrow.


**Fig. 2 Detaching contact block from the operator**

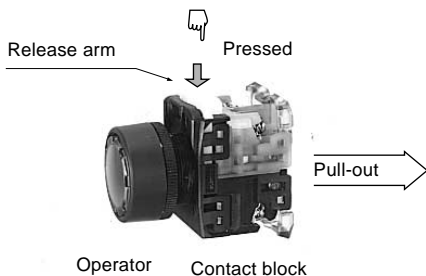

### ■ Mounting operator to panel

① In a 22.3mm-dia. panel cutout hole  
Insert the operator into the cutout hole from the panel front as shown in the Fig. 3.  
Then, fit section "A" of the AR9A004 wrench from behind the panel and secure the operator with nut. (See page 04/108 for the wrench)

**Fig. 3 Mounting an operator in a 22.3mm-dia. hole**

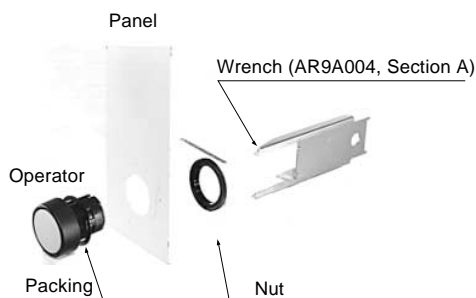


Note: Recommended tightening torque is from 1 to 1.5N•m


② In a 25.5mm-dia. panel cutout hole

As shown in Fig. 4, with the nut step-out side oriented to the panel, use the wrench to tighten the nut and secure the operator.

**Fig. 4 Mounting a operator in a 25.5mm-dia. hole**

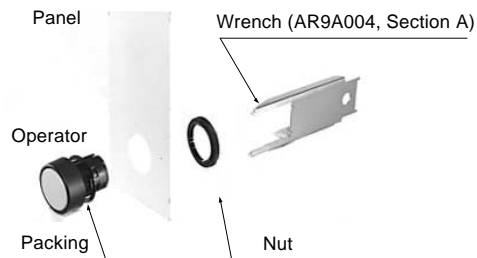


Note: 1. Recommended tightening torque is from 1 to 1.5N•m  
2. Ensure that the step-out portion of the nut is correctly fitted in the cutout hole.

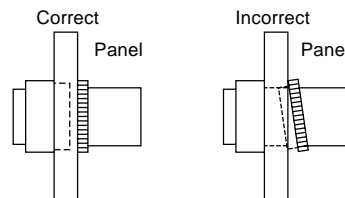

For easier mounting in the 25.5mm-dia. hole, the AR9Y718 adapter is also available separately.


**Fig. 5 Mounting with an adapter and locking nut**

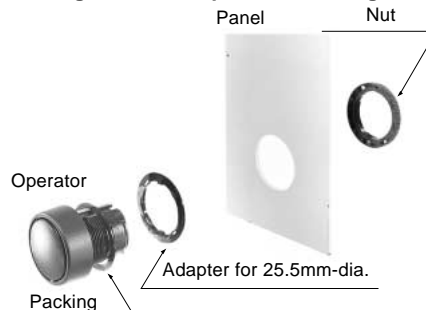

### ■ Mounting contact block to the operator

As shown in Fig. 6, align the protruding part of the contact block release arm with the operator groove at the  $\nabla$  mark. Then, insert the contact block into the operator until it clicks.


**Fig. 6 Mounting the contact block to the operator**

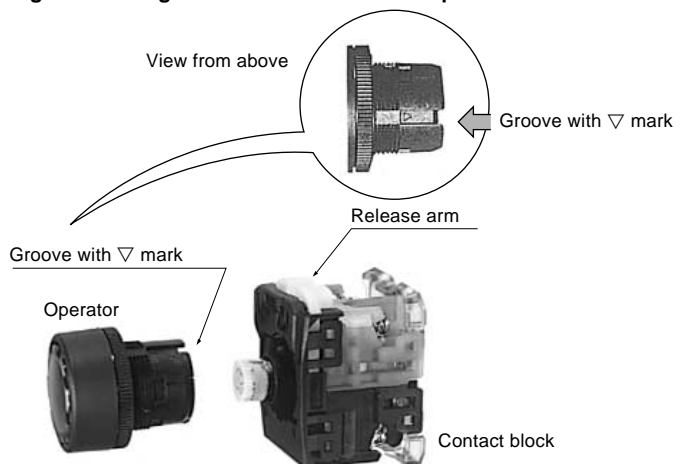

■ **VG type panel mounting**

As shown in the illustration, remove the live section cover, nut, and washer, and insert the main unit into a panel which has been cut from the front side of the panel. Place the type number AR22 facing upward, and secure the main unit with the nut using a wrench AHX701. The appropriate tightening torque is 1 to 1.5N•m.

Fig. 7

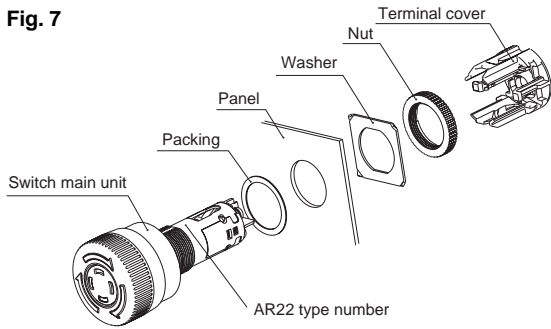


■ **Joy stick selector switch mounting on panel**

- (1) Twist and remove the ball from the operator.
- (2) Loosen the nut and remove the switch if the switch is provided with a lock.
- (3) If no locking nut is provided, loosen the nut and remove the switch after the packing part (A) shown in the illustration is stretched to the lever groove.
- (4) Mount the switch in the order opposite to removal. Set the packing to the notch on the lever as a reference. Do not separate the nut from the packing.
- (5) Use a torque wrench AR9A006 to tighten the nut from the front of the panel.

Note: Recommended tightening a torque is 1 to 1.5N•m.

Fig. 8

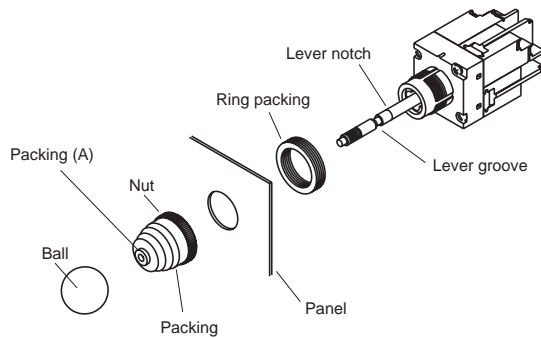

■ **Buzzer mounting on panel**

- (1) Remove the nut, and insert the main unit into the mounting hole from the back of the panel.
- (2) Tighten the buzzer using a wrench AR9A006 from the front side of the panel.

Note:

- Recommended tightening torque is 1 to 1.5N•m.
- Electronic sound (IP54) type has a all-in-one unit with nut and cap.

■ **Applicable panel thickness**

The AR22/DR22 series switches are mountable to panels with thickness as given in Table below.

Mounting condition		Applicable panel thickness (mm)	
Without accessories		1 to 6	
With accessories	Protective cover, water-proof cap, legend plate	1 to 4	
	Key washer	without hole	1 to 4
		with hole	1 to 5
	Adapter for a 25.5mm-dia. hole		1 to 5.5

- When using a joy stick selector switch and buzzer  
 The applicable panel thickness is 1 to 6mm. Five 1.3mm packings (single-piece type) are included as standard equipment. Insert as many as required depending on the panel thickness, using the following table as a guide. When using a key washer, legend plate, or adapter, their thickness will have to be added to the values in the guide.

Panel thickness (mm) (plus key washer, legend plate)	Number of packings (reference)
1.0 to 1.6	5
1.6 to 2.8	4
2.8 to 3.8	3
3.8 to 4.8	2
4.8 to 6.0	1

# Pushbuttons/Selectors/Pilot Lights/Buzzers


## AR22 and DR22

### Notes on use

#### ■ Minimum mounting space, mm

(1) Minimum mounting space

Fig. 9

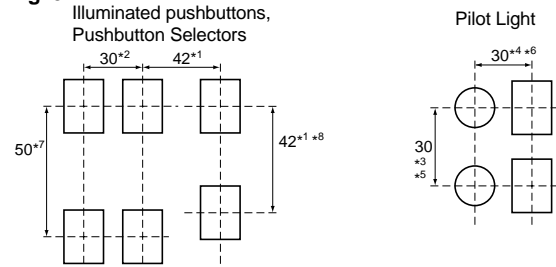

- Notes:
- \*1 AR22M0□, M5□, V5□, V0□, V2□, V7R, VG□: 42mm  
AR22M3R, M8R: 49mm  
AR22Q2R, WR, W0R, WY, WCY: 40mm
  - \*2 When mounting contact blocks at 30mm pitch, use it circuit of 380V or less.
  - \*3 Short body with transformer types: 50mm.
  - \*4 Rectangular types: 36.5mm (except for short body without transformer types).
  - \*5 Short body without transformer types: 60mm.
  - \*6 Rectangular short body without transformer types: 60mm.
  - \*7 This dimension applies when transformer units or contact blocks face each other.
  - \*8 This dimension applies when transformer unit or contact block is mounted on only one side.


When mounting operators on a panel, orient all ▽ marks on the operator upwards.

(The operator release arms are oriented upwards.) This aligns the terminals of all contact blocks, thus making wiring easy.

(2) Detaching contact blocks from operators

As shown in Fig. 10, insert a flat-head screw driver into the groove of the white release arm on the contact block. Then, while inserting the driver in hole A of the operator base, lower the driver grip and take out the contact block.

Fig. 10

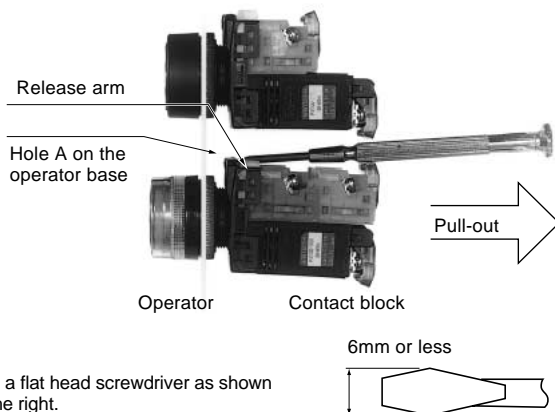


Note: Use a flat head screwdriver as shown at the right.

#### ■ Products with blue and green LEDs

The LED devices on products with high-brightness (blue and green) LEDs are very sensitive to static electricity. When replacing LED lamps do not allow static electricity to come into direct contact with the metal frame on the upper side of the LED lamp. The LED device may be damaged if this part is subjected to static electricity. When installing or removing an LED lamp, it is recommended that you use the lamp changer (AHX790).


Fig. 11

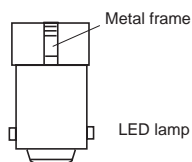

#### ■ Wiring


(1) The terminal screws are M3.5 pan head screws. Solid wires, stranded wires, or crimp terminals can be connected.

Fig. 12



(2) Two crimp terminals can be used by putting one of them on top of the other. If fork-type crimp terminals are used in the horizontal direction, however, use ones as shown in the figure below. (i.e., Toei Tanshi's F2-3.5S or an equivalent).

Fig. 13



- (3) The terminal washers are a self-lifting type.
- (4) Tighten the terminal screws to a tightening torque of 0.8 to 1N•m.
- (5) Keep the terminals free of external force while wiring or after wiring, or operational failures may result.
- (6) Do not use screws other than the provided terminal screws.

Notes:

- If solid wires are connected to the lamp terminals in the horizontal direction (on the side), be sure to insert the solid wires into the square washers.
- Terminal layout., see page 04/54
- See page 04/53 for the wiring of the joy stick selector switch and VG type.

#### ■ LED Indicator


(1) LED Lamp Malfunctioning

The LED lamp is lit by a very small level of current. Therefore, it may be erroneously lit by a leaking current from the surge absorption circuit or semiconductor circuit or due to stray capacitance between cables. In that case, provide a countermeasure (e.g., connect a resistor in parallel with the LED lamp).

##### • Countermeasure for Malfunctioning

The LED lamp malfunctions can be prevented by connecting a shunt resistor (R) or CR elements (a capacitor and resistor) in parallel with the LED lamp terminal. The resistance and CR values vary depending on the model and the operating conditions.

Fig. 14

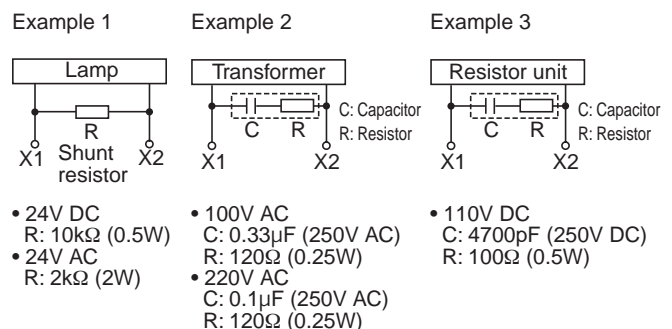

- 24V DC  
R: 10kΩ (0.5W)
- 24V AC  
R: 2kΩ (2W)
- 100V AC  
C: 0.33μF (250V AC)  
R: 120Ω (0.25W)
- 220V AC  
C: 0.1μF (250V AC)  
R: 120Ω (0.25W)
- 110V DC  
C: 4700pF (250V DC)  
R: 100Ω (0.5W)


(2) Incoming surge

High luminance LED products use an element sensitive to static electricity. They may not be lit by an abnormal voltage like surge. Please note it.

■ Joy stick selector switch

- Screw terminal wiring
- (1) The terminals use M3.5 pan head screws. Use crimp terminals to wire the terminals.

Fig. 15



- (2) The terminal washers are a self-lifting type.
- (3) Tighten the terminal screws to a tightening torque of 0.8 to 1.0N•m. Keep the terminals free of external force during and after wiring, or operational failures may result.

• Solder (tab terminal) wiring

- (1) Pay attention to the following items when soldering the terminals.
  - Use a soldering iron with a power consumption of 30W. Use resin-core solder.
  - If a 30W soldering iron is used, finish soldering the terminals within five seconds. If a 20W soldering iron is used, finish soldering the terminals within 10 seconds. Make sure that the soldering iron tip length is at least 20mm long. Do not apply external force to the terminals. Because lead-free solder's melting point is slightly high, soldering work may be difficult. Use a soldering iron whose tip is rather large or whose calorific value is rather high.
- (2) When using adjacent terminals, use insulation tubes to prevent the terminals from short-circuiting. Utmost attention must be paid to the solder terminals if especially thick wires are used or if a large quantity of solder is used.
- (3) Connectable wires
  - Solid wire: 2 wires, 0.8mm dia. max.
  - Stranded wire: 1 wire, 0.75mm<sup>2</sup> max.
- (4) Use the 110 (2.8mm) series receptacle for the tab terminals.
- (5) Wire the tab terminals with the contact unit connected to the main unit.

• Operation

Operation shall be made after the joy stick operation lever is surely returned to the center position. Do not apply excessive force to the operation lever. The maximum permissible force is 100N.

• Use of contact blocks

If NO and NC contacts are used in the same contact block, check that there is no difference in potential. Do not connect different type of power source different in type.

■ Buzzer

- Noise
- If the application circuit is likely to generate excessively strong noise, connect a surge absorber (e.g., FUJI's ENC390D, provided that the switch is a 24V type) in parallel with the buzzer.
- Place of Use

The buzzer does not have a drip-proof construction. Do not use the buzzer in places where oil or water is sprayed or where dust accumulates. If the buzzer is a splash-proof type, it will resist sprays of water.


- Do not use the buzzer in places that are subject to an excessive amount of corrosive gas.
- Note that the buzzer is likely to sound erroneously due to leakage current or the like.

■ AR22VG type

- As shown in Fig. 16 (a), engage the tip of the wrench (AHX8003) with the groove in the center to mount or remove the locking unit. The recommended tightening torque is 0.6 to 1N•m.

- As shown in Fig. 16 (b), insert the lamp changer (AHX790) and press the lamp changer to mount or remove the lamp. Turn the lamp changer clockwise when mounting the lamp and counterclockwise when removing it.

Fig. 16

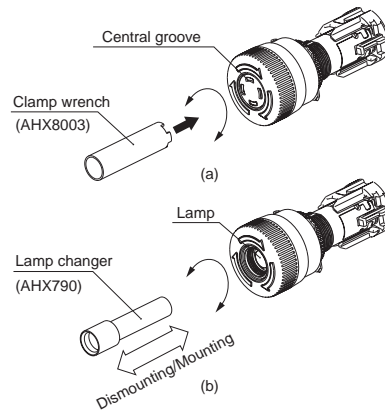


Note: The lamp and neon lamp are special models for the AR22VGF. Use only these special lamps for replacement.

• Wiring


The terminals use M3.5 pan head screws. Use crimp terminals for wiring and cover the crimp terminals with insulation tubes.

Fig. 17




- The terminal washers are a self-lifting type.
- Tighten the terminal screws to a torque of 0.8 to 1N•m. Keep the terminals free of external force during and after wiring, or operational failures may result.
- Wiring precautions
  - (1) Use of round-type crimp terminal
  - Remove the live section cover, and half-tighten to the point parallel with the terminal rib white marks in the direction of the arrows as shown in the illustration below.
  - Mount the live section cover and tighten the terminals securely.

Fig. 18

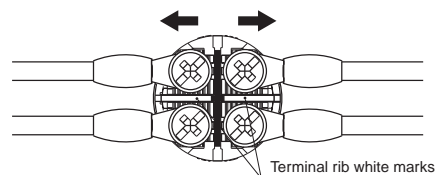

As shown in the illustration below, mount the live section cover so that the mounting legs of the cover engage with the concave parts of the main unit.

Fig. 19

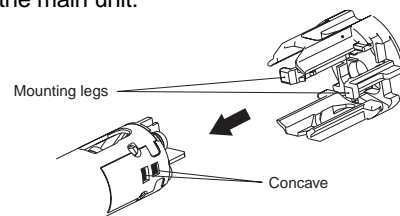

- (2) If fork-type crimp terminals are used, wiring will be possible without removing the live section cover.

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22 and DR22


### Notes on use

#### ■ Operation

- Do not use a hitting or bouncing action to operate the button, or the switch may break. Always operate the switch by hand. Do not pull mushroom head pushbuttons or alternate buttons other than the Q2.
- Do not rotate the selector ring type while the button is pressed, or the mechanism may break.
- The control type incorporates make-before-break contacts. Prepare a protection circuit for the application.
- The dial of the selector switch rotates with a light force. Do not apply force in excess of 1N•m. Please do not pull out or insert the key forcibly.
- To release the lock of the push-lock type, rotate the button clockwise as shown by the arrow. Do not pull the button, or the latch may break and the lock may fail to work.
- Do not lock the emergency stop pushbutton switch and emergency stop illuminated pushbutton switch in use. Push and lock the switch in case of an emergency only.

#### ■ Terminal layout

Fig. 20

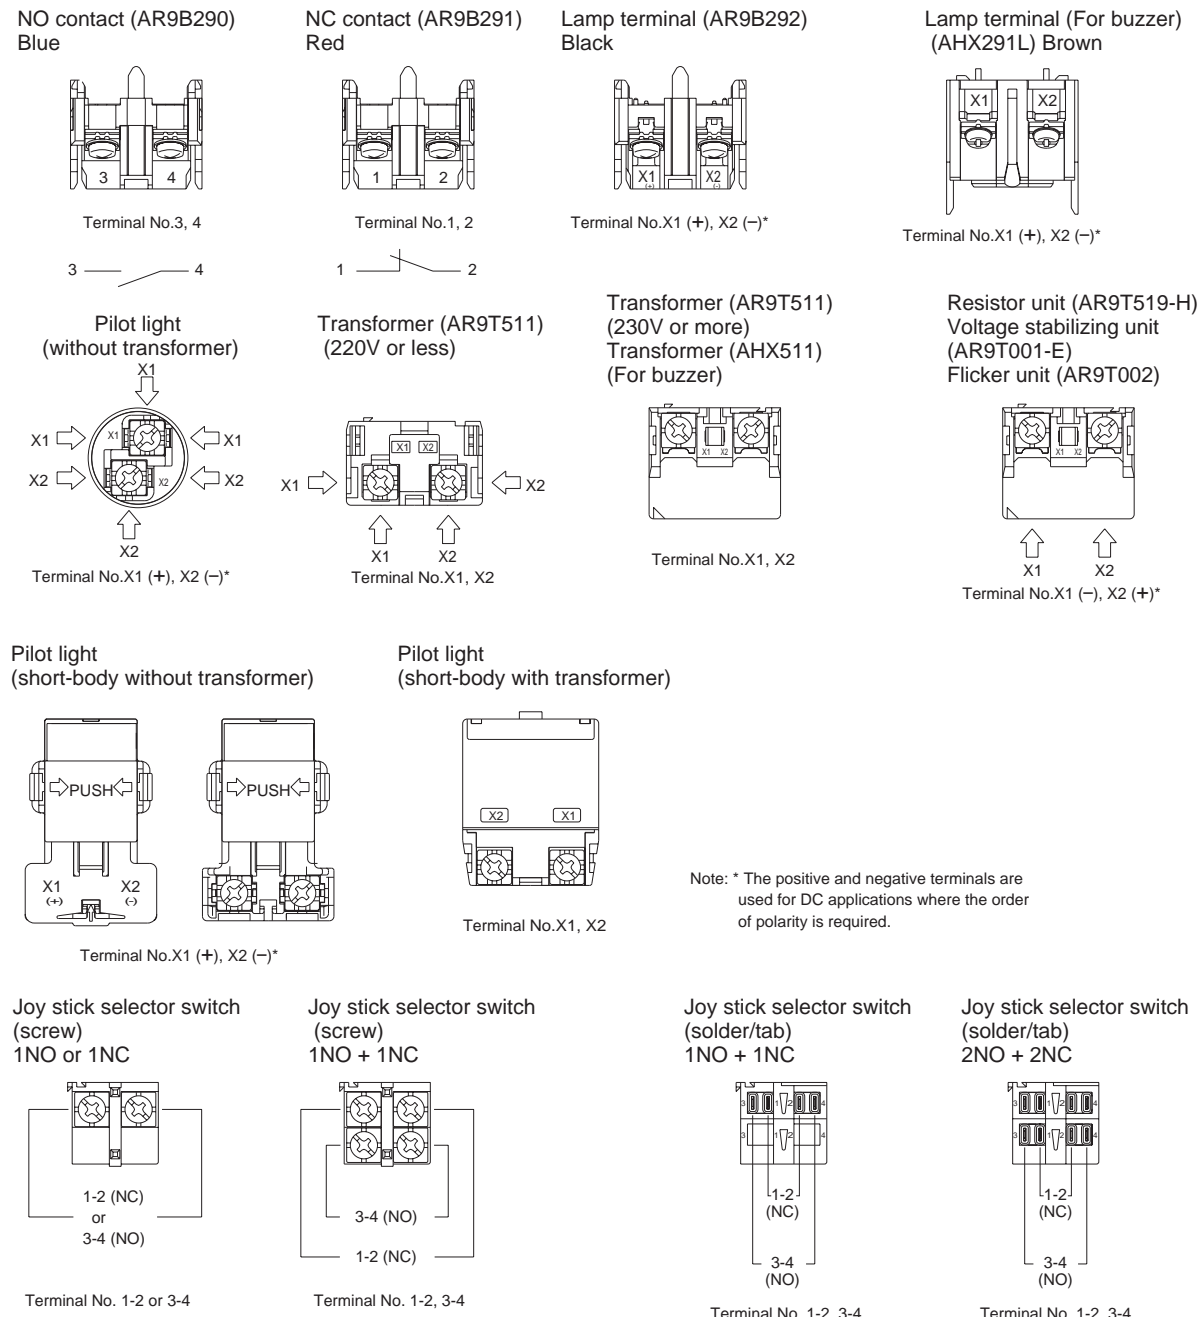










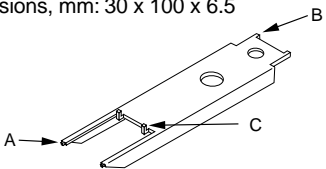




# Pushbuttons/Selectors/Pilot Lights

## AR22/DR22 and AR30/DR30

### Accessories

#### ■ Accessories

Description	Type
Wrench	<p><b>AR9A004</b> Dimensions, mm: 30 x 100 x 6.5</p>  <p>Remarks Section "A" Use this section to tighten the nut for mounting the operator on a panel. Section "B" Use this section to tighten or remove the lens. Applicable type: AR22F0L, F5L, E0L, E5L, F0P, F5P, E0P, E5P AR22G1L, G2L, G4L, G6L, G7L, G9L DR22E3L, E3P AR30E0L, E5L, G2L, G3L, G4L, G7L, G8L, G9L DR30E3L Section "C" Fit the tabs on the section "C" in the center button, and turn the wrench to tighten or remove the button. Applicable type: AR22V (except V4R, VG type) AR30V (except V1R type)</p>  <p>KK02-261</p>
Wrench for AR22, DR22	<p><b>AR9A701</b> Dimensions, mm: <math>\varnothing 28 \times 70</math></p> <p>Application: AR22, DR22 nut tightening</p> 
Wrench	<p><b>AHX536</b> Dimensions, mm: <math>\varnothing 32 \times 76</math></p> <p>Application: DR30F4M, F4N, M4M, N1, N2 nut tightening</p>  <p>KK02-097A</p>
Wrench	<p><b>AR9A001</b> Dimensions, mm: <math>\varnothing 22 \times 35</math></p> <p>Application: AR22, DR22 round-type lens tightening AR22E0M, E5M oil-proof cap tightening AR30, DR30 round-type lens tightening AR30GSR button tightening</p>  <p>KK02-098A</p>
Wrench (for center button)	<p><b>AR9A002</b> Dimensions, mm: <math>\varnothing 18 \times 60</math></p> <p>Application: AR22V center button tightening (except V4R, VG type) AR30V center button tightening (except V1R type)</p> 
Wrench	<p><b>AHX701</b> Dimensions, mm: <math>\varnothing 25 \times 72.5</math></p> <p>Application: DR22N, AR22VG nut tightening</p>  <p>AF03-5</p>


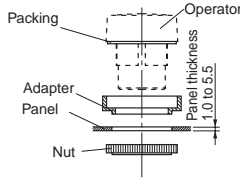
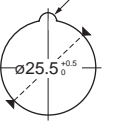
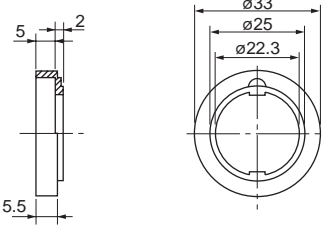

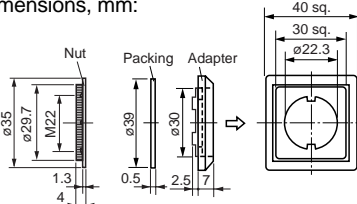
Description	Type
Wrench (for center button)	<p><b>AHX8003</b> Dimensions, mm: <math>\varnothing 14 \times 50</math></p> <p>Attaching and removing the center button of the AR22VGF type.</p>  <p>AF93-6</p>
Wrench for AR22,30 and DR22, 30	<p><b>AR9A006</b> Dimensions, mm: <math>\varnothing 40 \times 100</math></p> <p>To mount an AR22, 30 or DR22, 30 command switch to a panel, use this wrench to tighten the nut securely. It is very easy to fit this wrench onto the nut. The wrench with an inside rubber-lining can be easily used with either your right or left hand.</p>  <p>For <math>\varnothing 22</math> For <math>\varnothing 30</math></p> <p>AF96-241</p>
Wrench for AR30, DR30	<p><b>AHX001</b> Dimensions, mm: <math>\varnothing 47 \times 100</math></p> <p>To mount an AR30 or DR30 command switch to a panel, use this wrench to tighten the nut securely.</p>  <p>AF95-467</p>
Special tool	<p><b>AHX321</b> Dimensions, mm: 42 x 130 x 6.5 For all types except pilot lights</p> <p><b>DR9A321-T</b> Dimensions, mm: 57 x 130 x 30 For pilot lights</p> <ul style="list-style-type: none"> <li>• This tool is used to remove contact blocks and transformer units.</li> <li>• The AHX321 can remove round color lens of switches.</li> </ul>  <p>AHX321 SG-873</p>  <p>DR9A321-T AF95-21</p>
Wrench/Lamp changer	<p><b>AHX702</b> Dimensions, mm: <math>\varnothing 36 \times 55</math></p> <p>Use this wrench to tighten or remove the lens and lamp.</p> <p>Used with: Lens of DR22D0L, K0L and DR30D0L, K0L Incandescent lamp of pilot lights and illuminated pushbuttons</p>  <p>SI-1030</p>
Lamp changer	<p><b>AHX790</b> Dimensions, mm: <math>\varnothing 14 \times 55</math></p> <ul style="list-style-type: none"> <li>• Use this rubber wrench for mounting or removing lamps from pilot lights and illuminated pushbutton switches.</li> <li>• This wrench can be used for both LED and incandescent lamps.</li> <li>• One end is for the BA9S/13 lamp, and the other is for the E12/15 lamp (for use with 30mm dia. pilot lights with resistor).</li> <li>• For 30mm dia. pilot lights with resistor, this tool can also be used to attach or remove incandescent lamps.</li> </ul>  <p>For BA9S/13 lamp For E12/15 lamp</p> <p>AF95-22</p>



# Pushbuttons/Selectors/Pilot Lights

## AR22/DR22 and AR30/DR30

### Accessories

Description	Type
Adapter for AR22 and DR22 	<b>AR9Y008</b> Use this resin adapter to mount the AR22/DR22 (switch/pilot light) in a 25.5mm dia. cutout hole on a panel. Mounting, mm:  Panel cutout, mm:  Equipped with device for stopping rotation Used with: AR22, DR22 round head types (except for M3R, M8R, VG□, joy stick selectors and buzzers) Dimensions, mm:  AF98-198
Adapter for AR30 and DR30 	<b>AR9Y003</b> Mount this adapter onto a 22mm dia. command switch with a square button and a square bezel to obtain a 30mm dia. command switch with a square/round button and a square bezel. A resin ring-packing and a nut are accessories of the adapter. Dimensions, mm:  Note: Panel thickness: 2.5 to 5mm AF95-416

Description	Type
Round-frame adapter for 30mm dia. types 	<b>AR9Y004</b> By using this adapter in combination with the round type 22mm dia. command switch, the 22mm dia. command switch can be used as a 30mm dia. command switch/round frame type. Used with: AR22, DR22 round types (except for M3R, M8R, VG□, Joy stick selectors, buzzers) Dimensions, mm  Note: Panel thickness: 2.5 to 5mm KK02-100A
Round-frame adapter for 30mm dia. type VG 	<b>AHX958</b> Using this adapter in combination with model AR22VG (22mm dia.) allows mounting to a 30.5mm panel cutout hole. The attachment method is as follows. <ul style="list-style-type: none"> <li>• The washer and nut (22.3mm dia.) originally attached to the operator will not be used, so remove them.</li> <li>• Attach the 22mm dia. packing (included), the 30mm dia. adapter and the 30mm dia. packing to the operator in that order, and insert the operator into the cutout hole.</li> <li>• From the back of the panel cutout hole, fasten the 30mm-dia. nut using the AHX701 wrench. The correct tightening torque is 1 to 1.5 N•m.</li> </ul>  *1 Adapter for 30mm dia. (AHX958) Panel cutout, mm:  Dimensions, mm:  Note: Panel thickness: 1 to 6mm AF93-4

**Description**  
Legend plate for AR22

**Type**  
**AR9P711-①②③**  
① Color  
B: Black  
A: Aluminum

This aluminum legend plate is for a 22.3mm dia. panel cutout hole. (Packing provided)

Legend	Code	
	②	③
Blank	0	0
ON	0	A
OFF	0	B
START	0	C
STOP	0	D
OFF-ON	2	A

Dimensions, mm:

SI-1033

**Description**  
Legend plate for AR22

**Type**  
**AR9P713-①②③**  
① Color  
B: Black  
A: Partially black

This aluminum legend plate is for a 22.3mm dia. panel cutout hole. (Packing provided)

Legend	Code	
	②	③
Blank	0	0
ON	0	A
OFF	0	B
START	0	C
STOP	0	D
OFF-ON	2	A

Dimensions, mm:

AF95-114

**Description**  
Legend plate for AR22

**Type**  
**AR9P712-①②③**  
① Color  
B: Black  
A: Partially black

This aluminum legend plate is for a 22.3mm dia. panel cutout hole. (Packing provided)

Legend	Code	
	②	③
Blank	0	0
ON	0	A
OFF	0	B
START	0	C
STOP	0	D
OFF-ON	2	A

Dimensions, mm:

SI-1032

**Description**  
Legend plate for AR22 emergency stop

**Type**  
**AR9P719-①②**  
Plate color: Yellow  
Letter color: Black

This aluminum legend plate is for a 22.3mm dia. panel cutout hole. (Packing provided)

Legend	Code		Letter height
	①	②	
Blank	0	0	-
EMERGENCY	5	A	7mm
STOP	5	B	13mm
EMERGENCY	5	C	13mm
OFF			

Dimensions, mm:

KK02-265A

Note: Engraving for making letters is not available.




# Pushbuttons/Selectors/Pilot Lights


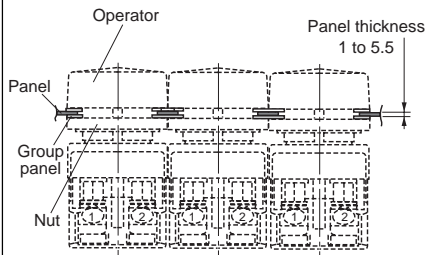
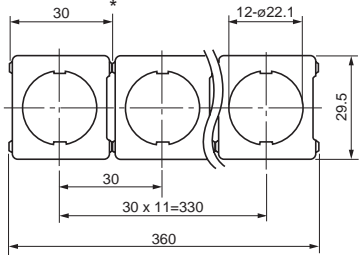
## AR22/DR22 and AR30/DR30



### Accessories

Description	Type																																	
Legend plate for AR22 (width: 34mm)	<b>AR9P015-B</b> ①② : Hight 36mm <b>AR9P014-B</b> ①② : Hight 40.3mm  Color: black  <table border="1"> <thead> <tr> <th>Legend</th> <th colspan="2">code</th> </tr> <tr> <td></td> <th>①</th> <th>②</th> </tr> </thead> <tbody> <tr> <td>Blank</td> <td>0</td> <td>0</td> </tr> <tr> <td>ON</td> <td>0</td> <td>A</td> </tr> <tr> <td>OFF</td> <td>0</td> <td>B</td> </tr> <tr> <td>START</td> <td>0</td> <td>C</td> </tr> <tr> <td>STOP</td> <td>0</td> <td>D</td> </tr> <tr> <td>OFF-ON</td> <td>2</td> <td>A</td> </tr> </tbody> </table> <p>Optimal for use in combination with a 3-position selector switch. Legend plates are available in two types: short, 36 mm; and long, 40.3mm.</p> <p>Dimensions, mm:</p> <p>.AF96-190</p>	Legend	code			①	②	Blank	0	0	ON	0	A	OFF	0	B	START	0	C	STOP	0	D	OFF-ON	2	A									
Legend	code																																	
	①	②																																
Blank	0	0																																
ON	0	A																																
OFF	0	B																																
START	0	C																																
STOP	0	D																																
OFF-ON	2	A																																
Legend plate with name plate for AR22	<table border="1"> <tbody> <tr> <td>Legend plate</td> <td><b>AR9P009-B</b></td> </tr> <tr> <td>Name plate</td> <td><b>AR9P010-B</b> ①② (34 × 8mm)</td> </tr> <tr> <td>Legend plate</td> <td><b>AR9P011-B</b></td> </tr> <tr> <td>Name plate</td> <td><b>AR9P012-B</b> ①② (34 × 13mm)</td> </tr> <tr> <td>Legend plate</td> <td><b>AR9P007-B</b></td> </tr> <tr> <td>Name plate</td> <td><b>AR9P008-B</b> ①② (27 × 16mm)</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Name plate</th> <th colspan="2">Code</th> </tr> <tr> <td></td> <th>①</th> <th>②</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>0</td> <td>A</td> </tr> <tr> <td>OFF</td> <td>0</td> <td>B</td> </tr> <tr> <td>START</td> <td>0</td> <td>C</td> </tr> <tr> <td>STOP</td> <td>0</td> <td>D</td> </tr> <tr> <td>OFF-ON</td> <td>2</td> <td>A</td> </tr> </tbody> </table> <p>Dimensions, mm:</p> <p>.AF96-190</p>	Legend plate	<b>AR9P009-B</b>	Name plate	<b>AR9P010-B</b> ①② (34 × 8mm)	Legend plate	<b>AR9P011-B</b>	Name plate	<b>AR9P012-B</b> ①② (34 × 13mm)	Legend plate	<b>AR9P007-B</b>	Name plate	<b>AR9P008-B</b> ①② (27 × 16mm)	Name plate	Code			①	②	ON	0	A	OFF	0	B	START	0	C	STOP	0	D	OFF-ON	2	A
Legend plate	<b>AR9P009-B</b>																																	
Name plate	<b>AR9P010-B</b> ①② (34 × 8mm)																																	
Legend plate	<b>AR9P011-B</b>																																	
Name plate	<b>AR9P012-B</b> ①② (34 × 13mm)																																	
Legend plate	<b>AR9P007-B</b>																																	
Name plate	<b>AR9P008-B</b> ①② (27 × 16mm)																																	
Name plate	Code																																	
	①	②																																
ON	0	A																																
OFF	0	B																																
START	0	C																																
STOP	0	D																																
OFF-ON	2	A																																

Description	Type																																				
Legend plate for AR30	<b>AHX177-①②③④</b> This legend plate is for a 30.5mm dia. panel cutout hole. <table border="1"> <thead> <tr> <th>Code</th> <th>Material</th> <th>Color</th> </tr> </thead> <tbody> <tr> <td>S</td> <td>Brass</td> <td>Silver</td> </tr> <tr> <td>B</td> <td>Aluminum</td> <td>Black</td> </tr> <tr> <td>A</td> <td></td> <td>Aluminum</td> </tr> </tbody> </table> <p>② Size H: Standard S: Short size</p> <table border="1"> <thead> <tr> <th>Legend</th> <th colspan="2">Code</th> </tr> <tr> <td></td> <th>③</th> <th>④</th> </tr> </thead> <tbody> <tr> <td>Blank</td> <td>0</td> <td>0</td> </tr> <tr> <td>ON</td> <td>0</td> <td>A</td> </tr> <tr> <td>OFF</td> <td>0</td> <td>B</td> </tr> <tr> <td>START</td> <td>0</td> <td>C</td> </tr> <tr> <td>STOP</td> <td>0</td> <td>D</td> </tr> <tr> <td>OFF-ON</td> <td>2</td> <td>A</td> </tr> </tbody> </table> <p>Dimensions, mm:</p> <p>.AF87-49</p>	Code	Material	Color	S	Brass	Silver	B	Aluminum	Black	A		Aluminum	Legend	Code			③	④	Blank	0	0	ON	0	A	OFF	0	B	START	0	C	STOP	0	D	OFF-ON	2	A
Code	Material	Color																																			
S	Brass	Silver																																			
B	Aluminum	Black																																			
A		Aluminum																																			
Legend	Code																																				
	③	④																																			
Blank	0	0																																			
ON	0	A																																			
OFF	0	B																																			
START	0	C																																			
STOP	0	D																																			
OFF-ON	2	A																																			
Legend plate for AR30 emergency stop	<b>AHX720-①②</b> This aluminum legend plate is for a 30.5mm dia. panel cutout hole. Plate color: Yellow Letter color: Black  <table border="1"> <thead> <tr> <th>Legend</th> <th colspan="2">Code</th> <th>Letter height</th> </tr> <tr> <td></td> <th>①</th> <th>②</th> <td></td> </tr> </thead> <tbody> <tr> <td>Blank</td> <td>0</td> <td>0</td> <td>—</td> </tr> <tr> <td>EMERGENCY STOP</td> <td>5</td> <td>A</td> <td>7mm</td> </tr> </tbody> </table> <p>Dimensions, mm:</p> <p>Note: Engraving for making letters is not available.</p> <p>SK-598</p>	Legend	Code		Letter height		①	②		Blank	0	0	—	EMERGENCY STOP	5	A	7mm																				
Legend	Code		Letter height																																		
	①	②																																			
Blank	0	0	—																																		
EMERGENCY STOP	5	A	7mm																																		

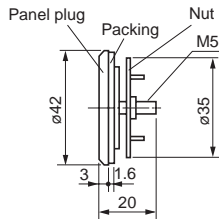Description	Type
Panel plug for AR22 and DR22   <small>SI-1027</small>	Round: <b>AHX725-B</b> Black <b>AHX725-H</b> Gray  Square: <b>AHX726-B</b> Black <b>AHX726-H</b> Gray  Dimensions, mm: $\phi 29.5 \times 17$ (AHX725) $29.5 \text{ sq.} \times 17$ (AHX726) Use this plug to cover up unused panel cutout holes. For oil proof usage, use together with packing (AR9Y730) and a nut (AR9R744).
Panel plug for AR30 and DR30   <small>T-1993</small>	<b>AHX004</b> Color: Silver (metal) This plug is used to cover up unused panel cutout hole.  Dimensions, mm: 

Description	Type
Group panel for 22mm dia. type  	<b>DR9Y004</b> These new 22mm dia. command switch/square types can be neatly aligned side by side on this group panel at a 30mm pitch to form a uniform panel face with no misalignment between mounted switches. Depending on the number of switches to be grouped (maximum 12), the panel can be divided (by cutting at the portion indicated by an asterisk (*)).  Mounting, mm: (example showing a group of three)   Dimensions, mm:  Thickness: 0.8mm  <small>AF97-233</small>

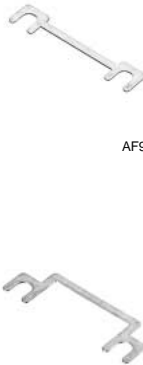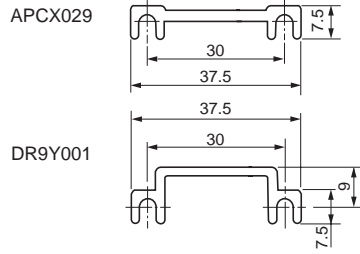

Description	Type
Jumper   <small>AF95-153</small>  <small>AF95-27</small>	<b>APCX029</b> (For pilot light without transformer) <b>DR9Y001</b> (For pilot light with transformer)  Use this jumper to connect terminals allocated in a 30mm pitch. Rated current is 3A  Dimensions, mm:  Thickness: 0.5mm






04

# Pushbuttons/Selectors/Pilot Lights






## AR22/DR22 and AR30/DR30








### Accessories

Description	Type																														
Lens for illuminated pushbutton switch and pilot lights  	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> </tr> </thead> <tbody> <tr> <td><b>AR9C011</b>-□*<sup>1</sup></td> <td>AR22F0L, F5L, F0P, F5P</td> </tr> <tr> <td><b>AR9C012</b>-□*<sup>1</sup></td> <td>AR22E0L, E5L, E0P, E5P AR22G1L, G2L, G4L, G6L, G7L, G9L DR22E3L, E3P AR30E0L, E5L, G2L, G3L, G4L, G7L, G8L, G9L DR30E3L</td> </tr> <tr> <td><b>AR9C013</b>-□*<sup>1</sup></td> <td>AR22F0M, F5M</td> </tr> <tr> <td><b>AR9C014</b>-□*<sup>1</sup></td> <td>AR22E0M, E5M DR22E3M, F5M</td> </tr> <tr> <td><b>AR9C015</b>-□</td> <td>AR22M4L, M4P</td> </tr> <tr> <td><b>AR9C016</b>-□</td> <td>AR22M0L, M5L</td> </tr> <tr> <td><b>DR9C001</b>-□</td> <td>DR22D0L DR30D0L*<sup>2</sup></td> </tr> <tr> <td><b>DR9C002</b>-□</td> <td>DR22K0L DR30K0L*<sup>2</sup></td> </tr> <tr> <td><b>DR9C120-C</b></td> <td>DR30M4M</td> </tr> <tr> <td><b>DR9C121-C</b></td> <td>DR30F4N</td> </tr> <tr> <td><b>DR9C122-C</b></td> <td>DR30F4M</td> </tr> <tr> <td><b>DR9C126</b>-□*<sup>1</sup></td> <td>DR22F3M</td> </tr> <tr> <td><b>DR9C126-C</b></td> <td>DR22F4M</td> </tr> <tr> <td><b>DR9C127</b>-□*<sup>1</sup></td> <td>DR22E3N</td> </tr> </tbody> </table>	Type	Used with	<b>AR9C011</b> -□* <sup>1</sup>	AR22F0L, F5L, F0P, F5P	<b>AR9C012</b> -□* <sup>1</sup>	AR22E0L, E5L, E0P, E5P AR22G1L, G2L, G4L, G6L, G7L, G9L DR22E3L, E3P AR30E0L, E5L, G2L, G3L, G4L, G7L, G8L, G9L DR30E3L	<b>AR9C013</b> -□* <sup>1</sup>	AR22F0M, F5M	<b>AR9C014</b> -□* <sup>1</sup>	AR22E0M, E5M DR22E3M, F5M	<b>AR9C015</b> -□	AR22M4L, M4P	<b>AR9C016</b> -□	AR22M0L, M5L	<b>DR9C001</b> -□	DR22D0L DR30D0L* <sup>2</sup>	<b>DR9C002</b> -□	DR22K0L DR30K0L* <sup>2</sup>	<b>DR9C120-C</b>	DR30M4M	<b>DR9C121-C</b>	DR30F4N	<b>DR9C122-C</b>	DR30F4M	<b>DR9C126</b> -□* <sup>1</sup>	DR22F3M	<b>DR9C126-C</b>	DR22F4M	<b>DR9C127</b> -□* <sup>1</sup>	DR22E3N
	Type	Used with																													
	<b>AR9C011</b> -□* <sup>1</sup>	AR22F0L, F5L, F0P, F5P																													
	<b>AR9C012</b> -□* <sup>1</sup>	AR22E0L, E5L, E0P, E5P AR22G1L, G2L, G4L, G6L, G7L, G9L DR22E3L, E3P AR30E0L, E5L, G2L, G3L, G4L, G7L, G8L, G9L DR30E3L																													
	<b>AR9C013</b> -□* <sup>1</sup>	AR22F0M, F5M																													
	<b>AR9C014</b> -□* <sup>1</sup>	AR22E0M, E5M DR22E3M, F5M																													
	<b>AR9C015</b> -□	AR22M4L, M4P																													
	<b>AR9C016</b> -□	AR22M0L, M5L																													
	<b>DR9C001</b> -□	DR22D0L DR30D0L* <sup>2</sup>																													
	<b>DR9C002</b> -□	DR22K0L DR30K0L* <sup>2</sup>																													
	<b>DR9C120-C</b>	DR30M4M																													
	<b>DR9C121-C</b>	DR30F4N																													
	<b>DR9C122-C</b>	DR30F4M																													
	<b>DR9C126</b> -□* <sup>1</sup>	DR22F3M																													
	<b>DR9C126-C</b>	DR22F4M																													
	<b>DR9C127</b> -□* <sup>1</sup>	DR22E3N																													
	<table border="1"> <thead> <tr> <th colspan="5">Replace the □ mark by the lens color code</th> </tr> <tr> <th>Color</th> <th>Green</th> <th>Red</th> <th>Clear</th> <th>Yellow</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>G</td> <td>R</td> <td>C</td> <td>Y</td> </tr> </tbody> </table>	Replace the □ mark by the lens color code					Color	Green	Red	Clear	Yellow	Code	G	R	C	Y															
	Replace the □ mark by the lens color code																														
	Color	Green	Red	Clear	Yellow																										
	Code	G	R	C	Y																										
<table border="1"> <thead> <tr> <th colspan="3">Replace the □ mark by the lens color code</th> </tr> <tr> <th>Color</th> <th>Orange</th> <th>Blue</th> <th>White</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>A</td> <td>S</td> <td>W</td> </tr> </tbody> </table>	Replace the □ mark by the lens color code			Color	Orange	Blue	White	Code	A	S	W																				
Replace the □ mark by the lens color code																															
Color	Orange	Blue	White																												
Code	A	S	W																												
Notes: * <sup>1</sup> When the main unit code is "W" (white), use a lens of clear color. * <sup>2</sup> Except for pilot lights with resistor																															
AF94-458																															
Button for pushbutton switch  	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> </tr> </thead> <tbody> <tr> <td><b>AR9C001</b>-□</td> <td>AR22F0R, F5R, F0Y, F5Y, G2R, G7R AR30F0R, F5R, FVR AR22S1R, S2R, S3R, S6R AR30S1R, S2R, S3R, S6R</td> </tr> <tr> <td><b>AR9C003</b>-□</td> <td>AR22E0R, E5R, G0R, G3R, G5R, G8R AR22E0Y, E5Y AR30E0R, E5R, G0R, G1R, G5R, G6R</td> </tr> <tr> <td><b>AR9C004</b>-□</td> <td>AR22F0S, F5S</td> </tr> <tr> <td><b>AR9C005</b>-□</td> <td>AR22E0S, E5S</td> </tr> <tr> <td><b>AR9C006</b>-□</td> <td>AR22M4R, M9R, M4Y AR30M4R</td> </tr> <tr> <td><b>AR9C007</b>-□</td> <td>AR22M0R, M5R AR30M0R, M3R, M5R, M8R</td> </tr> <tr> <td><b>AR9C024</b>-□</td> <td>AR30B0R, B1R, B2R, B3R</td> </tr> <tr> <td><b>AR9C027-C</b></td> <td>AR22FAR, FBR, AR30FAR, FBR</td> </tr> <tr> <td><b>AR9C028-C</b></td> <td>AR22EAR, EBR, AR30EAR, EBR</td> </tr> <tr> <td><b>AR9C041-R</b></td> <td>AR30N0R</td> </tr> <tr> <td><b>AHX539</b></td> <td>Cap for AR30FVR</td> </tr> </tbody> </table>	Type	Used with	<b>AR9C001</b> -□	AR22F0R, F5R, F0Y, F5Y, G2R, G7R AR30F0R, F5R, FVR AR22S1R, S2R, S3R, S6R AR30S1R, S2R, S3R, S6R	<b>AR9C003</b> -□	AR22E0R, E5R, G0R, G3R, G5R, G8R AR22E0Y, E5Y AR30E0R, E5R, G0R, G1R, G5R, G6R	<b>AR9C004</b> -□	AR22F0S, F5S	<b>AR9C005</b> -□	AR22E0S, E5S	<b>AR9C006</b> -□	AR22M4R, M9R, M4Y AR30M4R	<b>AR9C007</b> -□	AR22M0R, M5R AR30M0R, M3R, M5R, M8R	<b>AR9C024</b> -□	AR30B0R, B1R, B2R, B3R	<b>AR9C027-C</b>	AR22FAR, FBR, AR30FAR, FBR	<b>AR9C028-C</b>	AR22EAR, EBR, AR30EAR, EBR	<b>AR9C041-R</b>	AR30N0R	<b>AHX539</b>	Cap for AR30FVR						
	Type	Used with																													
	<b>AR9C001</b> -□	AR22F0R, F5R, F0Y, F5Y, G2R, G7R AR30F0R, F5R, FVR AR22S1R, S2R, S3R, S6R AR30S1R, S2R, S3R, S6R																													
	<b>AR9C003</b> -□	AR22E0R, E5R, G0R, G3R, G5R, G8R AR22E0Y, E5Y AR30E0R, E5R, G0R, G1R, G5R, G6R																													
	<b>AR9C004</b> -□	AR22F0S, F5S																													
	<b>AR9C005</b> -□	AR22E0S, E5S																													
	<b>AR9C006</b> -□	AR22M4R, M9R, M4Y AR30M4R																													
	<b>AR9C007</b> -□	AR22M0R, M5R AR30M0R, M3R, M5R, M8R																													
	<b>AR9C024</b> -□	AR30B0R, B1R, B2R, B3R																													
	<b>AR9C027-C</b>	AR22FAR, FBR, AR30FAR, FBR																													
<b>AR9C028-C</b>	AR22EAR, EBR, AR30EAR, EBR																														
<b>AR9C041-R</b>	AR30N0R																														
<b>AHX539</b>	Cap for AR30FVR																														
<table border="1"> <thead> <tr> <th colspan="5">Replace the □ mark by the button color code</th> </tr> <tr> <th>Color</th> <th>Green</th> <th>Red</th> <th>Black</th> <th>White</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>G</td> <td>R</td> <td>B</td> <td>W</td> </tr> </tbody> </table>	Replace the □ mark by the button color code					Color	Green	Red	Black	White	Code	G	R	B	W																
Replace the □ mark by the button color code																															
Color	Green	Red	Black	White																											
Code	G	R	B	W																											
<table border="1"> <thead> <tr> <th colspan="3">Replace the □ mark by the button color code</th> </tr> <tr> <th>Color</th> <th>Yellow</th> <th>Orange</th> <th>Blue</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>Y</td> <td>A</td> <td>S</td> </tr> </tbody> </table>	Replace the □ mark by the button color code			Color	Yellow	Orange	Blue	Code	Y	A	S																				
Replace the □ mark by the button color code																															
Color	Yellow	Orange	Blue																												
Code	Y	A	S																												
KK02-101A																															
KK02-102A																															
KK02-103A																															

Description	Type																				
Center button (For V type)  	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> </tr> </thead> <tbody> <tr> <td><b>AR9C020-R</b></td> <td>AR22V0R, V2R, VSR AR30V0R, V2R</td> </tr> <tr> <td><b>AR9C020</b>-□</td> <td>AR22V5R, AR30V5R</td> </tr> <tr> <td><b>AR9C018-R</b></td> <td>AR22V0L, V2L, VDL, VAL, VSL AR30V0L, V2L</td> </tr> <tr> <td><b>AR9C018</b>-□</td> <td>AR22V5L*, AR30V5L*</td> </tr> </tbody> </table>	Type	Used with	<b>AR9C020-R</b>	AR22V0R, V2R, VSR AR30V0R, V2R	<b>AR9C020</b> -□	AR22V5R, AR30V5R	<b>AR9C018-R</b>	AR22V0L, V2L, VDL, VAL, VSL AR30V0L, V2L	<b>AR9C018</b> -□	AR22V5L*, AR30V5L*										
	Type	Used with																			
<b>AR9C020-R</b>	AR22V0R, V2R, VSR AR30V0R, V2R																				
<b>AR9C020</b> -□	AR22V5R, AR30V5R																				
<b>AR9C018-R</b>	AR22V0L, V2L, VDL, VAL, VSL AR30V0L, V2L																				
<b>AR9C018</b> -□	AR22V5L*, AR30V5L*																				
<table border="1"> <thead> <tr> <th colspan="4">Replace the □ mark by the button color code</th> </tr> <tr> <th>Color</th> <th>Red</th> <th>Black</th> <th>Yellow</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>R</td> <td>B</td> <td>Y</td> </tr> </tbody> </table>	Replace the □ mark by the button color code				Color	Red	Black	Yellow	Code	R	B	Y									
Replace the □ mark by the button color code																					
Color	Red	Black	Yellow																		
Code	R	B	Y																		
Note: * V5L: Red and yellow only																					
AF95-32																					
Push-lock, turn-reset button (V and Q types)  	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> </tr> </thead> <tbody> <tr> <td><b>AR9C008-R</b></td> <td>AR22V4R</td> </tr> <tr> <td><b>AR9C010-R</b></td> <td>AR22Q2R, AR30Q2R</td> </tr> <tr> <td><b>AR9C017-R</b></td> <td>AR22V2R, V2L, AR30V2R, V2L</td> </tr> <tr> <td><b>AR9C019-R</b></td> <td>AR22VAL</td> </tr> <tr> <td><b>AR9C021-R</b></td> <td>AR22V0R, V0L, AR30V0R, V0L</td> </tr> <tr> <td><b>AR9C021</b>-□</td> <td>AR22V5R, V5L*, AR30V5R, V5L*</td> </tr> <tr> <td><b>AR9C026-R</b></td> <td>AR22VDL</td> </tr> <tr> <td><b>AR9C029-R</b></td> <td>AR30V1R</td> </tr> <tr> <td><b>AR9C040-R</b></td> <td>AR22VSR, VSL</td> </tr> </tbody> </table>	Type	Used with	<b>AR9C008-R</b>	AR22V4R	<b>AR9C010-R</b>	AR22Q2R, AR30Q2R	<b>AR9C017-R</b>	AR22V2R, V2L, AR30V2R, V2L	<b>AR9C019-R</b>	AR22VAL	<b>AR9C021-R</b>	AR22V0R, V0L, AR30V0R, V0L	<b>AR9C021</b> -□	AR22V5R, V5L*, AR30V5R, V5L*	<b>AR9C026-R</b>	AR22VDL	<b>AR9C029-R</b>	AR30V1R	<b>AR9C040-R</b>	AR22VSR, VSL
	Type	Used with																			
	<b>AR9C008-R</b>	AR22V4R																			
	<b>AR9C010-R</b>	AR22Q2R, AR30Q2R																			
	<b>AR9C017-R</b>	AR22V2R, V2L, AR30V2R, V2L																			
	<b>AR9C019-R</b>	AR22VAL																			
	<b>AR9C021-R</b>	AR22V0R, V0L, AR30V0R, V0L																			
	<b>AR9C021</b> -□	AR22V5R, V5L*, AR30V5R, V5L*																			
	<b>AR9C026-R</b>	AR22VDL																			
	<b>AR9C029-R</b>	AR30V1R																			
<b>AR9C040-R</b>	AR22VSR, VSL																				
<table border="1"> <thead> <tr> <th colspan="4">Replace the □ mark by the button color code</th> </tr> <tr> <th>Color</th> <th>Red</th> <th>Black</th> <th>Yellow</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>R</td> <td>B</td> <td>Y</td> </tr> </tbody> </table>	Replace the □ mark by the button color code				Color	Red	Black	Yellow	Code	R	B	Y									
Replace the □ mark by the button color code																					
Color	Red	Black	Yellow																		
Code	R	B	Y																		
Note: * V5L: Red and yellow only																					
AF95-31																					
KK02-104A																					
Knob  	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> </tr> </thead> <tbody> <tr> <td><b>AR9M006</b>-□</td> <td>AR22PR, PCR, PY, PCY AR30PR, PCR</td> </tr> </tbody> </table>	Type	Used with	<b>AR9M006</b> -□	AR22PR, PCR, PY, PCY AR30PR, PCR																
	Type	Used with																			
<b>AR9M006</b> -□	AR22PR, PCR, PY, PCY AR30PR, PCR																				
<table border="1"> <thead> <tr> <th colspan="4">Replace the □ mark by the knob color code</th> </tr> <tr> <th>Color</th> <th>Black</th> <th>Green</th> <th>Red</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>B</td> <td>G</td> <td>R</td> </tr> </tbody> </table>	Replace the □ mark by the knob color code				Color	Black	Green	Red	Code	B	G	R									
Replace the □ mark by the knob color code																					
Color	Black	Green	Red																		
Code	B	G	R																		
AF95-43																					
Lever  	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> </tr> </thead> <tbody> <tr> <td><b>AR9M007</b>-□</td> <td>AR22WR, WCR, WY, WCY AR30WR, WCR</td> </tr> </tbody> </table>	Type	Used with	<b>AR9M007</b> -□	AR22WR, WCR, WY, WCY AR30WR, WCR																
	Type	Used with																			
<b>AR9M007</b> -□	AR22WR, WCR, WY, WCY AR30WR, WCR																				
<table border="1"> <thead> <tr> <th colspan="4">Replace the □ mark by the lever color code</th> </tr> <tr> <th>Color</th> <th>Black</th> <th>Green</th> <th>Red</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>B</td> <td>G</td> <td>R</td> </tr> </tbody> </table>	Replace the □ mark by the lever color code				Color	Black	Green	Red	Code	B	G	R									
Replace the □ mark by the lever color code																					
Color	Black	Green	Red																		
Code	B	G	R																		
AF95-42																					
Cylindrical knob  	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> </tr> </thead> <tbody> <tr> <td><b>AR9M008</b>-□</td> <td>AR22RR, RCR, RY, RCY</td> </tr> </tbody> </table>	Type	Used with	<b>AR9M008</b> -□	AR22RR, RCR, RY, RCY																
	Type	Used with																			
<b>AR9M008</b> -□	AR22RR, RCR, RY, RCY																				
<table border="1"> <thead> <tr> <th colspan="4">Replace the □ mark by the knob color code</th> </tr> <tr> <th>Color</th> <th>Black</th> <th>Green</th> <th>Red</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>B</td> <td>G</td> <td>R</td> </tr> </tbody> </table>	Replace the □ mark by the knob color code				Color	Black	Green	Red	Code	B	G	R									
Replace the □ mark by the knob color code																					
Color	Black	Green	Red																		
Code	B	G	R																		
AF95-44																					

# Pushbuttons/Selectors/Pilot Lights AR22/DR22 and AR30/DR30 Accessories




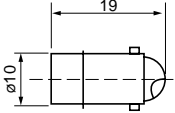
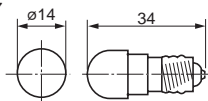
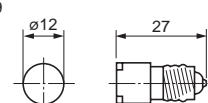
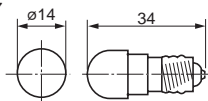
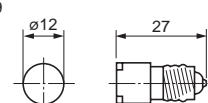
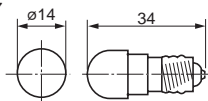
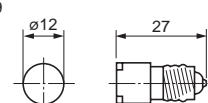
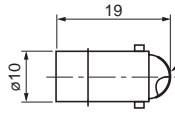
<p><b>Description</b></p> <p>Knob (for illuminated selector switch)</p>  <p style="text-align: right; font-size: small;">AF94-465</p>	<p><b>Type</b></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"><b>Type</b></td> <td><b>Used with</b></td> </tr> <tr> <td><b>AR9M005</b>-□</td> <td>AR22PL, PP AR30PL</td> </tr> </table> <p>Replace the □ mark by the knob color code</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"><b>Color</b></td> <td>Green</td> <td>Red</td> <td>White</td> </tr> <tr> <td><b>Code</b></td> <td>G</td> <td>R</td> <td>W</td> </tr> </table> <hr/> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"><b>Color</b></td> <td>Yellow</td> <td>Orange</td> <td>Blue</td> </tr> <tr> <td><b>Code</b></td> <td>Y</td> <td>A</td> <td>S</td> </tr> </table>	<b>Type</b>	<b>Used with</b>	<b>AR9M005</b> -□	AR22PL, PP AR30PL	<b>Color</b>	Green	Red	White	<b>Code</b>	G	R	W	<b>Color</b>	Yellow	Orange	Blue	<b>Code</b>	Y	A	S																	
<b>Type</b>	<b>Used with</b>																																					
<b>AR9M005</b> -□	AR22PL, PP AR30PL																																					
<b>Color</b>	Green	Red	White																																			
<b>Code</b>	G	R	W																																			
<b>Color</b>	Yellow	Orange	Blue																																			
<b>Code</b>	Y	A	S																																			
<p><b>Key</b></p>  <p style="text-align: right; font-size: small;">KKD09-012</p>	<p><b>Type</b></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"><b>Type</b></td> <td><b>Used with</b></td> </tr> <tr> <td><b>AR9C022</b>-□</td> <td>AR22JR, JCR, AR30JR, JCR,</td> </tr> <tr> <td><b>AR9C025</b>-□</td> <td>AR22JAR, AR30JAR</td> </tr> </table> <p>Replace the □ mark by the key type code. Code: A, B, C, D, E or F, 6 types.</p>	<b>Type</b>	<b>Used with</b>	<b>AR9C022</b> -□	AR22JR, JCR, AR30JR, JCR,	<b>AR9C025</b> -□	AR22JAR, AR30JAR																															
<b>Type</b>	<b>Used with</b>																																					
<b>AR9C022</b> -□	AR22JR, JCR, AR30JR, JCR,																																					
<b>AR9C025</b> -□	AR22JAR, AR30JAR																																					
<p><b>Legend plate</b> (for F type with round bezel)</p>  <p style="text-align: right; font-size: small;">AF94-459</p>	<p><b>AR9P001-W</b></p> <p>This part is made of acrylic resin. Use paint or thinner compatible with resin.</p> <p>Dimensions, mm: ø17.8 x 0.9</p>																																					
<p><b>Legend plate</b> (for E type with round bezel)</p>  <p style="text-align: right; font-size: small;">AF94-459</p>	<p><b>AR9P002-W</b></p> <p>This part is made of acrylic resin. Use paint or thinner compatible with resin.</p> <p>Dimensions, mm: ø19.7 x 4.2</p>																																					
<p><b>Symbol mark plate</b></p>  <p style="text-align: right; font-size: small;">AF98-197</p>	<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"><b>Type</b></td> <td><b>Used with</b></td> </tr> <tr> <td><b>AR9P019</b>-□ □ ■</td> <td>AR22FAR, FBR, AR30FAR, FBR</td> </tr> <tr> <td><b>AR9P020</b>-□ □ ■</td> <td>AR22EAR, EBR, AR30EAR, EBR</td> </tr> </table> <p>□ □ ■ :</p> <table style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <td style="width: 10%;">Symbol</td> <td>○</td> <td>∩</td> <td>⊕</td> <td>○</td> <td>∩</td> <td>⊕</td> </tr> <tr> <td>Plate</td> <td>W</td> <td>B</td> <td>W</td> <td>B</td> <td>W</td> <td>B</td> <td>Clear</td> </tr> <tr> <td>Symbol</td> <td>Red</td> <td>Green</td> <td>Green</td> <td>Black</td> <td></td> <td></td> <td></td> </tr> <tr> <td>Code</td> <td>01</td> <td>02</td> <td>03</td> <td>04</td> <td>11</td> <td>12</td> <td>02B 04B 12B</td> </tr> </table> <p style="font-size: x-small;">W: White, B: black</p>	<b>Type</b>	<b>Used with</b>	<b>AR9P019</b> -□ □ ■	AR22FAR, FBR, AR30FAR, FBR	<b>AR9P020</b> -□ □ ■	AR22EAR, EBR, AR30EAR, EBR	Symbol	○	∩	⊕	○	∩	⊕	Plate	W	B	W	B	W	B	Clear	Symbol	Red	Green	Green	Black				Code	01	02	03	04	11	12	02B 04B 12B
<b>Type</b>	<b>Used with</b>																																					
<b>AR9P019</b> -□ □ ■	AR22FAR, FBR, AR30FAR, FBR																																					
<b>AR9P020</b> -□ □ ■	AR22EAR, EBR, AR30EAR, EBR																																					
Symbol	○	∩	⊕	○	∩	⊕																																
Plate	W	B	W	B	W	B	Clear																															
Symbol	Red	Green	Green	Black																																		
Code	01	02	03	04	11	12	02B 04B 12B																															


<p><b>Description</b></p> <p>Legend plate and color plate (for F type with square bezel)</p>  <p style="text-align: right; font-size: small;">AF94-460</p>  <p style="text-align: right; font-size: small;">KK02-105A</p>  <p style="text-align: right; font-size: small;">KK02-106A</p>  <p style="text-align: right; font-size: small;">KK02-107A</p>	<p><b>Type</b></p> <ul style="list-style-type: none"> <li>• Legend plate</li> </ul> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"><b>Type</b></td> <td><b>Used with</b></td> </tr> <tr> <td><b>DR9P241-W</b></td> <td>AR22F0M, F5M DR22F3M, F4M</td> </tr> <tr> <td><b>DR9P242-WP</b></td> <td>DR30M4M</td> </tr> <tr> <td><b>DR9P242-W</b></td> <td>DR30M4M, LED(W)</td> </tr> <tr> <td><b>DR9P243-WP</b></td> <td>DR30F4N</td> </tr> <tr> <td><b>DR9P243-W</b></td> <td>DR30F4N, LED(W)</td> </tr> <tr> <td><b>DR9P244-WP</b></td> <td>DR30F4M</td> </tr> <tr> <td><b>DR9P244-W</b></td> <td>DR30F4M, LED(W)</td> </tr> </table> <p>Types DR9P242, 243 and 244-W are LED illuminated, and used exclusively with operators having a "W" in the type number.</p> <ul style="list-style-type: none"> <li>• color plate</li> </ul> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"><b>Type</b></td> <td><b>Used with</b></td> </tr> <tr> <td><b>DR9P241</b>-□</td> <td>DR22F3M, F4M</td> </tr> <tr> <td><b>DR9P242</b>-□</td> <td>DR30M4M</td> </tr> <tr> <td><b>DR9P243</b>-□</td> <td>DR30F4N</td> </tr> <tr> <td><b>DR9P244</b>-□</td> <td>DR30F4M</td> </tr> </table> <p>Replace the □ mark by the color code</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"><b>Color</b></td> <td>Green</td> <td>Red</td> <td>White</td> </tr> <tr> <td><b>Code</b></td> <td>G</td> <td>R</td> <td>W</td> </tr> </table> <hr/> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"><b>Color</b></td> <td>Yellow</td> <td>Orange</td> <td>Blue</td> </tr> <tr> <td><b>Code</b></td> <td>Y</td> <td>A</td> <td>S</td> </tr> </table> <p>This part is made of acrylic resin. Use paint or thinner compatible with resin.</p> <p>Dimensions, mm:  DR9P241: 20.8 sq. x 0.8  DR9P242: 33.4 sq. x 1  DR9P243: 33.4 x 27.4 x 1  DR9P244: 27.4 sq. x 1</p>	<b>Type</b>	<b>Used with</b>	<b>DR9P241-W</b>	AR22F0M, F5M DR22F3M, F4M	<b>DR9P242-WP</b>	DR30M4M	<b>DR9P242-W</b>	DR30M4M, LED(W)	<b>DR9P243-WP</b>	DR30F4N	<b>DR9P243-W</b>	DR30F4N, LED(W)	<b>DR9P244-WP</b>	DR30F4M	<b>DR9P244-W</b>	DR30F4M, LED(W)	<b>Type</b>	<b>Used with</b>	<b>DR9P241</b> -□	DR22F3M, F4M	<b>DR9P242</b> -□	DR30M4M	<b>DR9P243</b> -□	DR30F4N	<b>DR9P244</b> -□	DR30F4M	<b>Color</b>	Green	Red	White	<b>Code</b>	G	R	W	<b>Color</b>	Yellow	Orange	Blue	<b>Code</b>	Y	A	S
<b>Type</b>	<b>Used with</b>																																										
<b>DR9P241-W</b>	AR22F0M, F5M DR22F3M, F4M																																										
<b>DR9P242-WP</b>	DR30M4M																																										
<b>DR9P242-W</b>	DR30M4M, LED(W)																																										
<b>DR9P243-WP</b>	DR30F4N																																										
<b>DR9P243-W</b>	DR30F4N, LED(W)																																										
<b>DR9P244-WP</b>	DR30F4M																																										
<b>DR9P244-W</b>	DR30F4M, LED(W)																																										
<b>Type</b>	<b>Used with</b>																																										
<b>DR9P241</b> -□	DR22F3M, F4M																																										
<b>DR9P242</b> -□	DR30M4M																																										
<b>DR9P243</b> -□	DR30F4N																																										
<b>DR9P244</b> -□	DR30F4M																																										
<b>Color</b>	Green	Red	White																																								
<b>Code</b>	G	R	W																																								
<b>Color</b>	Yellow	Orange	Blue																																								
<b>Code</b>	Y	A	S																																								
<p><b>Legend plate</b> (for E type with square bezel)</p>  <p style="text-align: right; font-size: small;">AF94-460</p>  <p style="text-align: right; font-size: small;">AF94-460</p>	<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"><b>Type</b></td> <td><b>Used with</b></td> </tr> <tr> <td><b>AR9P003-W</b></td> <td>AR22E0M, E5M DR22F5M, E3M</td> </tr> <tr> <td><b>DR9P001-W</b></td> <td>DR22E3N</td> </tr> </table> <p>This part is made of acrylic resin. Use paint or thinner compatible with resin.</p> <p>Dimensions, mm:  AR9P003-W: 20 sq. x 4.8  DR9P001-W: 19.7 x 26.7 x 4.5</p>	<b>Type</b>	<b>Used with</b>	<b>AR9P003-W</b>	AR22E0M, E5M DR22F5M, E3M	<b>DR9P001-W</b>	DR22E3N																																				
<b>Type</b>	<b>Used with</b>																																										
<b>AR9P003-W</b>	AR22E0M, E5M DR22F5M, E3M																																										
<b>DR9P001-W</b>	DR22E3N																																										
<p><b>Legend sheet</b></p>  <p style="text-align: right; font-size: small;">AF95-34</p>	<p><b>AHX727</b></p> <p>Affix this seal to the DR9P241-□/AR9P003 legend plate for marking or labeling.</p> <p>Dimensions, mm: 20 sq. x 0.025</p>																																										

# Pushbuttons/Selectors/Pilot Lights

## AR22/DR22 and AR30/DR30


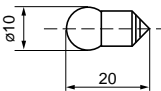

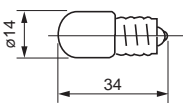



### Accessories

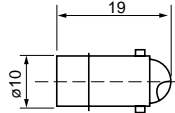







Description	Type																																				
    	<table border="1"> <thead> <tr> <th>Type</th> <th>Lamp voltage</th> </tr> </thead> <tbody> <tr> <td><b>APX510-6</b> □</td> <td>6V AC</td> </tr> <tr> <td><b>APX510-D6</b> □</td> <td>6V DC</td> </tr> <tr> <td><b>APX510-12</b> □</td> <td>12V AC/DC</td> </tr> <tr> <td><b>APX510-15</b> □</td> <td>15V AC/DC</td> </tr> <tr> <td><b>APX510-24</b> □</td> <td>24V AC/DC</td> </tr> </tbody> </table> <p>Replace the □ mark by the luminous color code</p> <table border="1"> <thead> <tr> <th>Luminous color</th> <th>Yellow</th> <th>Red</th> <th>Green</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>Y</td> <td>R</td> <td>G</td> </tr> <tr> <td>Lens color</td> <td>Y</td> <td>R</td> <td>G</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Luminous color</th> <th>Amber</th> <th>Orange</th> <th>Blue</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>A</td> <td>O</td> <td>S</td> </tr> <tr> <td>Lens color</td> <td>A</td> <td>W, A*</td> <td>S</td> </tr> </tbody> </table> <p>* Orange is available only for the DR22F4M pilot light.</p> <p>Dimensions, mm:</p>  <p>Lamp base: BA9s/13</p>	Type	Lamp voltage	<b>APX510-6</b> □	6V AC	<b>APX510-D6</b> □	6V DC	<b>APX510-12</b> □	12V AC/DC	<b>APX510-15</b> □	15V AC/DC	<b>APX510-24</b> □	24V AC/DC	Luminous color	Yellow	Red	Green	Code	Y	R	G	Lens color	Y	R	G	Luminous color	Amber	Orange	Blue	Code	A	O	S	Lens color	A	W, A*	S
	Type	Lamp voltage																																			
	<b>APX510-6</b> □	6V AC																																			
	<b>APX510-D6</b> □	6V DC																																			
	<b>APX510-12</b> □	12V AC/DC																																			
	<b>APX510-15</b> □	15V AC/DC																																			
	<b>APX510-24</b> □	24V AC/DC																																			
	Luminous color	Yellow	Red	Green																																	
	Code	Y	R	G																																	
	Lens color	Y	R	G																																	
Luminous color	Amber	Orange	Blue																																		
Code	A	O	S																																		
Lens color	A	W, A*	S																																		
LED lamp (for DR30 with resistor)	<table border="1"> <thead> <tr> <th>Type</th> <th>Lamp voltage</th> </tr> </thead> <tbody> <tr> <td><b>APX507-24</b> □</td> <td>24V AC/DC</td> </tr> <tr> <td><b>APX509-24O</b></td> <td></td> </tr> </tbody> </table> <p>Note: The symbol in the box indicates the color of light emitted. (See note APX510.) When the code is "W" (white), use an LED lamp ((APX.509-24O)</p> <p>Dimensions, mm:</p> <table border="1"> <tbody> <tr> <td>APX507</td> <td></td> </tr> <tr> <td>APX509</td> <td></td> </tr> </tbody> </table> <p>Lamp base: E12/15</p>	Type	Lamp voltage	<b>APX507-24</b> □	24V AC/DC	<b>APX509-24O</b>		APX507		APX509																											
Type	Lamp voltage																																				
<b>APX507-24</b> □	24V AC/DC																																				
<b>APX509-24O</b>																																					
APX507																																					
APX509																																					
LED lamp (for AR22VGF type)	<table border="1"> <thead> <tr> <th>Type</th> <th>Lamp voltage</th> </tr> </thead> <tbody> <tr> <td><b>AR9L002-ER</b></td> <td>24V AC/DC</td> </tr> </tbody> </table> <p>Luminous color: Red</p> <p>Dimensions, mm:</p>  <p>Lamp base: BA9s/13</p> <p>Do not use the LED lamp for other types.</p>	Type	Lamp voltage	<b>AR9L002-ER</b>	24V AC/DC																																
Type	Lamp voltage																																				
<b>AR9L002-ER</b>	24V AC/DC																																				

Description	Type																															
Neon lamp (for AR22VGF type)	<table border="1"> <thead> <tr> <th>Type</th> <th>Lamp voltage</th> </tr> </thead> <tbody> <tr> <td><b>AR9N001-HA</b></td> <td>110V AC</td> </tr> <tr> <td><b>AR9N001-KA</b></td> <td>120V AC</td> </tr> <tr> <td><b>AR9N001-MA</b></td> <td>220V AC</td> </tr> <tr> <td><b>AR9N001-PA</b></td> <td>240V AC</td> </tr> </tbody> </table> <p>Luminous color: Orange</p> <p>Dimensions, mm:</p> <p>Do not use the LED lamp for other types.</p>	Type	Lamp voltage	<b>AR9N001-HA</b>	110V AC	<b>AR9N001-KA</b>	120V AC	<b>AR9N001-MA</b>	220V AC	<b>AR9N001-PA</b>	240V AC																					
Type	Lamp voltage																															
<b>AR9N001-HA</b>	110V AC																															
<b>AR9N001-KA</b>	120V AC																															
<b>AR9N001-MA</b>	220V AC																															
<b>AR9N001-PA</b>	240V AC																															
LED lamp for DR30 (square type)	<table border="1"> <thead> <tr> <th>Type</th> <th>Lamp voltage</th> </tr> </thead> <tbody> <tr> <td><b>DN6Q005-6</b> □</td> <td>6V DC</td> </tr> <tr> <td><b>DN6Q005-2</b> □</td> <td>12V AC</td> </tr> <tr> <td><b>DN6Q005-B</b> □</td> <td>12V AC/DC</td> </tr> <tr> <td><b>DN6Q005-E</b> □</td> <td>24V AC/DC</td> </tr> </tbody> </table> <p>Replace the □ mark by the luminous color code</p> <table border="1"> <thead> <tr> <th>Luminous color</th> <th>Yellow</th> <th>Red</th> <th>Green</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>Y</td> <td>R</td> <td>G</td> </tr> <tr> <td>Lens color</td> <td>Y</td> <td>R</td> <td>G</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Luminous color</th> <th>Amber</th> <th>Orange</th> </tr> </thead> <tbody> <tr> <td>Code</td> <td>Y</td> <td>W</td> </tr> <tr> <td>Lens color</td> <td>Y</td> <td>W</td> </tr> </tbody> </table> <p>Dimensions, mm:</p>  <p>Lamp base: BA9s/13</p> <p>Do not use the LED lamp for other types.</p>	Type	Lamp voltage	<b>DN6Q005-6</b> □	6V DC	<b>DN6Q005-2</b> □	12V AC	<b>DN6Q005-B</b> □	12V AC/DC	<b>DN6Q005-E</b> □	24V AC/DC	Luminous color	Yellow	Red	Green	Code	Y	R	G	Lens color	Y	R	G	Luminous color	Amber	Orange	Code	Y	W	Lens color	Y	W
Type	Lamp voltage																															
<b>DN6Q005-6</b> □	6V DC																															
<b>DN6Q005-2</b> □	12V AC																															
<b>DN6Q005-B</b> □	12V AC/DC																															
<b>DN6Q005-E</b> □	24V AC/DC																															
Luminous color	Yellow	Red	Green																													
Code	Y	R	G																													
Lens color	Y	R	G																													
Luminous color	Amber	Orange																														
Code	Y	W																														
Lens color	Y	W																														

# Pushbuttons/Selectors/Pilot Lights AR22/DR22 and AR30/DR30 Accessories

04


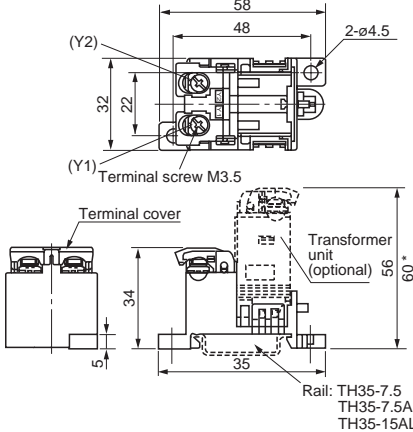


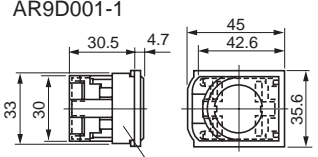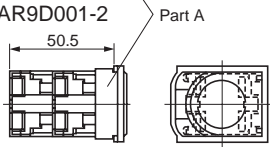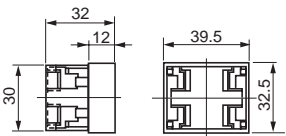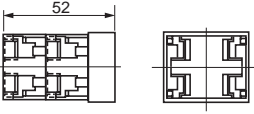
Description	Type		
  <small>AF89-427</small>	Type	Lamp voltage	Rated voltage, consumption
	<b>AHX135</b>	5.5V AC/DC	6.3V AC/DC, 1W
	<b>AHX279</b>	15V AC/DC	18V AC/DC, 1W
	<b>AHX144</b>	20V AC/DC	24V AC/DC, 1W
	<b>AHX129</b>	24V AC/DC	30V AC/DC, 1W
Dimensions, mm: <div style="text-align: center;">  <p>Lamp base: BA9s/13</p> </div>			
  <small>KK02-115A</small>	Type	Lamp voltage	Rated voltage, consumption
	<b>AHX130</b>	15V AC/DC	18V AC/DC, 2W
Dimensions, mm: <div style="text-align: center;">  <p>Lamp base: E12/15</p> </div>			
  <small>AF94-455</small>	<b>AR9B290</b> <b>AR9B290-S</b>	Standard Overlap	
	Color: Blue Dimensions, mm: 19.3 x 29 x 27  Note: Terminal cover is not supplied with this.		
  <small>AF94-455</small>	<b>AR9B291</b> <b>AR9B291-S</b>	Standard Overlap	
	Color: Red Dimensions, mm: 19.3 x 29 x 27  Note: Terminal cover is not supplied with this.		
  <small>AF94-456</small>	<b>AR9B292</b>	Color: Black Dimensions, mm: 19.3 x 29 x 27	
	Note: Terminal cover is not supplied with this.		






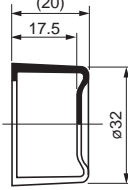

Description	Type					
  <small>KK02-117A</small>    <small>KK02-118A</small>    <small>AF94-457</small>    <small>AF95-33</small>	Type	Used with *				
	<b>AR9D001-1</b>	AR22, 1-step contact				
	<b>AR9D001-2</b>	AR22, 2-step contact				
	<b>AR9D002-1</b>	AR30, 1-step contact				
	<b>AR9D002-2</b>	AR30, 2-step contact				
	<ul style="list-style-type: none"> <li>The contact is covered with a silicon rubber cover to keep out foreign matter such as dust, etc.</li> <li>Section A of the AR9D001 is separate.</li> </ul> * See page 04/122, "AR22 □ Z8, AR30 □ Z8"					
	Dimensions, mm: <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  <p>Part A</p> </div> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div>					
	Transformer unit	Type	Primary voltage	Used with		
	<b>AR9T511-H</b>	100-110V AC	Standard type			
	<b>AR9T511-L</b>	115-127V AC	(except buzzers)			
<b>AR9T511-M</b>	200-220V AC					
<b>AR9T511-Q</b>	230-254V AC					
<b>AR9T511-S</b>	350-380V AC					
<b>AR9T511-T</b>	400-440V AC					
<b>AR9T511-V</b>	480V AC					
<b>AR9T511-W</b>	500-550V AC					
<b>AR9T557-H</b>	100-110V AC	DR30F4N, F4M,				
<b>AR9T557-L</b>	115-127V AC	M4M				
<b>AR9T557-M</b>	200-220V AC					
<b>AR9T557-Q</b>	230-254V AC					
<b>AR9T557-S</b>	350-380V AC					
<b>AR9T557-T</b>	400-440V AC					
<b>AR9T557-V</b>	480V AC					
<b>AR9T557-W</b>	500-550V AC					
Dimensions, mm: <table style="width: 100%; border: none;"> <tr> <td style="padding-right: 20px;">Up to 220 V</td> <td>22.4 x 30 x 45</td> </tr> <tr> <td>Over 220 V</td> <td>25.3 x 29 x 48</td> </tr> </table>			Up to 220 V	22.4 x 30 x 45	Over 220 V	25.3 x 29 x 48
Up to 220 V	22.4 x 30 x 45					
Over 220 V	25.3 x 29 x 48					
Note: With terminal cover						

# Pushbuttons/Selectors/Pilot Lights







## AR22/DR22 and AR30/DR30






### Accessories
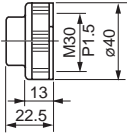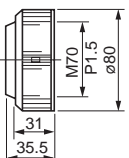
<p>Description</p> <p>Base unit for transformer separate mounting</p>  <p>KK02-118A</p>	<p>Type</p> <p><b>AR9T003</b></p> <p>Use this base in combination with a transformer unit. This base unit can be mounted using screws or rails.</p> <p>Dimensions, mm</p>  <p>* Except for the types 110V AC, 127V AC and 220V AC.</p>									
<p>Resistor</p> <p>Voltage stabilizer</p> <p>Device for LED lamp flickering</p>  <p>AF95-33</p>	<p>Resistor: <b>AR9T519-H</b> (110V DC) Fit this resistor when using LED of 24V DC rating with 110V DC power.</p> <p>Voltage stabilizer: <b>AR9T001-E</b> This unit allows an LED lamp of 24V DC rating to be used in a circuit with voltage from 27V to 35V (AC or DC).</p> <p>Flickering device:</p> <p>6V AC: <b>AR9T002-A</b> 6V DC: <b>AR9T002-6</b> 12 to 24V AC: <b>AR9T002-G</b> * 12 to 24V DC: <b>AR9T002-E</b> *</p> <p>* Used in combination with 12V, 15V, or 24V rated LED lamp.</p> <p>Note: With terminal cover</p>									
<p>Nut</p>  <p>AF94-462</p>  <p>KK2-119A</p>	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> <th>Dimensions, mm</th> </tr> </thead> <tbody> <tr> <td><b>AR9R744</b></td> <td>AR22, DR22*</td> <td>ø29.7 x 4</td> </tr> <tr> <td><b>DR9R001</b></td> <td>DR30F4M DR30F4N DR30M4M</td> <td>ø33.8 x 5</td> </tr> </tbody> </table> <p>* Except AR22VG□, Joy stick selectors, buzzers and numerical indicators</p>	Type	Used with	Dimensions, mm	<b>AR9R744</b>	AR22, DR22*	ø29.7 x 4	<b>DR9R001</b>	DR30F4M DR30F4N DR30M4M	ø33.8 x 5
Type	Used with	Dimensions, mm								
<b>AR9R744</b>	AR22, DR22*	ø29.7 x 4								
<b>DR9R001</b>	DR30F4M DR30F4N DR30M4M	ø33.8 x 5								

<p>Description</p> <p>Nut for 30mm dia. types (Resin types are black, metallic types are silver.)</p>  <p>KK2-120A</p>  <p>KK2-121A</p>  <p>KK2-122A</p>  <p>KK2-123A</p>	<p>Type</p> <p><b>AR9R001</b>: Resin types are black (standard) <b>AHX088</b>: Metallic types are silver</p> <p>Used with: AR30F0R, F5R, FAR, FBR, E0R, E5R, EAR, EBR, E0L, E5L, Q7L DR30D0L, E3L, K0L</p> <p><b>AR9R002</b>: Resin types are black (standard) <b>AHX093</b>: Metallic types are silver</p> <p>Used with: AR30M0R, M5R, M4R, G0R, G5R, N0R, S□R, V□R, Q2R, V□L, PR, PCR, WR, WCR, JR, JCR, JAR, PL, A□N, A□H</p>												
<p>Water-tight cap for 22mm dia. types</p>  <p>KK2-124A</p>	<p><b>AR9D797</b> □</p> <p>This rubber cap protects the operator and switch mechanism against dust and water. Use this cap in a dusty or moist environment.</p> <p>Used with: AR22E0L, E5L AR22E0R, E5R</p> <p>Replace the □ mark by the luminous color code.</p> <table border="1"> <thead> <tr> <th>Code</th> <th>Color</th> </tr> </thead> <tbody> <tr> <td>G</td> <td>Green</td> </tr> <tr> <td>R</td> <td>Red</td> </tr> <tr> <td>B</td> <td>Black</td> </tr> <tr> <td>Y</td> <td>Yellow</td> </tr> <tr> <td>Blank</td> <td>Clear (standard)</td> </tr> </tbody> </table> <p>Dimensions, mm:</p> 	Code	Color	G	Green	R	Red	B	Black	Y	Yellow	Blank	Clear (standard)
Code	Color												
G	Green												
R	Red												
B	Black												
Y	Yellow												
Blank	Clear (standard)												
<p>Water-tight cap for 30mm dia. types</p>  <p>Y-1559</p>	<p><b>AHX052</b></p> <p>This rubber cap protects the operator and switch mechanism against dust and water. Use this cap in a dusty or moist environment. The only color available is transparent.</p> <p>Used with: AR30E□R, E□L</p> <p>Dimensions, mm: ø36 x 22.5</p>												

# Pushbuttons/Selectors/Pilot Lights AR22/DR22 and AR30/DR30 Accessories

Description	Type																																																																
Dust-proof cap for 30mm dia. types	<table border="1"> <thead> <tr> <th>Type</th> <th>Color</th> <th>Used with</th> <th>Spec.</th> </tr> </thead> <tbody> <tr> <td><b>AHX032</b></td> <td>Red</td> <td>AR30E0R</td> <td>Oil-proof</td> </tr> <tr> <td><b>AHX033</b></td> <td>Green</td> <td></td> <td></td> </tr> <tr> <td><b>AHX034</b></td> <td>Black</td> <td></td> <td></td> </tr> <tr> <td><b>AHX041</b></td> <td>Red</td> <td>AR30F0R</td> <td>Oil-proof</td> </tr> <tr> <td><b>AHX042</b></td> <td>Green</td> <td></td> <td></td> </tr> <tr> <td><b>AHX043</b></td> <td>Black</td> <td></td> <td></td> </tr> <tr> <td><b>AHX157-R</b></td> <td>Red</td> <td>AR30B2R,</td> <td>Oil-proof</td> </tr> <tr> <td><b>AHX157-G</b></td> <td>Green</td> <td>B3R</td> <td></td> </tr> <tr> <td><b>AHX157-B</b></td> <td>Black</td> <td></td> <td></td> </tr> <tr> <td><b>AHX113-R</b></td> <td>Red</td> <td>AR30E0R</td> <td>Weather resistance</td> </tr> <tr> <td><b>AHX113-G</b></td> <td>Green</td> <td></td> <td></td> </tr> <tr> <td><b>AHX113-B</b></td> <td>Black</td> <td></td> <td></td> </tr> <tr> <td><b>AHX111-R</b></td> <td>Red</td> <td>AR30F0R</td> <td>Weather resistance</td> </tr> <tr> <td><b>AHX111-G</b></td> <td>Green</td> <td></td> <td></td> </tr> <tr> <td><b>AHX111-B</b></td> <td>Black</td> <td></td> <td></td> </tr> </tbody> </table>	Type	Color	Used with	Spec.	<b>AHX032</b>	Red	AR30E0R	Oil-proof	<b>AHX033</b>	Green			<b>AHX034</b>	Black			<b>AHX041</b>	Red	AR30F0R	Oil-proof	<b>AHX042</b>	Green			<b>AHX043</b>	Black			<b>AHX157-R</b>	Red	AR30B2R,	Oil-proof	<b>AHX157-G</b>	Green	B3R		<b>AHX157-B</b>	Black			<b>AHX113-R</b>	Red	AR30E0R	Weather resistance	<b>AHX113-G</b>	Green			<b>AHX113-B</b>	Black			<b>AHX111-R</b>	Red	AR30F0R	Weather resistance	<b>AHX111-G</b>	Green			<b>AHX111-B</b>	Black		
	Type	Color	Used with	Spec.																																																													
	<b>AHX032</b>	Red	AR30E0R	Oil-proof																																																													
	<b>AHX033</b>	Green																																																															
	<b>AHX034</b>	Black																																																															
	<b>AHX041</b>	Red	AR30F0R	Oil-proof																																																													
	<b>AHX042</b>	Green																																																															
	<b>AHX043</b>	Black																																																															
	<b>AHX157-R</b>	Red	AR30B2R,	Oil-proof																																																													
	<b>AHX157-G</b>	Green	B3R																																																														
	<b>AHX157-B</b>	Black																																																															
	<b>AHX113-R</b>	Red	AR30E0R	Weather resistance																																																													
	<b>AHX113-G</b>	Green																																																															
	<b>AHX113-B</b>	Black																																																															
	<b>AHX111-R</b>	Red	AR30F0R	Weather resistance																																																													
<b>AHX111-G</b>	Green																																																																
<b>AHX111-B</b>	Black																																																																
	SC-993																																																																
	AF89-772																																																																
<p>Dimensions, mm:</p> <p>AHX032 to 034, 041 to 043 AHX111, 113</p>  <p>AHX157</p>  <p>Used for sealing the operator from foreign debris such as dust, oil (oil-proof), and water (weather resistance) in environments where the unit is in contact with such elements.</p>																																																																	
Packing	<p><b>AR9Y730:</b> AR22 and DR22 (Rubber)</p> <p>Note: Except for joystick selector switches, buzzers</p> <p><b>AHX282:</b> AR30 and DR30 (Resin-standerd)</p> <p>Note: Except for DR30F4M, F4N, M4M, numerical indicators</p> <p><b>AHX149:</b> AR30 and DR30 (Rubber)</p> <p>Note: Except for DR30F4M, F4N, M4M, numerical indicators</p>																																																																
	AF94-462																																																																
	KK2-125A																																																																

Description	Type															
Terminal cover	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> <th>Dimensions, mm</th> </tr> </thead> <tbody> <tr> <td><b>AR9Y305</b></td> <td>Contact unit Lamp terminal Transformer unit *1</td> <td>18.4 x 29 x 8.4</td> </tr> <tr> <td><b>DR9Y320</b></td> <td>Pilot lights *2 (without transformer)</td> <td>ø22 x 5.8</td> </tr> <tr> <td><b>DR9Y321</b></td> <td>DR30F4M, F4N, M4M (without transformer)</td> <td>34 sq. x 8.7</td> </tr> </tbody> </table>	Type	Used with	Dimensions, mm	<b>AR9Y305</b>	Contact unit Lamp terminal Transformer unit *1	18.4 x 29 x 8.4	<b>DR9Y320</b>	Pilot lights *2 (without transformer)	ø22 x 5.8	<b>DR9Y321</b>	DR30F4M, F4N, M4M (without transformer)	34 sq. x 8.7			
	Type	Used with	Dimensions, mm													
<b>AR9Y305</b>	Contact unit Lamp terminal Transformer unit *1	18.4 x 29 x 8.4														
<b>DR9Y320</b>	Pilot lights *2 (without transformer)	ø22 x 5.8														
<b>DR9Y321</b>	DR30F4M, F4N, M4M (without transformer)	34 sq. x 8.7														
	AF94-466															
Terminal cover	<p>*1 Applicable up to 220V. *2 DR22D0L, E3L, K0L, F□M, E3M, E3N, E3P, DR30D0L, E3L, K0L</p> <p>The terminal cover is provided as standard with the applicable types listed above. (Except for joy stick selector switches, numerical indicators, pilot lights with resistors, contact block alone and lamp terminal alone)</p>															
		KK2-126A														
Terminal cover	<table border="1"> <thead> <tr> <th>Type</th> <th>Used with</th> <th>Dimensions, mm</th> </tr> </thead> <tbody> <tr> <td><b>AHX305</b></td> <td>Buzzers (without transformer)</td> <td>23.5 x 27.5 x 16</td> </tr> <tr> <td><b>AHX426</b></td> <td>DR30D1L (without transformer)</td> <td>27.5 x 31 x 8</td> </tr> <tr> <td><b>AHX376</b></td> <td>DR30D1L (with transformer) Buzzers (B0 type)</td> <td>13 x 29 x 6.5</td> </tr> <tr> <td></td> <td>With transformer * With short-body transformer With resistor unit</td> <td></td> </tr> </tbody> </table>	Type	Used with	Dimensions, mm	<b>AHX305</b>	Buzzers (without transformer)	23.5 x 27.5 x 16	<b>AHX426</b>	DR30D1L (without transformer)	27.5 x 31 x 8	<b>AHX376</b>	DR30D1L (with transformer) Buzzers (B0 type)	13 x 29 x 6.5		With transformer * With short-body transformer With resistor unit	
	Type	Used with	Dimensions, mm													
	<b>AHX305</b>	Buzzers (without transformer)	23.5 x 27.5 x 16													
	<b>AHX426</b>	DR30D1L (without transformer)	27.5 x 31 x 8													
	<b>AHX376</b>	DR30D1L (with transformer) Buzzers (B0 type)	13 x 29 x 6.5													
	With transformer * With short-body transformer With resistor unit															
	AHX305 SG-842															
	AHX426 AF92-339															
	AHX376 SG-5															
	* 230V and over															
	The terminal cover is provided as standard with the applicable types listed above.															

04


# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22 Special products



### Semi standard compliant guarding

#### ■ Features

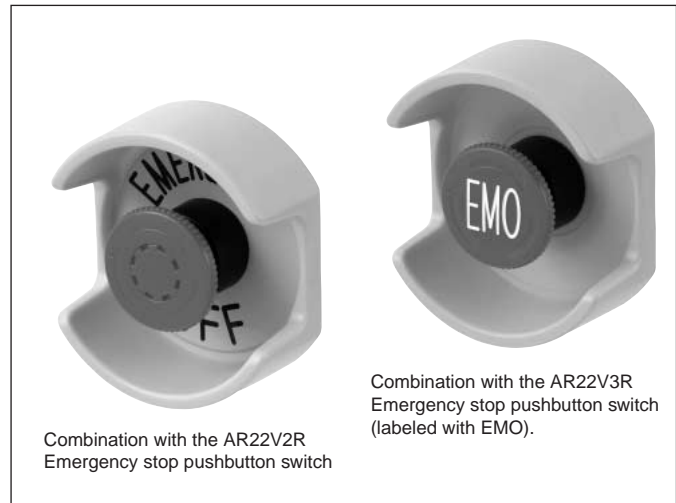
- Combine a guard ring with a Fuji electric emergency stop pushbutton switches to comply with SEMI (SEMI-S2, SEMATECH Application Guide for SEMI S2-93).
- EMERGENCY OFF legend plates are available.
- Emergency stop pushbutton switches labeled with "EMO" are available.



#### ■ Accessories

Description	Type	Color
 (KKD05-263)	<b>AR9R008</b>	Yellow
Legend plate for AR9R008 emergency off  (KKD05-262)	<b>AR9P721-5C</b>	Yellow (Black legend)


#### ■ Emergency stop pushbutton switches

Operator	Contact	Type	Color
 (KKD05-261)	1NC	<b>AR22V3R-01RZ286</b>	Red (White legend)
	1NO+1NC	<b>AR22V3R-11RZ286</b>	
	2NC	<b>AR22V3R-02RZ286</b>	
	1NO+2NC	<b>AR22V3R-12RZ286</b>	
	3NC	<b>AR22V3R-03RZ286</b>	
	1NO+3NC	<b>AR22V3R-13RZ286</b>	
	2NO+2NC	<b>AR22V3R-22RZ286</b>	
	4NC	<b>AR22V3R-04RZ286</b>	


Note : Contact arrangements indicated in the table can be supplied.

■ Dimensions, mm


● Guardring (AR9R008)

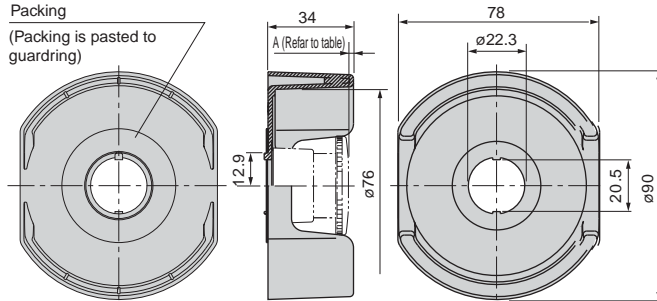

● Installation

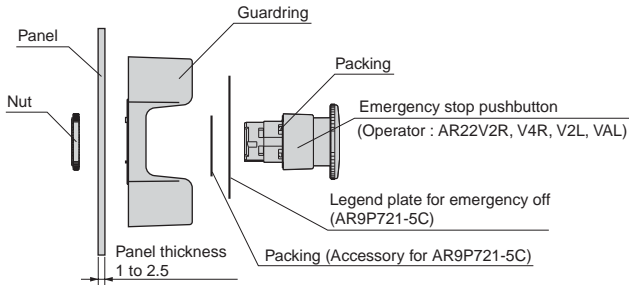

● Legend plate for emergency off (AR9P721-5C)

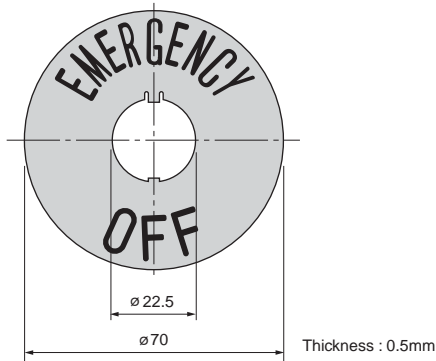

Note : • Engraving for marking letters is not available.  
• Letter height : 13mm

■ Notes on use

This guardring conform to SEMI standard. Please do not use it for the emergency stops other than Semiconductor manufacturing Equipment.


■ Applicable types

AR22V2R, V4R, V2L, VAL and V3R Z286


\* Dimension A (the height difference between the switch and guardring) depends on the emergency stop (Illuminated) pushbutton switch that is being used. Refer to the following table.

Type	Panel thickness	A (Reference)	
AR22V2R	1~2.5	2mm	With AR9P721-5C
AR22V4R	1~2.5	2mm	With AR9P721-5C
AR22V2L	1~2.5	2mm	With AR9P721-5C
AR22VAL	1~2.5	2mm	With AR9P721-5C
AR22V3R (Z286)	1~3.6	3mm	

● Panel cutout hole dimensions, mm

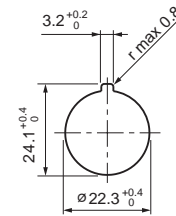

● Emergency stop pushbutton switches (AR22V3R-□□RZ286)

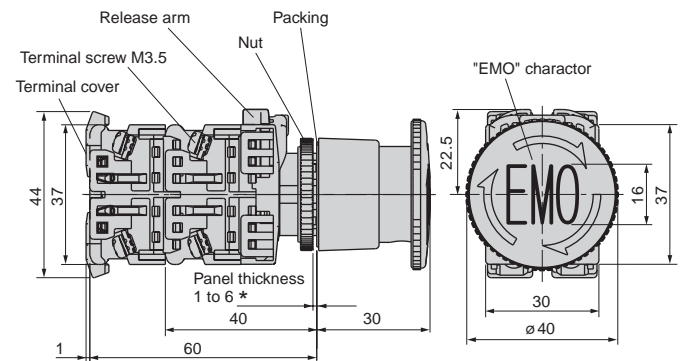

\* Without accessories

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22/DR22 and AR30/DR30

### Special products

#### Products equipped with contact protection cover

##### ■ Features

A silicon rubber cover is provided for the contact block to keep out foreign matter such as dust, etc.  
Other ratings and specifications are the same as those of the standard type.

##### ■ Type

AR22 □ Z8

AR30 □ Z8

Specify "Z8" at the end of the type number of the standard type.

##### ■ Dimensions

The only thing different from the standard product is the addition of a 1-mm thick silicon rubber cover around the contact block.

##### ■ Applicable types

Type	Contact arrangement	Remarks
• Pushbuttons *1	1NO+1NC,	For use with a 1-step contact
• Emergency stop pushbuttons *2	2NO*5, 2NC	
• Selectors *3	1NO+3NC, 2NO+2NC,	For use with a 2-step contact
	3NO+1NC, 4NO*5, 4NC	
• Illuminated pushbuttons *4 (without transformer)	1NO*6, 1NC	For use with a 1-step contact
• Emergency stop illuminated pushbuttons*2 (without transformer)	1NO+2NC, 2NO+1NC,	For use with a 2-step contact
• Illuminated selectors (without transformer)	3NO*6, 3NC	

Notes: \*1 Except for AR30B0R, B1R, B2R, B3R, N0R, and GPR.

\*2 Except for unibody (VG types)

\*3 Except for AR30HR

\*4 Except for AR30Q7L

\*5 Except for emergency stop pushbutton switch

\*6 Except for emergency stop illuminated pushbutton switch

#### Resisting water-soluble cutting oils and heat

##### ■ Features

Safer operation in environments exposed to water-miscible cutting fluids, machining oils, lubricating oils, cleaning oils and high humidity (up to 95%) is made possible by using materials that protect against rust and corrosion of components.  
Other ratings and specifications are the same as those of the standard type.

##### ■ Type

AR22 □ Z9, DR22 □ Z9

AR30 □ Z9, DR30 □ Z9

Specify "Z9" at the end of the type number of the standard type.

##### ■ Dimensions

Same as those of the standard type

##### ■ Applicable types

• AR22, DR22 series

AR 22 (Except for joy stick selectors, FAR, FBR, EAR, EBR types and VG types)

DR22 (Except for pilot lights with resistor unit and buzzers)

• AR30, DR30 series

AR30 (Except for Q7L, FAR, FBR, EAR, EBR, HR types and joy stick selectors)

DR30 (Except for D1L, F4M, F4N, M4M types, pilot lights with resistor/resistor unit and buzzers)

## Meeting IP2X finger protection standards

### ■ Features

Conforms to EN standard EN60204-1 (protecting against electric shock). The terminal has IEC60529 degree of protection; IP2X finger protection secured (a mock human finger used in testing did not come into contact with charged parts). The contact block and lamp terminal can be easily mounted or removed with the terminal cover mounted.

### ■ Type

AR22 □ ZB, DR22 □ ZB

AR30 □ ZB, DR30 □ ZB

Specify "ZB" at the end of the type number of the standard type.

### ■ Accessories

- Contact block (plus terminal cover)  
 NO contact: AR9B290-D  
 NC contact: AR9B291-D
- Transformer unit (plus terminal cover)  
 AR9T511-□ D

### ■ Ratings and specifications

- Protection degree: IP2X
- Terminal screw: M3.5  
 Wiring can be done with a solid wire or fork shaped crimp terminal.

Note: Ring-type crimp terminals cannot be used.

- Other ratings and specifications are the same as those of the standard type.


### ■ Applicable types

- AR22, DR22 series  
 AR22 (except for joy stick selectors)  
 DR22: Without transformer, with transformer (except for short-body types, buzzers and numerical indicators)
- AR30, DR30 series  
 AR30 (except for HR and joy stick selectors)  
 DR30: Without transformer, with transformer (except for D1L, F4M, F4N, M4M types and buzzers)


Note: The terminal of the standard type VG has IP2X protection.

## ■ Dimensions, mm


AR22/Pushbutton switches

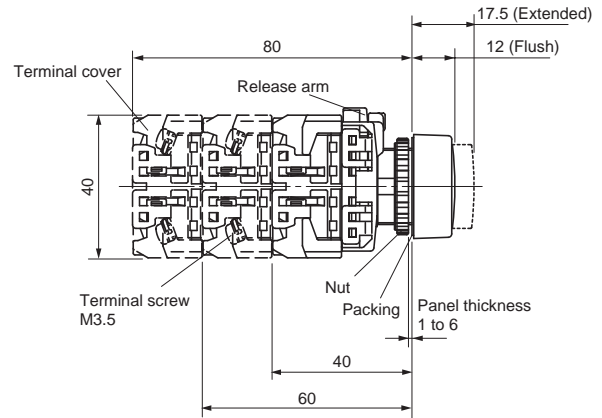

DR22/Without transformer

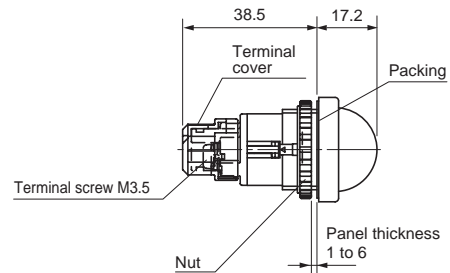

DR22/With transformer

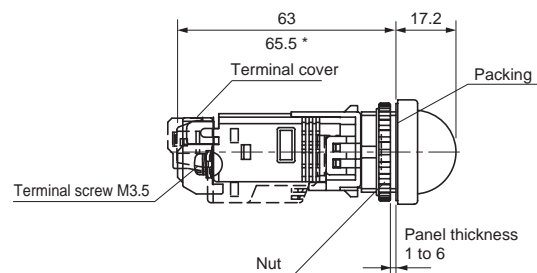

Note: \* Except for the types 110V AC, 127V AC and 220V AC.

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22/DR22 and AR30/DR30

### Special products

#### Metal nut (chrome plated) types

##### ■ Features

The nut is a metallic ring (chrome plated).  
Other ratings and specifications are the same as those of the standard model.

##### ■ Type

AR30  ZM

DR30  ZM

Specify "ZM" at the end of the type number of the standard type.

##### ■ Dimensions, mm

Same as those of the standard types.

##### ■ Applicable types


• AR30, DR30 series

AR30 (except for G4L, G9L, GSR\*1, GPR\*1, BOR\*1, and HR\*1 types)

DR30 with round bezel (except for IP54 buzzer type B8)\*2

Notes: \*1 Standard type is a metallic ring (chrome plated).

\*2 The nut of types DR30B0, B5 and B6 buzzers are resin (chrome plated).

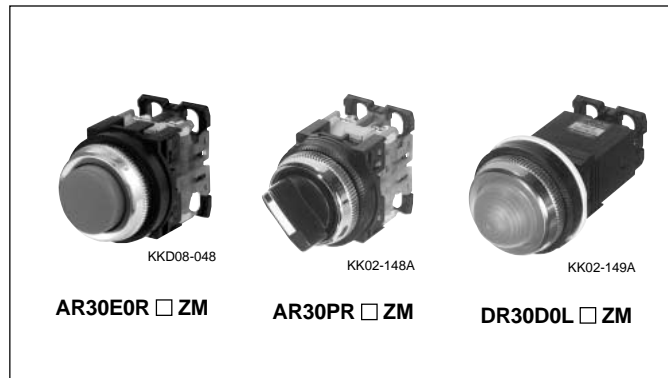

#### Resisting sulfuration gas

##### ■ Features

These products can be used in environments having a concentration of hydrogen sulfide gas of 0.5 ppm or less. The metallic parts have been subjected to an anti-corrosion treatment (see note).

The contacts of the AR series are gold plated.

Note: The body is made of resin and cannot be used with gases that affect resins (plastics).

##### ■ Type

AR22  Z4, DR22  Z4

AR30  Z4, DR30  Z4

Specify "Z4" at the end of the type number of the standard type.

##### ■ Notes on use

- This product is resistant to light corrosive gas exposure.
- Other measures, such as covering the entire switch with a box, and the degree of protection of the panel should be taken into consideration.

##### ■ Ratings and specifications

Hydrogen sulfide gas concentration of 0.5 ppm max.

Ambient storage temperature: 8 to 37°C

Humidity: 62 to 81%

Other ratings and specifications are the same as those of the standard type.

##### ■ Dimensions, mm

Same as those of the standard types.

##### ■ Applicable types

• AR22, DR22 series

AR22 (except for Joy stick selectors and VG type)

DR22 (except for pilot lights with resistor unit and buzzers)

• AR30, DR30 series

AR30 (except for HR and Joy stick selectors)

DR30 (except for F4M, F4N, M4M types, pilot lights with resistor/resistor unit and buzzers)

■ Mass, gram

● Illuminated pushbuttons

Type	Without transformer			With transformer *	
	1NO (1NC)	2NO (2NC) (1NO+1NC)	2NO+2NC	1NO (1NC)	2NO (2NC) (1NO+1NC)
AR22F0L	39	48	67	85	94
F5L	39	48	–	85	94
F0M, F0P	40	49	68	86	95
F5M, F5P	40	49	–	86	95
E0L	41	50	69	87	96
E5L	41	50	–	87	96
E0M, E0P, M4L, G1L, G2L, G4L	42	51	70	88	97
E5M, E5P, M9L, G6L, G7L, G9L	42	51	–	88	97
M4P	43	52	71	89	98
M0L	44	53	72	90	99
M5L	44	53	–	90	99
V5L	48	57	–	94	103

Note: \* 230V and over : +17grams

● Pushbuttons

Type	1NO (1NC)	2NO (2NC) (1NO+1NC)	2NO+2NC
AR22F0R, FAR, F5R, FBR	27	36	55
E0R, EAR, F0S, F0Y, G0R	28	37	56
E5R, EBR, F5S, F5Y, G5R			
E0S, E0Y, M4R, G2R	29	38	57
E5S, E5Y, M9R, G7R			
M0R, M5R	31	40	59
S1R, S2R, S3R, S6R	–	43	62
M3R, M8R	44	53	72
V5R	49	58	77

● Emergency stop pushbuttons

Type	1NC	2NC (1NO+1NC)	2NO+2NC
AR22VSR	34	43	62
V0R, V4R	36	45	64
Q2R	36	45	–
V2R	38	47	66
V7R	59	68	87
VGE	61	65	–

● Emergency stop illuminated pushbuttons

Type	Without transformer		With transformer *	
	1NC	2NC (1NO+1NC)	1NC	2NC (1NO+1NC)
AR22VSL, VDL	48	57	94	103
V0L	49	58	95	104
VAL	50	59	96	105
V2L	51	60	97	106
VGF	66	70	–	–

Note: \* 230V and over : +17grams

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR22 and DR22

### Mass

#### ■ Mass, gram

##### ● Pilot lights

Type	Without transformer		With transformer		With resistor unit
	Standard	Short-body	Standard *	Short-body	
DR22D0L, K0L	18	23	70	68	32
E3L, E3P, F3M, F4M	19	24	71	69	33
F5M	20	25	72	70	34
E3M	21	26	73	71	35
E3N	23	28	75	73	37

Note: \* 230V and over : +17grams

##### ● Selector switches

Type	1NO	2NO	2NO+2NC
	(1NC)	(2NC) (1NO+1NC)	
AR22PR	30	39	58
PCR	–	39	58
WR	31	40	59
WCR	–	40	59
RR, PY, WY	32	41	60
RCR, PCY, WCY	–	41	60
RY	33	42	61
RCY	–	42	61
JR, JAR	56	65	83
JCR	–	65	83
JY	57	66	84
JCY	–	66	84

##### ● Illuminated selector switches

Type	Without transformer			With transformer *	
	1NO	2NO	2NO+2NC	1NO	2NO
	(1NC)	(2NC) (1NO+1NC)		(1NC)	(2NC) (1NO+1NC)
AR22PL	42	51	70	88	97
PP	43	52	71	89	98

Note: \* 230V and over : +17grams

##### ● Joy stick selector switches

###### • Screw terminal types

Type	1NO x2	(1NO+1NC) x2	1NO x4	(1NO+1NC) x4
AR22A2N, A7N	89	99	116	136
A0N, A5N	99	109	126	146
A1N, A6N	112	122	139	159

###### • Solder/tab terminal types

Type	(1NO+1NC) x2	(2NO+2NC) x2	(1NO+1NC) x4	(2NO+2NC) x4
AR22A2H, A7H	72	75	82	88
A0H, A5H	82	85	92	98
A1H, A6H	95	98	105	111

##### ● Buzzers

Type	Without transformer	With transformer	With resistor unit
DR22B5	50	105	52
B8	53	108	55
B3	66	121	–

■ Mass, gram

● Illuminated pushbuttons

Type	Without transformer			With transformer *	
	1NO (1NC)	2NO (2NC) (1NO+1NC)	2NO+2NC	1NO (1NC)	2NO (2NC) (1NO+1NC)
AR30E0L	49	58	77	95	104
E5L	49	58	–	95	104
G4L	50	59	78	96	105
G9L	50	59	–	96	105
V5L	56	65	–	102	111
G2L	66	75	94	112	121
G7L	66	75	–	112	121
G3L	72	81	100	118	127
G8L	72	81	–	118	127
Q7L	–	159	–	–	205

Note: \* 230V and over : +17grams

● Pushbuttons

Type	1NO (1NC)	2NO (2NC) (1NO+1NC)	2NO+2NC
AR30F0R, FAR, F5R, FBR	36	45	64
E0R, EAR, G0R, E5R, EBR, G5R	37	46	65
M4R	38	47	66
M0R, M5R	40	49	68
V5R	42	51	70
S1R, S2R, S3R, S6R	–	53	72
FVR	54	63	82
G1R, G6R	59	68	87
N0R	96	105	124
GPR	116	125	144
GSR, B0R	123	132	151
M3R, M8R	126	135	154
B1R	241	250	269
B3R	279	288	307
B2R	291	300	319

● Emergency stop pushbuttons

Type	1NC	2NC (1NO+1NC)	2NO+2NC
AR30V0R	43	52	71
Q2R	45	54	–
V2R	46	55	74
V1R	60	69	88

● Emergency stop illuminated pushbuttons

Type	Without transformer		With transformer *	
	1NC	2NC (1NO+1NC)	1NC	2NC (1NO+1NC)
AR30V0L	57	66	103	112
V2L	59	68	105	114

Note: \* 230V and over : +17grams

# Pushbuttons/Selectors/Pilot Lights/Buzzers

## AR30 and DR30

### Mass

#### ■ Mass, gram

##### ● Pilot lights

• Without transformer type, With transformer type, With resistor unit type

Type	Without transformer Standard	With transformer Standard *1	Short-body	With resistor unit
DR30D0L, K0L	28	80	78	42
E3L	29	81	79	43
F4M *2	32 (30)	84 (82)	–	46
F4N *2	34 (30)	86 (82)	–	48
M4M *2	37 (32)	88 (84)	–	50
D1L	94	164	–	111

Notes: \*1 230V and over : +17grams

\*2 ( ): Incandescent lamp

• With resistor type

Type	50V DC	110V DC 220V DC
DR30D0L, K0L (LED)	103	103
D0L, K0L (incandescent )	107	179

##### ● Selector switches

Type	1NO (1NC)	2NO (2NC) (1NO+1NC)	2NO+2NC
AR30PR, WR	41	50	69
PCR, WCR	–	50	69
JR, JAR	67	76	94
JCR	–	76	94
HR	125	135	153(166)

Note: ( ): AR30HR-122

##### ● Illuminated selector switches

Type	Without transformer			With transformer *	
	1NO (1NC)	2NO (2NC) (1NO+1NC)	2NO+2NC	1NO (1NC)	2NO (2NC) (1NO+1NC)
AR30PL	52	61	80	98	107

Note: \* 230V and over : +17grams

##### ● Joy stick selector switches

• Screw terminal type

Type	1NO x2	(1NO+1NC) x2	1NO x4	(1NO+1NC) x4
AR30A2N, A7N	100	110	127	147
A0N, A5N	110	120	137	157
A1N, A6N	124	134	151	171

• Solder/tab terminal type

Type	(1NO+1NC) x2	(2NO+2NC) x2	(1NO+1NC) x4	(2NO+2NC) x4
AR30A2H, A7H	83	86	93	99
A0H, A5H	93	96	103	109
A1H, A6H	107	110	117	123

##### ● Buzzers

Type	Without transformer	With transformer	With resistor unit
DR30B5, B6	47	102	49 (Except B6)
B8	48	103	50
B0	86	–	–