



EASYFIT CONNECTOR FSC, FST, E-2000™



EASYFIT connectors are based on an assembling system, which is made possible by a two-component glue. Each connector is supplied preloaded with resin and a separate dose of primer.

The stripped fiber is first dipped into the dose of primer and then inserted into the connector, a few pumping and rotating motions mix the glue and then the connector is left for 5 minutes to cure. The connector is then processed conventionally.

Features

- Fast and user-friendly
- No power
- No heat
- No syringes
- No special tools needed


Dosing

Wetting the fiber by using a primer tube makes the assembly particularly easy. For bigger quantities, a package with 100 connectors including a bottle of primer is available.

Storing

6 months (-30°C to +25°C)

Available types

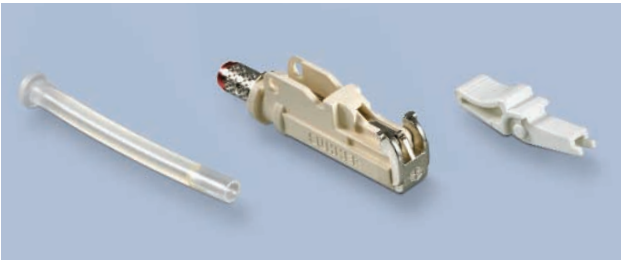

E-2000™ EASYFIT connector



FSC-CMAX EASYFIT connector



FST EASYFIT connector

EASYFIT CONNECTOR FSC, FST, E-2000™

Ordering information: FSC, FST, E-2000™

Connector type	Unit	For fiber type	Ferrule out of	Insertion loss [dB] (50% / 98%)	Type
FSC	1 connector/ 1 primer tube	G50/125 G62.5/125	Zirconia	<0.4 / <0.8	FSC-CMAX-B002
	100 connectors/ 1 primer bottle	G50/125 G62.5/125	Zirconia	<0.4 / <0.8	FSC-CMAX-B004
FSC Duplex	1 connector/ 2 primer tubes	G50/125 G62.5/125	Zirconia	<0.4 / <0.8	FSC-CMAX-B002-02
	100 connectors/ 2 primer bottles	G50/125 G62.5/125	Zirconia	<0.4 / <0.8	FSC-CMAX-B004-02
FST	1 connector/ 1 primer tube	G50/125 G62.5/125	Zirconia	<0.4 / <0.8	FST-LEAN-B005
	100 connectors/ 1 primer bottle	G50/125 G62.5/125	Zirconia	<0.4 / <0.8	FST-LEAN-B007
E-2000™	1 connector/ 1 primer tube	G50/125 G62.5/125	Zirconia	<0.2 / <0.5	FLSH-2000-B003
	25 connectors/ 25 primer tubes	G50/125 G62.5/125	Zirconia	<0.2 / <0.5	FLSH-2000-B006
	100 connectors/ 100 primer tubes	G50/125 G62.5/125	Zirconia	<0.2 / <0.5	FLSH-2000-B007

Ordering information: Crimpsets

Cable-Ø (mm)	A Type: flame retardant black	D-Type: UL94-V0 black
<1.0	009-BK-A001	
1.7 – 2.0 ¹⁾		
2.0 – 2.2	021-BK-A001	021-BK-D001
2.3 – 2.6	024-BK-A001	024-BK-D001
2.7 – 2.9	028-BK-A001	028-BK-D001
3.0 – 3.3	030-BK-A001	030-BK-D001
3.4 – 3.6	035-BK-A001	035-BK-D001

Ordering information: Additional primer

Ordering information	Type	
1 bottle	for 100 connectors	9801.50.H

